

# Installation Instructions

## 90+ 2-Stage & \*9MPT & \*9MPV


### Variable Speed

### Category IV Furnace

FAN ASSISTED,  
DIRECT OR NON-DIRECT VENT  
GAS FURNACE

\* Denotes Brands (C, H, T)

#### SAFETY REQUIREMENTS

Recognize safety information. This is the safety-alert symbol . When you see this symbol on the furnace and in instructions manuals be alert to the potential for personal injury.

Understand the signal words *DANGER*, *WARNING*, or *CAUTION*. These words are used with the safety-alert symbol. *DANGER* identifies the most serious hazards, those that **will** result in severe personal injury or death. *WARNING* signifies a hazard that **could** result in personal injury or death. *CAUTION* is used to identify unsafe practices that **may** result in minor personal injury or product and property damage. NOTE is used to highlight suggestions that will result in enhanced installation, reliability, or operation.

Installing and servicing heating equipment can be hazardous due to gas and electrical components. Only trained and qualified personnel should install, repair, or service heating equipment.

Untrained service personnel can perform basic maintenance functions such as cleaning and replacing air filters. All other operations must be performed by trained service personnel. When working on heating equipment, observe precautions in the literature, on tags, and on labels attached to or shipped with the unit and other safety precautions that may apply.

Follow all safety codes. In the United States, follow all safety codes including the current edition National Fuel Gas Code (NFGC) ANSI Z223.1-2002/NFPA No. 54-2002. In Canada, refer to the current edition of the National Standard of Canada Natural Gas and Propane Installation Code (NSCNGPIC) CSA B149.1-05. Wear safety glasses and work gloves. Have fire extinguisher available during start-up and adjustment procedures and service calls.

These instructions cover minimum requirements and conform to existing national standards and safety codes. In some instances, these instructions exceed certain local codes and ordinances, especially those that may not have kept up with changing residential construction practices. We require these instructions as a minimum for a safe installation.



**INSTALLER:** Affix these instructions on or adjacent to the furnace.

**CONSUMER:** Retain these instructions for future reference.

**International Comfort Products, LLC**  
Lewisburg, TN 37091

#### Table of Contents

1. Safe Installation Requirements .....	3	7. Electrical Wiring .....	36
2. Installation .....	4	8. Ductwork and Filter .....	38
3. Combustion & Ventilation Air .....	8	9. Checks and Adjustments .....	41
4. Vent & Combustion Air Piping .....	12	10. Furnace Maintenance .....	44
5. Concentric Vent Termination .....	30	11. Sequence of Operation & Diagnostics *9MPV .....	45
6. Gas Supply and Piping .....	33	12. Sequence of Operation & Diagnostics *9MPT .....	47
		Tech Support and Parts .....	49



#### **WARNING**

**ELECTRIC SHOCK HAZARD**  
Failure to follow safety warnings exactly could result in serious injury and/or death.  
Turn Off All Power Before Servicing.

#### **WARNING**

**CARBON MONOXIDE POISONING AND FIRE HAZARD.**  
Failure to follow safety warnings exactly could result in serious injury, death, and/or property damage.  
This furnace is not designed for use in mobile homes, trailers or recreational vehicles.

# START-UP CHECK SHEET

## For 90+ Furnace

(Keep this page for future reference)

Dealer Name: \_\_\_\_\_

Address: \_\_\_\_\_

Business Card Here

City, State(Province), Zip or Postal Code: \_\_\_\_\_

Phone: \_\_\_\_\_

Owner Name: \_\_\_\_\_

Address: \_\_\_\_\_

City, State(Province), Zip or Postal Code: \_\_\_\_\_

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Type of Gas: Natural:  LP:

Which blower speed tap is used?

High Fire \_\_\_\_\_ Low Fire \_\_\_\_\_ or (Cooling) \_\_\_\_\_

For variable speed models (\*9MPV), What dip switches are selected?

High Fire \_\_\_\_\_ Low Fire \_\_\_\_\_ or (Cooling) \_\_\_\_\_

Temperature of Supply Air: High Fire (°F) \_\_\_\_\_ or (°C) \_\_\_\_\_  
Low Fire (°F) \_\_\_\_\_ or (°C) \_\_\_\_\_

Temperature of Return Air: (°F) \_\_\_\_\_ or (°C) \_\_\_\_\_

Temp. Rise Hi Fire (Supply - Return): (°F) \_\_\_\_\_ or (°C) \_\_\_\_\_  
Lo Fire (Supply - Return): (°F) \_\_\_\_\_ or (°C) \_\_\_\_\_

Filter Type and Size: \_\_\_\_\_

Fan "Time ON" Setting: \_\_\_\_\_

Fan "Time OFF" Setting: \_\_\_\_\_

Dealer Comments: \_\_\_\_\_

Manual Gas Shut-Off Upstream

of Furnace/Drip-Leg? YES  NO

Condensate Drain Connected? YES  NO

Condensate Drain Trapped? YES  NO

Transition Pressure switch hose relocated for U/D/H

Application? YES  NO

Blower Speed Checked? YES  NO

All Electrical Connections Tight? YES  NO

Gas Valve turned ON? YES  NO

Measured Line Pressure When Firing Unit: \_\_\_\_\_

Calculated Firing Rate:(See *Checks and Adjustments* Section). (Lo) \_\_\_\_\_ & (Hi) \_\_\_\_\_

Temperature Rise (supply-return temperature):(°F) \_\_\_\_\_

Measured Manifold Gas Pressure: (Lo) \_\_\_\_\_ & (Hi) \_\_\_\_\_

Static Pressure (Ducts): Supply Air \_\_\_\_\_ Return \_\_\_\_\_

Date of Start-Up: \_\_\_\_\_

CO ? \_\_\_\_\_

CO2 ? \_\_\_\_\_

# 1. Safe Installation Requirements



## WARNING

### FIRE, EXPLOSION, AND ASPHYXIATING HAZARD

Improper adjustment, alteration, service, maintenance or installation could cause death, personal injury and/or property damage.

Installation or repairs made by unqualified persons could result in hazards to you and others. Installation **MUST** conform with local codes or, in the absence of local codes, with codes of all governmental authorities having jurisdiction.

The information contained in this manual is intended for use by a qualified service agency that is experienced in such work, is familiar with all precautions and safety procedures required in such work, and is equipped with the proper tools and test instruments.

**NOTE:** This furnace is design-certified by the CSA International (formerly AGA and CGA) for installation in the United States and Canada. Refer to the appropriate codes, along with this manual, for proper installation.

- Use only the Type of gas approved for this furnace (see **Rating Plate** on unit). Overfiring will result in failure of heat exchanger and cause dangerous operation. (Furnaces can be converted to L.P. gas with approved kit.)
  - Install this furnace only in a location and position as specified in “2. *Installation*” of these instructions.
  - Provide adequate combustion and ventilation air to the furnace as specified in “4. *Combustion and Ventilation Air*” of these instructions.
  - Combustion products must be discharged outdoors. Connect this furnace to an approved vent system only, as specified in “5. *Combustion and Ventilation Air*, 6. *Horizontal Venting* and 7. *Masonry Chimney Venting*” of these instructions.
  - Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections, as specified in “8. *Gas Supply and Piping, Final Check*” of these instructions.
  - Always install furnace to operate within the furnace’s intended temperature-rise range with a duct system which has an external static pressure within the allowable range, as specified in “*Technical Support Manual*” of these instructions. See furnace rating plate.
  - When a furnace is installed so that supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air shall also be handled by a duct(s) sealed to the furnace casing and terminating outside the space containing the furnace.
  - A gas-fired furnace for installation in a residential garage must be installed as specified in “2. *Installation Requirements*” of these instructions.
- This furnace is not to be used for temporary heating of buildings or structures under construction.
  - **This furnace is NOT approved for installation in mobile homes, trailers or recreation vehicles.**
  - Seal around supply and return air ducts.
  - Install correct filter type and size.
  - Unit **MUST** be installed so electrical components are protected from direct contact with water.

## Safety Rules

Your unit is built to provide many years of safe and dependable service providing it is properly installed and maintained. However, abuse and/or improper use can shorten the life of the unit and create hazards for you, the owner.

- A. The U.S. Consumer Product Safety Commission encourages installation of carbon monoxide alarms. There can be various sources of carbon monoxide in a building or dwelling. The sources could be gas-fired clothes dryers, gas cooking stoves, water heaters, furnaces, gas-fired fireplaces, wood fireplaces.

Carbon monoxide can cause serious bodily injury and/or death. Carbon monoxide or “CO” is a colorless and odorless gas produced when fuel is not burned completely or when the flame does not receive sufficient oxygen.

Therefore, to help alert people of potentially dangerous carbon monoxide levels, you should have a commercially available carbon monoxide alarm that is listed by a nationally recognized testing agency in accordance with Underwriters Laboratories Inc. Standard for Single and Multiple Station Carbon Monoxide Alarms, ANSI/UL 2034 or the CSA 6.19-01 Residential Carbon Alarming Devices installed and maintained in the building or dwelling concurrently with the gas-fired furnace installation (see Note below). The alarm should be installed as recommended by the alarm manufacturer’s installation instructions.

- B. There can be numerous sources of fire or smoke in a building or dwelling. Fire or smoke can cause serious bodily injury, death, and/or property damage. Therefore, in order to alert people of potentially dangerous fire or smoke, you should have fire extinguisher and smoke alarms listed by Underwriters Laboratories installed and maintained in the building or dwelling (see Note below).

**Note:** The manufacturer of your furnace does not test any alarms and makes no representations regarding any brand or type of alarms.

- C. To ensure safe and efficient operation of your unit, you should do the following:

1. **Thoroughly read this manual and labels on the unit.** This will help you understand how your unit operates and the hazards involved with gas and electricity.
2. **Do not use this unit if any part has been under water.** Immediately call a qualified service technician to inspect the unit and to replace any part of the control system and any gas control which has been under water.
3. **Never obstruct the vent grilles, or any ducts that provide air to the unit.** Air must be provided for proper combustion and ventilation of flue gases.

## Frozen Water Pipe Hazard



### CAUTION

#### WATER DAMAGE TO PROPERTY HAZARD

Failure to protect against the risk of freezing may result in property damage.

Do not leave your home unattended for long periods during freezing weather without turning off water supply and draining water pipes or otherwise protecting against the risk of frozen pipes and resultant damage.

Your furnace is designed solely to provide a safe and comfortable living environment. The furnace is NOT designed to ensure that water pipes will not freeze. It is equipped with several safety devices that are designed to turn the furnace off and prevent it from restarting in the event of various potentially unsafe conditions.

If your furnace remains off for an extended time, the pipes in your home could freeze and burst, resulting in serious water damage.

If the structure will be unattended during cold weather you should take these precautions.

1. Turn off the water supply to the structure and drain the water lines if possible and add an antifreeze for potable water to drain traps and toilet tanks. Open faucets in appropriate areas.

–or–

2. Have someone check the structure frequently during cold weather to make sure it is warm enough to prevent pipes from freezing. Instruct them on a service agency to call to provide service, if required.

–or–

3. Install a reliable remote sensing device that will notify somebody of freezing conditions within the home.

## Winter Shutdown

If you go away during the winter months and do not leave the heat on in your home, the plastic transition box and the condensate trap on the furnace must be protected from freeze damage. (See **Figure 10** through **Figure 19**)

1. Disconnect the  $\frac{5}{8}$ " OD rubber hose from the vent drain fitting that is located downstream of the combustion blower. Insert a funnel into the hose and pour four(4) ounces of sanitary type (RV) antifreeze into the condensate trap. Reconnect the  $\frac{5}{8}$ " OD rubber hose to the stub on the vent drain fitting. Secure with the hose clamp.
2. Disconnect the  $\frac{3}{4}$ " OD rubber hose from the condensate trap. Insert a funnel into the hose and pour four(4) ounces of sanitary type (RV) antifreeze into the plastic Transition box. Squeeze the hose together near the end and quickly reconnect the  $\frac{3}{4}$ " OD rubber hose to the stub on the condensate trap. Secure with the hose clamp.

When you return home, your furnace will be ready to start, as it is not necessary to drain the antifreeze from the furnace.

## 2. Installation



### WARNING

#### CARBON MONOXIDE POISONING HAZARD

Failure to properly vent this furnace or other appliances could result in death or personal injury.

This furnace can NOT be common vented or connected to any type B, BW or L vent or vent connector, nor to any portion of a factory-built or masonry chimney. If this furnace is replacing a previously common-vented furnace, it may be necessary to resize the existing vent and chimney to prevent oversizing problems for the other remaining appliance(s). See *Venting and Combustion Air Check* in the 5. *Combustion & Ventilation Air* section. This furnace MUST be vented to the outside.

## Installation Positions

This furnace can be installed in an upflow, horizontal (either left or right) or downflow airflow position. DO NOT install this furnace on its back. For the upflow position, the return air ductwork can be attached to either the left or right side panel and/or the bottom. For horizontal and downflow positions, the return air ductwork must be attached to the bottom. The return air ductwork must **never** be attached to the back of the furnace.

## Location and Clearances

1. Refer to **Figure 1** or **Figure 2** for typical installation and basic connecting parts required. Refer to **Figure 3** for typical horizontal direct vent installation and basic connecting parts required. Supply and return air plenums and duct are also required.
2. If furnace is a replacement, it is usually best to install the furnace where the old one was. Choose the location or evaluate the existing location based upon the minimum clearance and furnace dimensions (**Figure 4**).




### CAUTION

#### FROZEN AND BURST WATER PIPE HAZARD


Failure to protect against the risk of freezing may result in property damage.

Special precautions MUST be made if installing furnace in an area which may drop below freezing. This can cause improper operation or damage to equipment. If furnace environment has the potential of freezing, the drain trap and drainline must be protected. The use of electric heat tape or RV antifreeze is recommended for these installations. (See "*Condensate Trap Freeze Protection Section*")

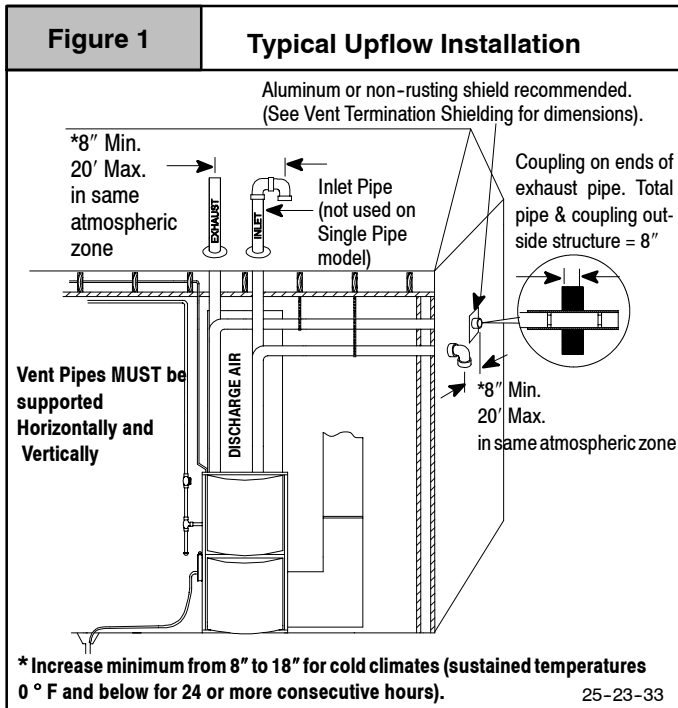

4. Install the vent pipes as short as practical, and in accordance to these instructions. (See **Vent and Combustion Air Piping** section).
5. Maintain clearance for fire safety and servicing. A front clearance of 24" is required for access to the burner, controls and filter. See clearance requirements in **Figure 4**.
6. Use a raised base for upflow furnace if the floor is damp or wet at times.
7. For downflow installations, non combustible subbase must be used under the furnace unless installation is on a non combustible floor surface. This requirement applies even when a coil box or cabinet is used.
8. For horizontal installations, line contact is permissible only between lines formed by intersection of back and two sides of furnace jacket, and building joists, studs or framing.
9. Residential garage installations require:
  - Burners and ignition sources installed at least 18" above the floor.
  - Located or physically protected from possible damage by a vehicle.
10. Local codes may require a drain pan under the entire furnace and condensate trap when the furnace is installed in attic application.

This furnace may be used for construction heat provided that all the following conditions are met:

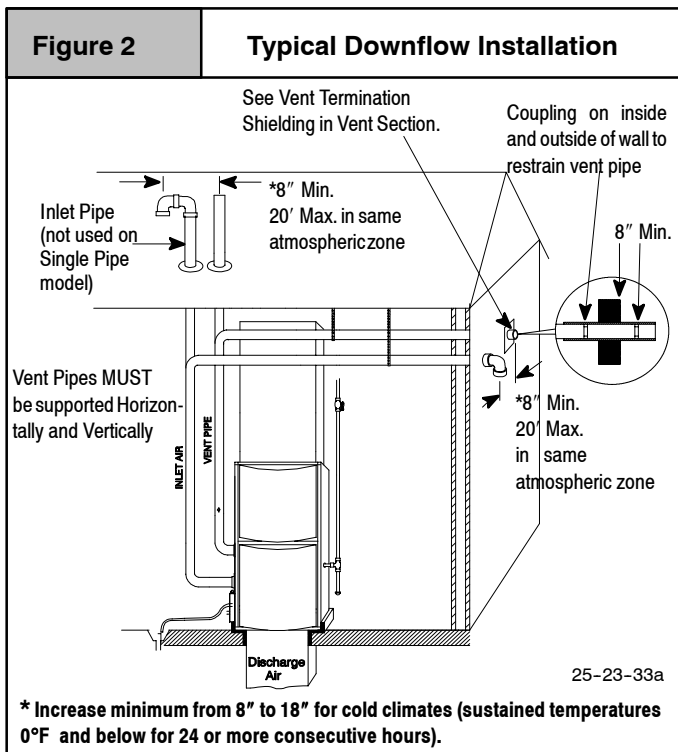

- The furnace is permanently installed with all electrical wiring, piping, venting and ducting installed according to these installation instructions. A return air duct is provided, sealed to the furnace casing, and terminated outside the space containing the furnace. This prevents a negative pressure condition as created by the circulating air blower, causing a flame rollout and/or drawing combustion products into the structure.
- The furnace is controlled by a thermostat. It may not be "hot wired" to provide heat continuously to the structure without thermostatic control.
- Clean outside air is provided for combustion. This is to minimize the corrosive effects of adhesives, sealers and other construction materials. It also prevents the entrainment of drywall dust into combustion air, which can cause fouling and plugging of furnace components.
- The temperature of the return air to the furnace is maintained between 55° F (13° C) and 80° F (27° C) , with no evening setback or shutdown. The use of the furnace while the structure is under construction is deemed to be intermittent operation per our installation instructions.
- The air temperature rise is within the rated rise range on the furnace rating plate, and the firing rate has been set to the rating plate value.
- The filters used to clean the circulating air during the construction process must be either changed or thoroughly cleaned prior to occupancy.
- The furnace, ductwork and filters are cleaned as necessary to remove drywall dust and construction debris from all HVAC system components after construction is completed.
- After construction is complete, verify furnace operating conditions including ignition, input rate, temperature rise and venting according to these instructions.

## Installation Requirements

1. Install furnace level.
2. This furnace is **NOT** to be used for temporary heat of buildings or structures under construction.
3. Install furnace as centralized as practical with respect to the heat distribution system.



# WARNING

## CARBON MONOXIDE POISONING HAZARD.

Failure to follow this warning could result in death or personal injury.

Do NOT operate furnace in a corrosive atmosphere containing chlorine, fluorine or any other damaging chemicals, which could shorten furnace life.

Refer to 3. *Combustion & Ventilation Air* section, *Contaminated Combustion Air* for combustion air evaluation and remedy.

## Furnace Installation Considerations

The installation of the furnace for a given application will dictate the position of the furnace, the airflow, ductwork connections, vent and combustion air piping. Consideration must be given to the following:

### Condensate Trap and Drain Lines

The supplied condensate trap must be attached to the furnace side panel on either the left or right side. For horizontal installations, the drain trap is vertically attached to the side panel below the furnace. A minimum clearance of 6" below the furnace is required for the condensate trap. Downward slope of the condensate drain line from the condensate trap to the drain location must be provided. Adequate freeze protection of the drain trap and the drain line must be provided. See "Condensate Drain Trap" section for further details.

### Leveling

Proper leveling of the furnace must be provided to insure proper drainage of the condensate from the furnace. The furnace must be level to within 1/4" from front to back and from side to side for upflow and downflow installations or top to bottom for horizontal installations.

### Vent and Combustion Air Connections

On the Dual Certified furnace, the vent and combustion air pipes attach to the furnace through the top panel for the upflow and horizontal installations. For the downflow installation, the vent and combustion air pipes attach to the furnace through the alternate locations on the furnace side panels.

Note: On the Direct Vent furnace, the vent pipe attaches to the furnace through the side panels. The combustion air pipe attaches to the top panel or to the alternate location on the side panel.


On the Single Pipe furnace, the vent pipe attaches to the furnace through the furnace side panels.

Note: Repositioning of the combustion blower is required for the vent pipe connection to the furnace through the "right side" panel. See "Vent and Combustion Air Piping" section for further details.

## Horizontal Furnace Installation

Figure 3

Typical Horizontal Installation

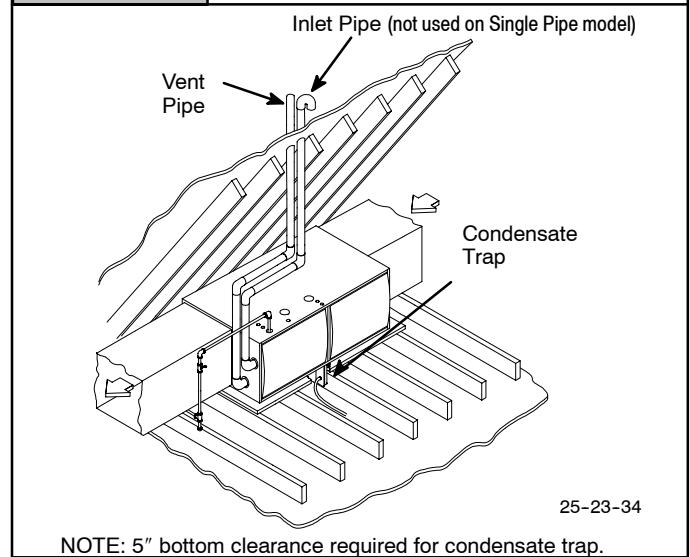

This furnace can be installed horizontally in an attic, basement, crawl space, alcove, or suspended from a ceiling in a basement or utility room (See **Figure 3**). **Do not** install furnace on its back or in the reverse airflow positions as safety control operation will be adversely affected.

If the furnace is to be suspended from the floor joists in a crawl space or the rafters in an attic, it is necessary to use steel pipe straps or an angle iron frame to rigidly attach the furnace to prevent movement. These straps should be attached to the furnace with sheet metal screws and to the rafters or joists with bolts. The preferred method is to use an angle iron frame bolted to the rafters or joists. (Take caution to allow door panels to be removed for maintenance)

If the furnace is to be installed in a crawl space, consult local codes. A suitable concrete pad or blocks are recommended for crawl space installation on the ground.

NOTE: 6" bottom clearance required for condensate trap.

Twenty four (24) inches between the front of the furnace and adjacent construction or other appliances **MUST** be maintained for service clearance. (Thirty (30) inches is required to remove furnace).

Keep all insulating materials clear from louvered door. Insulating materials may be combustible.


The horizontal furnaces may be installed directly on combustible wood flooring or supports as long as all required furnace clearances are met. See **Figure 3**.

This furnace **MUST NOT** be installed directly on carpeting or tile or other combustible material other than wood flooring or supports.

For horizontal installation over a finished living space. A field fabricated auxiliary drain pan with drain pipe is required to prevent damage by overflow due to blocked condensate drain.

Figure 4

Dimensions and Clearances

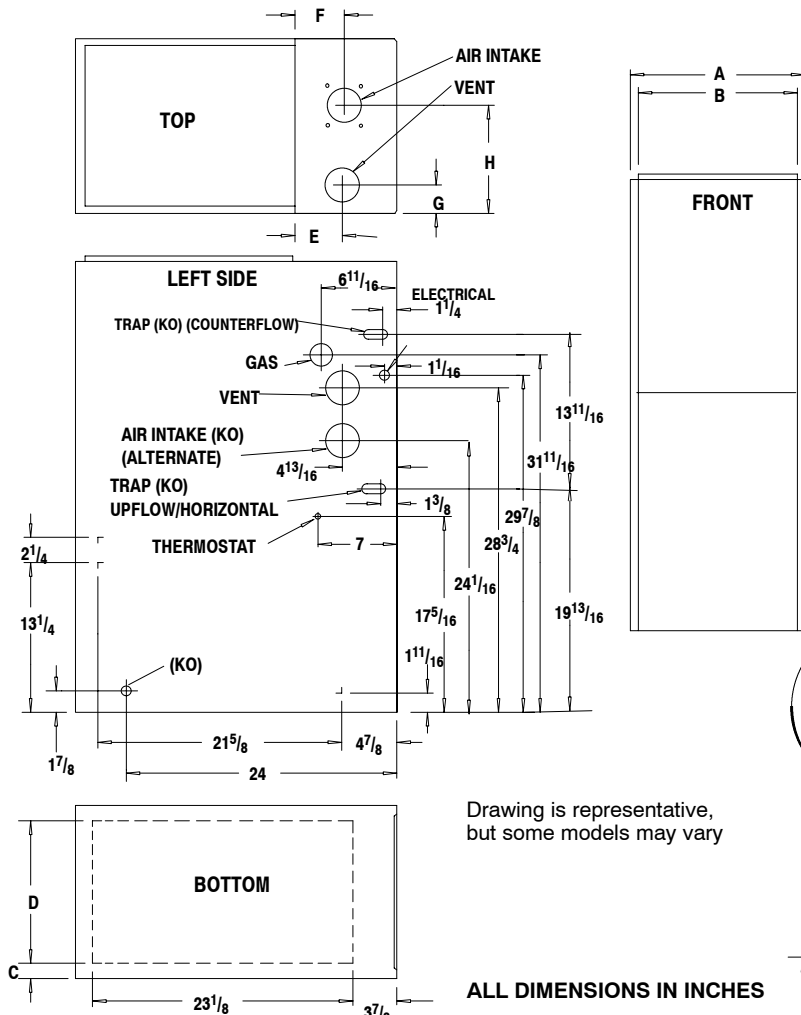


MINIMUM CLEARANCES TO COMBUSTIBLE MATERIALS FOR ALL UNITS	
REAR	0
FRONT (combustion air openings in furnace and in structure)	3"
Required For Service	*24"
ALL SIDES OF SUPPLY PLENUM	1"
SIDES	0
VENT	0
TOP OF FURNACE	1"

\*30" clearance recommended for furnace removal.

Horizontal position: Line contact is permissible only between lines formed by intersections of top and two sides of furnace jacket, and building joists, studs or framing.

**NOTE:** Evaporator "A" coil drain pan dimensions may vary from furnace duct opening size. Always consult evaporator specifications for duct size requirements.

Furnace is designed for bottom return or side return. Return air through back of furnace is NOT allowed.

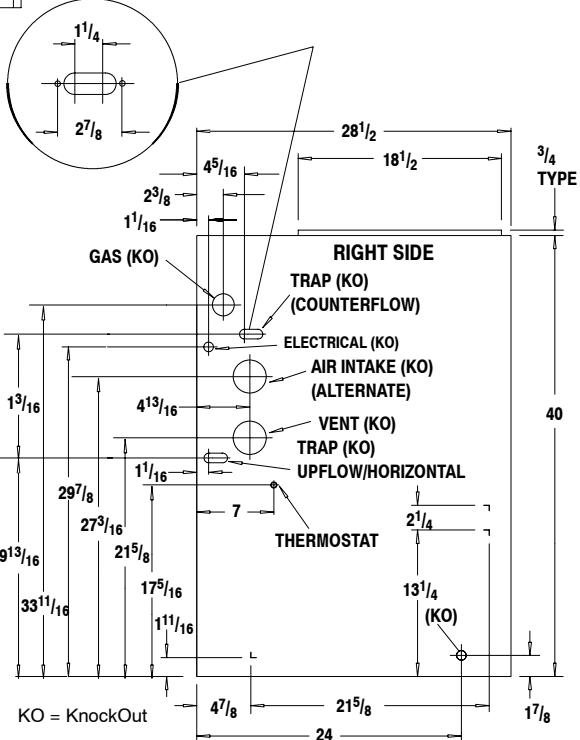

Unit Capacity	Cabinet		Bottom		Top			
	A	B	C	D	E	F	G	H
*9MPT050F12	19 1/8	17 5/8	2 1/8	14 3/4	4 3/8	4 1/2	2 1/2	9 1/2
*9MPT075F14	19 1/8	17 5/8	2 1/8	14 3/4	4 3/8	4 1/2	2 1/2	9 1/2
*9MPT100J16	22 3/4	21 1/4	1 15/16	18 3/4	4 3/8	4 1/2	2 5/8	11 3/8
*9MPT125L20	24 1/2	23	7/16	23	4 3/8	4 1/2	2 1/4	12 1/4
*9MPV050F12	19 1/8	17 5/8	2 1/8	14 3/4	4 3/8	4 1/2	2 1/2	9 1/2
*9MPV075F12	19 1/8	17 5/8	2 1/8	14 3/4	4 3/8	4 1/2	2 1/2	9 1/2
*9MPV100J20	22 3/4	21 1/4	1 15/16	18 3/4	4 3/8	4 1/2	2 5/8	11 3/8
*9MPV125L20	24 1/2	23	7/16	23	4 3/8	4 1/2	2 1/4	12 1/4

\* Denotes Brand

25-23-36b

Knock Outs

CAUTION

**CUT HAZARD**


Failure to follow this caution may result in personal injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate clothing, safety glasses and gloves when handling parts and servicing furnaces.

Use a hammer and screwdriver to strike a sharp blow (see **Figure 5**) directly to the knockout tie points or use a hammer in the upper left corner of the desired knockout. Remove any burrs and sharp edges.

Figure 5

### Hammer and Screwdriver Used for Knockout

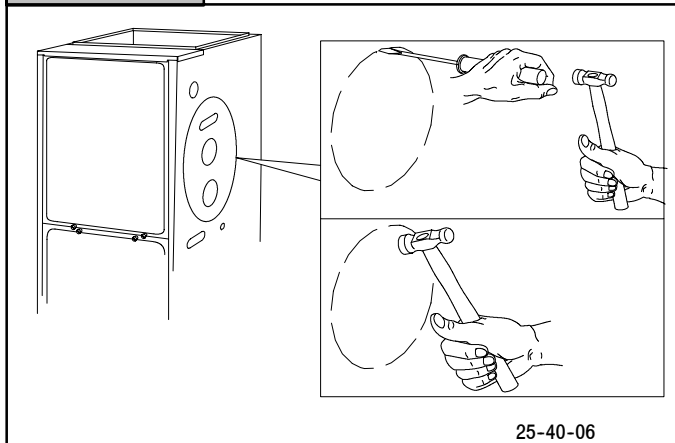

25-40-06

**NOTE:** If a knockout does not come out after two sharp blows, pull and snip as needed to remove the knockout.

## 3. Combustion & Ventilation Air

### For Single Pipe Installation (Non-Direct Vent)

#### **WARNING**

##### **CARBON MONOXIDE POISONING HAZARD**

Failure to provide adequate combustion and ventilation air could result in death or personal injury.

Use methods described here to provide combustion and ventilation air.

Furnaces require ventilation openings to provide sufficient air for proper combustion and ventilation of flue gases. All duct or openings for supplying combustion and ventilation air must comply with National Fuel Gas Code, NFPA54/ANSI Z223.1, 2002 (or current edition) and applicable provisions of local building codes.

- Section 8.3, Air for Combustion and Ventilation, of the National Fuel Gas Code, National Fuel Gas Code (NFGC), ANSI Z223.1-2002/NFPA 54-2002 in the U.S.,
- Sections 7.2, 7.3, 7.5, 7.6, 7.7, and 7.8 of National Standard of Canada, Natural Gas and Propane Installation Code (NSCNGPIC), CSA B149.1-05 in Canada,
- Applicable provisions of the local building code.

This furnace can NOT be common vented or connected to any type B, BW or L vent or vent connector, nor to any portion of a factory-built or masonry chimney. Multistory venting is NOT permitted. If this furnace is replacing a previously common-vented furnace, it may be necessary to resize the existing vent and chimney to prevent oversizing problems for the other remaining appliance(s). See "Venting and Combustion Air Check" in this section. This furnace MUST be vented to the outside.

When the installation is complete, check that all appliances have adequate combustion air and are venting properly. See *Venting And Combustion Air Check* in "5. Gas Vent Installation" Section in this manual.

### Outdoor Combustion Air Method

A space having less than 50 cubic feet per 1,000 BTUH input rating for all gas appliances installed in the space requires outdoor air for combustion and ventilation.

### Air Openings and Connecting Ducts

- Total input rating for all non direct vent gas appliances **MUST** be considered when determining free area of openings.
- Connect ducts or openings directly to outside.
- When screens are used to cover openings, they **MUST** be no less than  $\frac{1}{4}$ " mesh.
- The minimum dimension of rectangular air ducts **MUST NOT** be less than 3".
- When sizing grille or louver, use the free area of opening. If free area is **NOT** stamped or marked on grill or louver, assume a 20% free area for wood and 60% for metal.

### Confined Space Installation

**NOTE:** A confined space is defined as an area with less than 50 cubic feet per 1,000 BTUH input rating for all gas appliances installed in the area.

### Requirements


- Provide confined space with sufficient air for proper combustion and ventilation of flue gases using horizontal or vertical ducts or openings.
- Figure 6** illustrate how to provide combustion and ventilation air. A minimum of two permanent openings, one inlet and one outlet, are required.
  - One opening **MUST** commence within 12" of the floor and the second opening **MUST** commence within 12" of the ceiling.
  - Size openings and ducts per **Table 1**.
  - Horizontal duct openings require 1 square inch of free area per 2,000 BTUH (1,100 mm<sup>2</sup>/kW) of combined input for all gas appliances in the space (see **Table 1**).
  - Vertical duct openings or openings directly communicating with the outdoors require 1 square inch of free area per 4,000 BTUH (550 mm<sup>2</sup>/kW) for combined input of all gas appliances in the space (see **Table 1**).



Figure 6

Outside Air (This is ONLY a guide. Subject to codes of country having jurisdiction.)

This installation NOT approved in Canada

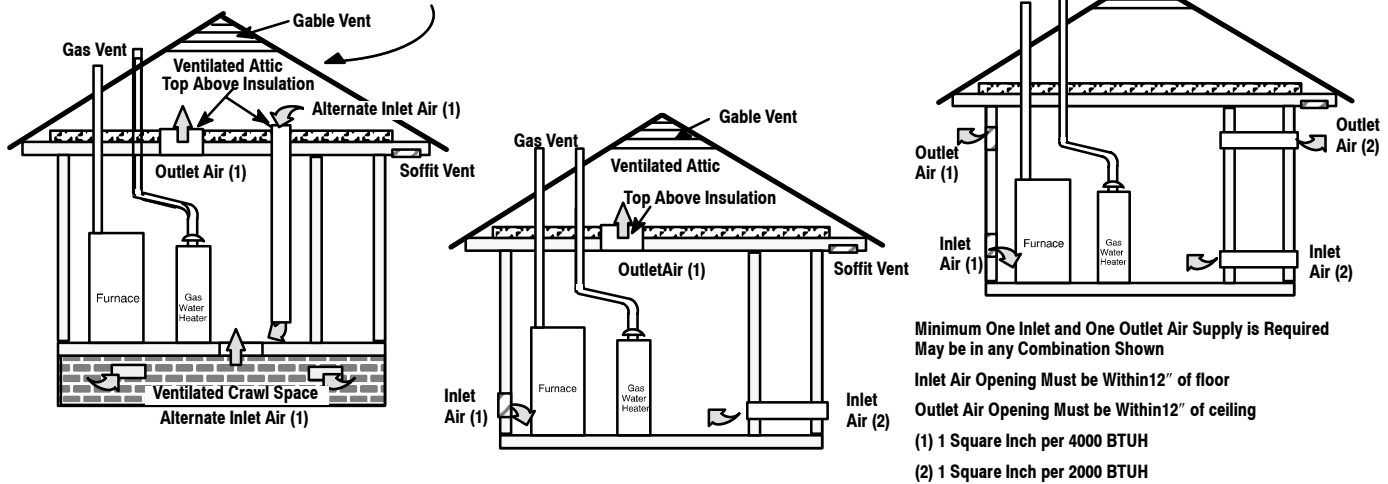

3. One opening **MUST** be within 12" of the floor and the second opening within 12" of the ceiling.
  - a. 1 sq. in of free area per 3,000 BTUH (700 mm<sup>2</sup>/kW) for combined input of all gas appliances in the space (see **Table 1**) and
  - b. not less than the sum of the areas of all vent connectors in the space.
4. Size openings and ducts per **Table 1**.
  - a. Indoor openings that comply with the **Indoor Combustion Air Method** below and
  - b. Outdoor openings located as required in the **Outdoor Combustion Air Method** above and
  - c. Outdoor openings sized as follows.
    - 1) Calculate the **Ratio** of all Indoor Space volume divided by required volume for **Indoor Combustion Air Method**.
    - 2) Outdoor opening size reduction **Factor** is 1 minus the **Ratio** in 1) above.
    - 3) Minimum size of Outdoor openings shall be the size required in **Outdoor Combustion Air Method** above multiplied by reduction **Factor**.
5. Horizontal duct openings require 1 square inch of free area per 2,000 BTUH of combined input for all gas appliances in area (see **Table 1**).
6. Vertical duct openings or openings directly to outside require 1 square inch of free area per 4,000 BTUH for combined input of all gas appliances in area (see **Table 1**).

Table 1		Free Area			
BTUH Input Rating	Minimum Free Area Required for Each Opening or Duct to Outdoors				
	Two Horizontal Ducts (sq. in./2,000 BTUH)	Single Opening (sq. in./3,000 BTUH)	Two Vertical Ducts or Openings (sq. in./4,000 BTUH)	Rd Duct (sq. in./4,000 BTUH)	
50,000	25 sq. in.	16.7 sq. in.	12.5 sq. in.	4"	
75,000	37.5 sq. in.	25 sq. in.	18.75 sq. in.	5"	
100,000	50 sq. in.	33.3 sq. in.	25 sq. in.	6"	
125,000	62.50 sq. in.	41.7 sq. in.	31.25 sq. in.	7"	

**EXAMPLE:** Determining Free Area

Furnace	Water Heater	Total Input		
100,000	30,000	=	(130,000 ÷ 4,000)	= 32.5 Sq. In. Vertical
Furnace	Water Heater	Total Input		
100,000	30,000	=	(130,000 ÷ 2,000)	= 65 Sq. In. Horizontal

## Unconfined Space Installation

**⚠ WARNING**

**CARBON MONOXIDE POISONING HAZARD**

Failure to supply additional air by means of ventilation grilles or ducts could result in death or personal injury.

An unconfined space or homes with tight construction may not have adequate air infiltration for proper combustion and ventilation of flue gases.

Most homes will require additional air.

An unconfined space is defined as an area having a minimum volume of 50 cubic feet per 1,000 Btuh total input rating for all gas appliances in area. Refer to **Table 2** for minimum area required.

Table 2	MINIMUM SPACE VOLUME FOR 100% COMBUSTION AND VENTILATION AIR FROM INDOORS (ft <sup>3</sup> )							
	Other Than Fan-Assisted Total (1,000's Btuh)			Fan-assisted Total (1,000's Btuh)				
ACH	30	40	50	50	75	100	125	
0.60	1,050	1,400	1,750	1,250	1,875	2,500	3,125	
0.50	1,260	1,680	2,100	1,500	2,250	3,000	3,750	
0.40	1,575	2,100	2,625	1,875	2,813	3,750	4,688	
0.30	2,100	2,800	3,500	2,500	3,750	5,000	6,250	
0.20	3,150	4,200	5,250	3,750	5,625	7,500	9,375	
0.10	6,300	8,400	10,500	7,500	11,250	15,000	18,750	
0.00	NP	NP	NP	NP	NP	NP	NP	

NP = Not Permitted

**Table 2** Minimum Space Volumes were determined by using the following equations from the National Fuel Gas Code ANSI Z223.1/NFPA 54-2002, 8.3.3.2:

1. For **other than fan-assisted appliances** such as a draft hood-equipped water heater,

$$\text{Volume}_{\text{other}} = \frac{21 \text{ ft}^3}{\text{ACH}} \left( \frac{I_{\text{other}}}{1000 \text{ Btu/hr}} \right)$$

2. For **fan-assisted appliances** such as this furnace,

$$\text{Volume}_{\text{fan}} = \frac{15 \text{ ft}^3}{\text{ACH}} \left( \frac{I_{\text{fan}}}{1000 \text{ Btu/hr}} \right)$$

If:

$I_{\text{other}}$  = combined input of all **other than fan-assisted appliances** in Btu/hr

$I_{\text{fan}}$  = combined input of all **fan-assisted appliances** in Btu/hr

**ACH** = air changes per hour (ACH shall not exceed 0.60.)

The following requirements apply to the **Standard Method** and to the **Known Air Infiltration Rate Method**.

- Adjoining rooms can be considered part of a space, if there are no closable doors between rooms.
- An attic or crawl space may be considered a space that freely communicates with the outdoors provided there are adequate ventilation openings directly to outdoors. Openings **MUST** remain open and **NOT** have any means of being closed off. Ventilation openings to outdoors **MUST** be at least 1 square inch of free area per 4,000 BTUH of total input rating for all gas appliances in the space.
- Combining spaces on the same floor level. Each opening shall have a free area of at least 1" 2/1,000 BTUH (2,000 mm<sup>2</sup>/kW) of the total input rating of all gas appliances in the space, but not less than 100 in<sup>2</sup> (0.06 m<sup>2</sup>). Once opening

shall commence within 12" (300 mm) of the ceiling and the second opening shall commence within 12" (300 mm) of the floor. The minimum dimension of air openings shall be at least 3" (80 mm).

- Combining spaces on different floor levels. The volumes of spaces on different floor levels shall be considered communicating spaces if connected by one or more permanent openings in doors or floors having a free area of at least 2" 2/1,000 Btuh (4,400 mm<sup>2</sup>/kW) of total input rating of all gas appliances.
- In spaces that use the **Indoor Combustion Air Method**, infiltration should be adequate to provide air for combustion, ventilation and dilution of flue gases. However, in buildings with unusually tight construction, additional air **MUST** be provided using the methods described in section titled **Outdoor Combustion Air Method**:
- Unusually tight construction is defined as Construction with
  1. Walls and ceilings exposed to the outdoors have a continuous, sealed vapor barrier. Openings are gasketed or sealed and
  2. Doors and openable windows are weather stripped and
  3. Other openings are caulked or sealed. These include joints around window and door frames, between sole plates and floors, between wall-ceiling joints, between wall panels, at penetrations for plumbing, electrical and gas lines, etc.

### Ventilation Air

Some provincial codes and local municipalities require ventilation or make-up air be brought into the conditioned space as replacement air. Whichever method is used, the mixed return air temperature across the heat exchanger **MUST** not fall below 60° so that flue gases will not condense excessively in the heat exchanger. Excessive condensation will shorten the life of the heat exchanger and possibly void your warranty.

### Venting and Combustion Air Check

The following information is supplied to allow the installer to make adjustments to the setup of existing appliances, **IF REQUIRED**, based on good trade practices, local codes, and good judgement

of the installer. Manufacturer does **NOT** take responsibility for modifications made to existing equipment.

**NOTE:** If this installation replaces an existing furnace from a commonly vented system, the original venting system may no longer be sized to properly vent the attached appliances. An improperly sized venting system may cause the formation of condensate in the vent and the leakage or spillage of vent gases. To make sure there is adequate combustion air for all appliances, **MAKE THE FOLLOWING CHECK.**



## WARNING

### CARBON MONOXIDE POISONING HAZARD


Failure to follow the steps outlined below for each appliance connected to the venting system being placed into operation, could result in carbon monoxide poisoning or death:

The following steps shall be followed for each appliance connected to the venting system being placed into operation, while all other appliances connected to the venting system are not in operation:

1. Seal any unused openings in the venting system.
2. Inspect the venting system for proper size and horizontal pitch, as required in the *National Fuel Gas Code, ANSI Z223.1/NFPA 54* or *CSA B149.1, Natural Gas and Propane Installation Code* and these instructions. Determine that there is no blockage or restriction, leakage, corrosion and other deficiencies which could cause an unsafe condition.
3. As far as practical, close all building doors and windows and all doors between the space in which the appliance(s) connected to the venting system are located and other spaces of the building.
4. Close fireplace dampers.
5. Turn on clothes dryers and any appliance not connected to the venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they are operating at maximum speed. Do not operate a summer exhaust fan.
6. Follow the lighting instructions. Place the appliance being inspected into operation. Adjust the thermostat so appliance is operating continuously.
7. Test for spillage from draft hood equipped appliances at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle. **(Figure 7)**
8. If improper venting is observed, during any of the above tests, the venting system must be corrected in accordance with the *National Fuel Gas Code, ANSI Z223.1/NFPA 54* and/or *CSA B149.1, Natural Gas and Propane Installation Code*.
9. After it has been determined that each appliance connected to the venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas-fired burning appliance to their previous conditions of use.

Figure 7

Vent Check

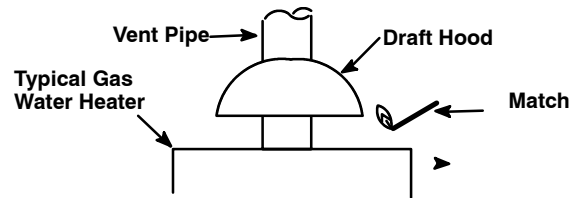

If flame pulls towards draft hood, this indicates sufficient venting.

## For Two Pipe Installation (Direct Vent)

This furnace can NOT be common vented or connected to any type B, BW or L vent or vent connector, nor to any portion of a factory-built or masonry chimney. If this furnace is replacing a previously common-vented furnace, it may be necessary to resize the existing vent and chimney to prevent oversizing problems for the other remaining appliance(s). See "*Venting and Combustion Air Check*" in this section. This furnace **MUST** be vented to the outside.

## 4. Vent and Combustion Air Piping

**⚠ WARNING**

**CARBON MONOXIDE POISONING HAZARD.**

Failure to properly vent this furnace could result in death or personal injury.

Use methods described here to provide combustion and ventilation air.

### Dual Certified (\*9MPT & \*9MPV Models) Direct or Non-Direct Vent

This furnace is certified as a Category IV furnace. This furnace can be installed as a direct vent furnace using outside air for combustion or the furnace can use air from inside the structure for combustion. The **INLET** air pipe is optional. If combustion air comes from inside the structure, adequate make up air **MUST** be provided to compensate for oxygen burned. See **Confined Space Installation** in the **Combustion and Ventilation Air** chapter. If combustion air is drawn from outside the structure, it **MUST** be taken from the same atmospheric pressure zone as the vent pipe.

### Contaminated Combustion Air

Installations in certain areas or types of structures will increase the exposure to chemicals or halogens that may harm the furnace.

The following areas or types of structures may contain or have exposure to the substances listed below. The installation must be evaluated carefully as it may be necessary to provide outside air for combustion.

- Commercial buildings.
- Buildings with indoor pools.
- Furnaces installed in laundry rooms.
- Furnaces installed in hobby or craft rooms.
- Furnaces installed near chemical storage areas.
- Permanent wave solutions for hair.
- Chlorinated waxes and cleaners.
- Chlorine based swimming pool chemicals.
- Water softening chemicals.
- De-icing salts or chemicals.
- Carbon tetrachloride.
- Halogen type refrigerants.
- Cleaning solvents (such as perchloroethylene).
- Printing inks, paint removers, varnishes, etc.
- Hydrochloric acid.
- Sulfuric Acid.
- Solvent cements and glues.
- Antistatic fabric softeners for clothes dryers.
- Masonry acid washing materials.

### Vent and Combustion Air Piping Guidelines

This furnace is approved for venting with Schedule 40 PVC, CPVC, ABS, Cellular Core pipe fittings and SDR-26 PVC.

Applicable ASTM Standards for Vent Materials						
Materials	Sch. 40 Pipe	SDR Pipe	Cell Core Pipe	Fittings	Primer	Solv. Cement
ABS	D1527	—	F628	D2468 & D2661	--	D2235
PVC	D1785	D2241	F891	D2466 & D2665	F656	D2564
CPVC	F441	F442	--	F438	--	F493
ABS to PVC	--	--	--	--	--	D3138

**NOTE:** 1) In Canada, all pipe, fittings & cements must conform to applicable CSA standards or to local codes having jurisdiction.

2) Only use solvent cements that are marked for use with the specific venting material.

3) ABS to PVC transition joints REQUIRE a special solvent cement that meets the requirements of ASTM D3138.

4) Refer to ASTM D2855 for general procedure to use for cementing plastic pipe and fittings.

**NOTE:** In order to create a seal that allows future removal of pipe, **RTV sealant MUST be used on the inlet pipe** where it joins to the furnace.

**NOTE:** All vent piping **MUST** be installed in compliance with local codes or ordinances, these instructions, good trade practices, and codes of country having jurisdiction.

1. Determine the best routing and termination for the vent pipe and air inlet pipe by referring to all of the instructions and guidelines in this Section.
2. Determine the size required for the vent pipe and air inlet pipe.
3. Loosely assemble all venting parts without adhesive (pipe joint cement) for correct fit before final assembly.
4. Furnace shall be installed so as to prevent the accumulation of condensate.
5. Use of vertical piping is preferred because there will be some moisture in the flue gases that may condense as it leaves the vent pipe.
6. The vertical vent pipe **MUST** be supported so that no weight is allowed to rest on the combustion blower.
7. Exhaust vent piping or air inlet piping diameter **MUST NOT** be reduced.
8. All exhaust vent piping from the furnace to termination **MUST** slope upwards. A minimum of  $\frac{1}{4}$ " per foot of run is required to properly return condensate to the furnace drain system.
9. Use DWV type long radius elbows whenever possible, as they provide for the minimum slope on horizontal runs and they provide less resistance in the vent system. If DWV elbows cannot be used, use two, 45° elbows when possible. On horizontal runs the elbows can be slightly misaligned to provide the correct slope.
10. All horizontal pipe runs **MUST** be supported at least every five feet with galvanized strap or other rust resistant material. **NO** sags or dips are permitted.
11. All vertical pipe runs **MUST** be supported every six feet where accessible.

12. The maximum pipe length is 40' total in the inlet **or** outlet side of the system. Up to five, 90° elbows can be used on the inlet **or** the outlet. With the Concentric Vent Termination Kits (NAHA001CV or NAHA002CV), the maximum pipe length is 35' with 4 90° elbows. If more elbows are required, reduce the length of both the inlet and exhaust pipes 5' for each additional elbow used. (See **Table 3** or **Table 4**).
13. The minimum pipe run length is 2'.
14. The piping can be run in the same chase or adjacent to supply or vent pipe for water supply or waste plumbing. It can also be run in the same chase with a vent from another 90+ furnace.
 

**NOTE:** In **NO** case can the piping be run in a chase where temperatures can exceed 140° F. or where radiated heat from adjacent surfaces would exceed 140° F.
15. The vent outlet **MUST** be installed to terminate in the same atmospheric pressure zone as the combustion air inlet.
16. The vent system can be installed in an existing unused chimney provided that:
  - Both the exhaust vent and air intake run the length of the chimney.
  - No other gas fired appliance or fireplace (solid fuel) is vented into the chimney.
  - The top of the chimney **MUST** be sealed flush or crowned up to seal against rain or melting snow so **ONLY** the piping protrudes.
  - The termination clearances shown in **Figure 8** are maintained.
17. Furnace applications with vertical vents requiring vent diameter increaser fittings **must** have increaser fittings installed in vertical portion of the vent. Condensate will be trapped in the vent if the vent diameter is increased prior to having an elbow turned upward. This could cause nuisance tripping of the pressure switch.

## Combustion Air and Vent Piping Insulation Guidelines

**NOTE:** Use closed cell, neoprene insulation or equivalent. If Fiberglass or equivalent insulation is used it must have a vapor barrier. Use R values of 7 up to 10', R-11 if exposure exceeds 10'. If Fiberglass insulation is used, exterior to the structure, the pipe **MUST** be boxed in and sealed against moisture.

1. When the vent or combustion air pipe height above the roof exceeds 30", or if an exterior vertical riser is used on a horizontal vent to get above snow levels, the exterior portion **MUST** be insulated.
2. When combustion air inlet piping is installed above a suspended ceiling, the pipe **MUST** be insulated with moisture resistant insulation such as Armaflex or other equivalent type of insulation.
3. Insulate combustion air inlet piping when run in warm, humid spaces.

## Sizing Combustion Air and Vent Pipe

Consult Table 3 or Table 4 to select the proper diameter exhaust and combustion air piping. Exhaust and combustion air piping is sized for each furnace Btuh size based on total lineal vent length (on inlet **or** outlet side), and number of 90° elbows required.

1. **Double Pipe Installation**-If installing as a direct-vent appliance, consult **Table 4** to select the proper diameter exhaust and combustion air piping. Exhaust and combustion air piping is sized for each furnace Btuh size based on total lineal vent length (on inlet **or** outlet side), and number of 90° elbows required.
2. **Single Pipe Installation**-If installing as a non-direct vent appliance, (single outlet pipe and no inlet pipe) refer to **Table 3**. The table shows the maximum number of elbows allowed with any given pipe diameter and length of run.

3. **Use of Elbows**-Two 45° elbows can be substituted for one 90° elbow. The elbow or elbows used for vent termination outside the structure **ARE** counted, including elbows needed to bring termination above expected snow levels.

Table 3	Pipe Diameter Table Single Piping ONLY
<b>50,000 &amp; 75,000 Btuh Furnaces</b>	
40' & (5) 90° elbows with 2" PVC pipe	
<b>100,000 Btuh Furnace</b>	
40' & (5) 90° elbows with 3" PVC pipe	
<b>125,000 Btuh Furnace</b>	
40' & (5) 90° elbows with 3" PVC pipe	
<b>Elbows are DWV Long Radius Type for 2" and 3" vents.</b>	

If more than five elbows are required, reduce the length of both the inlet and exhaust pipes 5' for each additional elbow used.

**NOTE:** It is allowable to use larger diameter pipe and fitting than shown in the tables but **not** smaller diameters than shown.

Table 4	Pipe Diameter Table Dual Piping ONLY
<b>50,000 &amp; 75,000 Btuh Furnaces</b>	
40' & (5) 90° elbows with 2" PVC pipe	
<b>100,000 Btuh Furnace</b>	
40' & (5) 90° elbows with 3" PVC pipe	
<b>125,000 Btuh Furnace</b>	
40' & (5) 90° elbows with 3" PVC pipe	
<b>Elbows are DWV Long Radius Type for 2" and 3" vents.</b>	

If more than five elbows are required, reduce the length of both the inlet and exhaust pipes 5' for each additional elbow used.

\* Feet of pipe is whichever pipe run is the longest, either inlet **or** outlet side.

For "**Concentric Termination Kit**" Venting table, see "**Section 5**" in this manual.

## Vent Termination Clearances

**⚠ WARNING**

**CARBON MONOXIDE POISONING AND FIRE HAZARD.**

**Failure to properly vent this furnace could result in death, personal injury and/or property damage.**

**Inlet and outlet pipes may NOT be vented directly above each other.**


1. Determine termination locations based on clearances specified in following steps and as shown in **Figure 8**, **Figure 9**, **Figure 21**, through **Figure 28**.

For "**Concentric Termination Kit**" clearances, see **Figure 31**, **Figure 32**, **Figure 33**, **Figure 34** and **Figure 35** in "**Section 5**" in this manual.

2. This furnace is Dual Certified and can be installed as a single pipe appliance (all combustion from inside the structure) or as a direct vent appliance where all combustion air is taken from outside the structure.
3. For Single Pipe installation refer to **Figure 9** for vent termination clearances.
4. For Direct Vent installation, refer to **Figure 8** for vent termination.

**Figure 8**

**Direct Vent Termination Clearance**

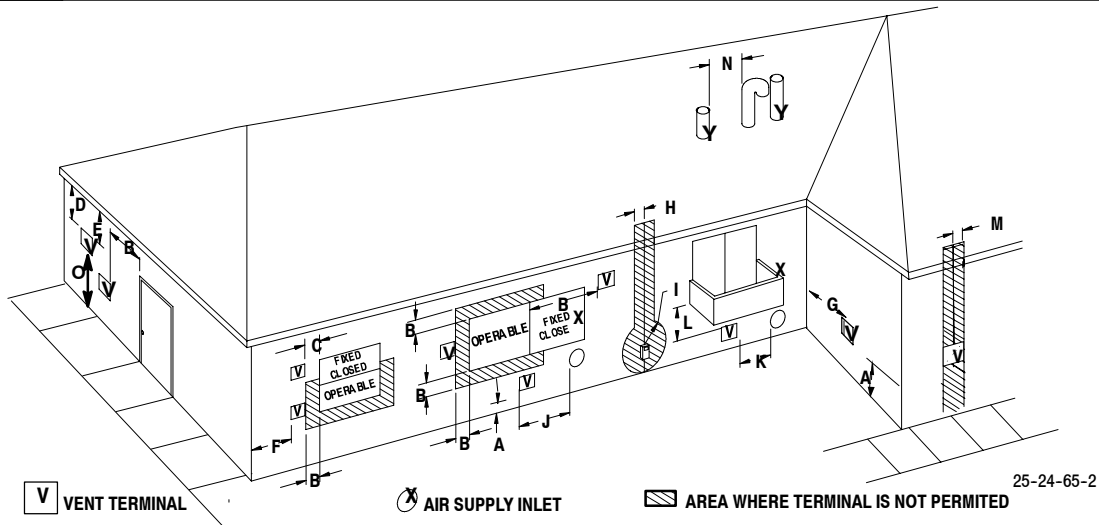

Item	Clearance Description	Canadian Installation (1)	U.S. Installation (2)
A	Clearance above grade, veranda, porch, deck, balcony, or anticipated snow level	12" (30cm) #	12" (30 cm)
B	Clearance to a window or door that may be opened	6" (15 cm) for appliances ≤ 10,000 BTUH (3kW), 12" (30 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 100,000 Btuh (30 kW), 36" (91 cm) for appliances > 100,000 Btuh (30 kW)	6" (15 cm) for appliances ≤ 10,000 BTUH (3kW), 9" (23 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 50,000 Btuh (15 kW), 12" (30 cm) for appliances > 50,000 Btuh (15 kW)
C	Clearance to a permanently closed window	*	*
D	Vertical clearance to a ventilated soffit located above the terminal within a horizontal distance of 2' (61cm) from the centerline of the terminal	*	*
E	Clearance to an unventilated soffit	*	*
F	Clearance to an outside corner	*	*
G	Clearance to an inside corner	*	*
H	Clearance to each side of the centerline extended above electrical meter or gas service regulator assembly	3' (91 cm) within 15' (4.5 m) above the meter/regulator assembly	*
I	Clearance to service regulator vent outlet	3' (91 cm)	*
J	Clearance to non-mechanical air supply inlet to building or the combustion air inlet to any other appliance	6" (15 cm) for appliances ≤ 10,000 BTUH (3kW), 12" (23 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 100,000 Btuh (30 kW) and ≤ 50,000 Btuh (15 kW), 36" (30 cm) for appliances > 50,000 Btuh (15 kW)	6" (15 cm) for appliances ≤ 10,000 BTUH (3kW), 9" (23 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 50,000 Btuh (15 kW), 12" (30 cm) for appliances > 50,000 Btuh (15 kW)
K	Clearance to a mechanical air supply inlet	6' (1.83 m)	3' (91 cm) above if within 10' (3m horizontally)
L	Clearance under a veranda, porch, deck, or balcony	12" (30 cm) ‡	*
M	Clearance to each side of the centerline extended above or below vent terminal of the furnace to a dryer or water heater vent, or other appliance's direct vent intake or exhaust.	12" (30 cm)	12" (30 cm)
N	Clearance from a plumbing vent stack	3' (91 cm)	3' (91 cm)
O	Clearance above a paved sidewalk or paved driveway located on public property.	7' (2.13 m) +	*

(1.) In accordance with the current CSA B149.1, Natural Gas and Propane Installation Code

(2.) In accordance with the current ANSI Z223.1/NFPA 54, National Fuel Gas Code

# 18" (46 cm) above roof surface

+ A vent shall not terminate directly above a sidewalk or paved driveway that is located between two single family dwellings and serves both dwellings.

‡ Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor.


\* For clearances not specified in ANSI Z223.1/NFPA 54 or CSA B149.1, clearances shall be in accordance with local installation codes and the requirements of the gas supplier and the manufacturer's installation instructions.

**Notes:**

1. The vent for this appliance shall not terminate
  - a. Near soffit vents or crawl space vents or other areas where condensate or vapor could create a nuisance or hazard or property damage; or
  - b. Where condensate vapor could cause damage or could be detrimental to the operation of regulators, relief valves, or other equipment.
2. When locating vent terminations, consideration must be given to prevailing winds, location, and other conditions which may cause recirculation of the combustion products of adjacent vents. Recirculation can cause poor combustion, inlet condensate problems, and accelerated corrosion of the heat exchangers.

Figure 9

Other than Direct Vent Termination Clearance

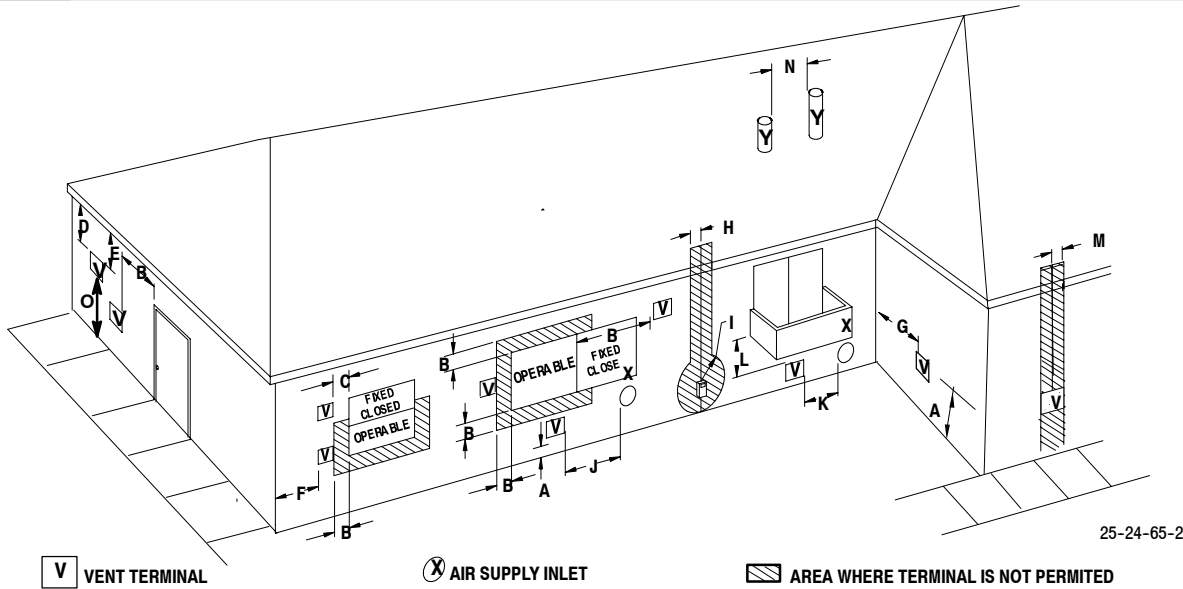

25-24-65-2

Item	Clearance Descriptions	Canadian Installation (1)	U.S. Installation (2)
A	Clearance above grade, veranda, porch, deck, balcony, or anticipated snow level	12" (30cm) #	12" (30 cm)
B	Clearance to a window or door that may be opened	6" (15 cm) for appliances ≤ 10,000 BTUH (3kW), 12" (30 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 100,000 Btuh (30 kW), 36" (91 cm) for appliances > 100,000 Btuh (30 kW)	4' (1.2 m) below or to the side of the opening. 1' (30 cm) above the opening.
C	Clearance to a permanently closed window	*	*
D	Vertical clearance to a ventilated soffit located above the terminal within a horizontal distance of 2' (61cm) from the centerline of the terminal	*	*
E	Clearance to an unventilated soffit	*	*
F	Clearance to an outside corner	*	*
G	Clearance to an inside corner	*	*
H	Clearance to each side of the centerline extended above electrical meter or gas service regulator assembly	3' (91 cm) within 15' (4.5 m) above the meter/regulator assembly	*
I	Clearance to service regulator vent outlet	3' (91 cm)	*
J	Clearance to non-mechanical air supply inlet to building or the combustion air inlet to any other appliance	6" (15 cm) for appliances ≤ 10,000 BTUH (3kW), 12" (30 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 100,000 Btuh (30 kW), 36" (91 cm) for appliances > 100,000 Btuh (30 kW)	4' (1.2 m) below or to the side of opening; 1' (30 cm) above opening.
K	Clearance to a mechanical air supply inlet	6' (1.83 m)	3' (91 cm) above if within 10' (3m horizontally)
L	Clearance under a veranda, porch, deck, or balcony	12" (30 cm) ‡	*
M	Clearance to each side of the centerline extended above or below vent terminal of the furnace to a dryer or water heater vent, or other appliance's direct vent intake or exhaust.	*	*
N	Clearance from a plumbing vent stack	3' (91 cm)	3' (91 cm)
O	Clearance above a paved sidewalk or paved driveway located on public property.	7' (2.13 m) +	7' (2.13 m)

(1.) In accordance with the current CSA B149.1, Natural Gas and Propane Installation Code

(2.) In accordance with the current ANSI Z223.1/NFPA 54, National Fuel Gas Code

# 18" (46 cm) above roof surface

+ A vent shall not terminate directly above a sidewalk or paved driveway that is located between two single family dwellings and serves both dwellings.

‡ Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor.

\* For clearances not specified in ANSI Z223.1/NFPA 54 or CSA B149.1, clearances shall be in accordance with local installation codes and the requirements of the gas supplier and the manufacturer's installation instructions.

Notes:

1. The vent for this appliance shall not terminate
  - a. Near soffit vents or crawl space vents or other areas where condensate or vapor could create a nuisance or hazard or property damage; or
  - b. Where condensate vapor could cause damage or could be detrimental to the operation of regulators, relief valves, or other equipment.
2. When locating vent terminations, consideration must be given to prevailing winds, location, and other conditions which may cause recirculation of the combustion products of adjacent vents. Recirculation can cause poor combustion, inlet condensate problems, and accelerated corrosion of the heat exchangers.

## Condensate Drain Trap

This furnace removes both sensible and latent heat from the products of combustion. Removal of the latent heat results in condensation of the water vapor. The condensate is removed from the furnace through the drains in the plastic transition and the vent fitting. The drains connect to the factory installed internally mounted condensate drain trap on the left or right side of the furnace.

The startup of a new furnace will involve a cycle or two of the furnace to properly prime the condensate trap with water. Until the trap is fully primed, some condensate will be pulled into the combustion blower. The furnace may cycle on the pressure switch connected to the plastic transition box due to condensate buildup. After the trap is primed, the condensate will start draining from the furnace. The combustion blower will clear out any remaining condensate in the blower housing through the vent fitting downstream of the blower. Note that the condensate trap can also be primed by pouring water into the  $\frac{1}{2}$ " drain hose. Remove the  $\frac{1}{2}$ " ID drain hose from either the gutter or the white PVC Tee Trap. Using a funnel pour eight (8) ounces of water into  $\frac{1}{2}$ " ID drain hose. Water will flow through the drain hose and into the condensate drain trap. This will prime both the vent and the transition sides of the trap. Reconnect the  $\frac{1}{2}$ " ID drain hose to the original component, either the gutter or the PVC Tee Trap.

The condensate drain trap supplied with the furnace **MUST** be used. The drain connection on the condensate drain trap is sized for  $\frac{3}{4}$ " PVC or CPVC pipe, however alternate  $\frac{1}{2}$ " CPVC (nominal  $\frac{5}{8}$ " O.D.) or vinyl tubing with a minimum inner diameter (I.D.) of  $\frac{5}{8}$ " may also be used, as allowed by local codes. Alternate drain pipes and hoses may be used as allowed by local codes.

The drain line must maintain a  $\frac{1}{4}$ " per foot downward slope toward the drain.  $\frac{1}{4}$ " per foot is recommended. Installation of an overflow line is recommended when the  $\frac{1}{4}$ " per foot slope to the condensate drain cannot be maintained. See **Figure 19** for proper routing and installation of the overflow.

**DO NOT** trap the drain line in any other location than at the condensate drain trap supplied with the furnace.

If possible, **DO NOT** route the drain line where it may freeze. The drain line must terminate at an inside drain to prevent freezing of the condensate and possible property damage.

1. A condensate sump pump **MUST** be used if required by local codes, or if no indoor floor drain is available. The condensate pump must be approved for use with acidic condensate.
2. A plugged condensate drain line or a failed condensate pump will allow condensate to spill. If the furnace is installed where a condensate spill could cause damage, it is recommended that an auxiliary safety switch be installed to prevent operation of the equipment in the event of pump failure or plugged drain line. If used, an auxiliary safety switch should be installed in the R circuit (low voltage) **ONLY**.
3. If the auxiliary switch in the condensate pump is used, the furnace may shut down due to a blocked condensate line or failed pump. To prevent frozen water pipes see the "Frozen Water Pipe Hazard" section on Page 4 of this manual.



## CAUTION

**Failure to do so may result in burst water pipes, serious property damage.**

**If a condensate pump is installed, a plugged condensate drain or a failed pump may cause the furnace to shut down. Do not leave the home unattended during freezing weather without turning off water supply and draining water pipes or otherwise protecting against the risk of frozen pipes.**


## Condensate Drain Trap Freeze Protection

Special precautions **MUST** be made if installing furnace in an area which may drop below freezing. This can cause improper operation or damage to the equipment. If the the furnace environment has the potential of freezing, the drain trap and drain line must be protected. Use 3 to 6 watt per foot at 115 volt, 40° F self-regulating shielded and waterproof heat tape. Wrap the drain trap and drain line with the heat tape and secure with the ties. Follow the heat tape manufacturer's recommendations. Prime the trap before furnace operation.



Figure 10

Upflow Installations Top Vent

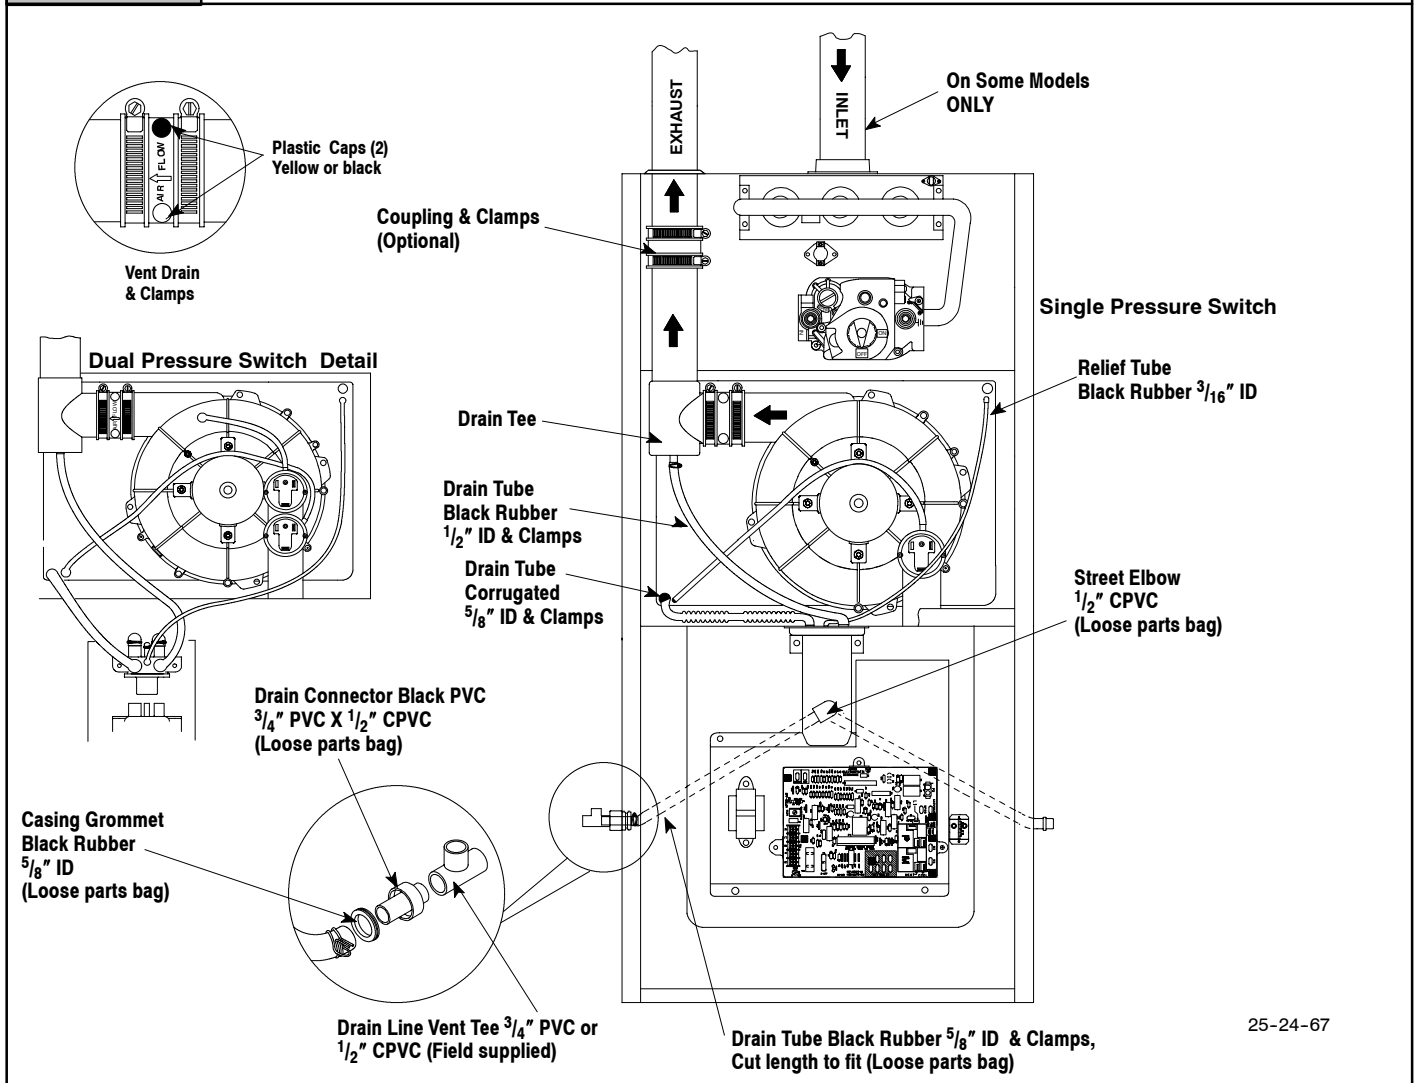

Upflow Installations Top Vent (See Figure 10)

Remove plug from the side of the furnace casing where Drain Tube will exit.

Install casing grommet (black rubber 5/8" ID grommet - in loose parts bag)

Install the 1/2" CPVC street elbow on discharge of Trap

Install the black PVC tube connector (3/4" PVC x 1/2" CPVC from loose parts bag) as shown in the illustration above.

Cut the black Drain Tube (5/8" ID - in loose parts bag) to length to fit between Trap and tube connector through grommet.

Clamp both ends of the Drain Tube using clamps provided.

**NOTE:** "PVC" is used as a generic term. Pipe and fitting materials used must be acceptable to the local code officials having jurisdiction.

Glue the CPVC street elbow to the Trap using appropriate cleaner and solvent cement.


Connect the Tee trap and the main drain line exiting the casing as shown **Figure 19**.

**Note:** It is recommended that all PVC piping and fitting connections be fit up and inspected before final cementing. **Trap must be primed before operation.** Verify all condensate drain connections are securely clamped. A coupling and clamps (in loose part bag) may be installed as shown for future servicing of the vent system.

25-24-67

Figure 11

Upflow Installations Vent thru Left Side

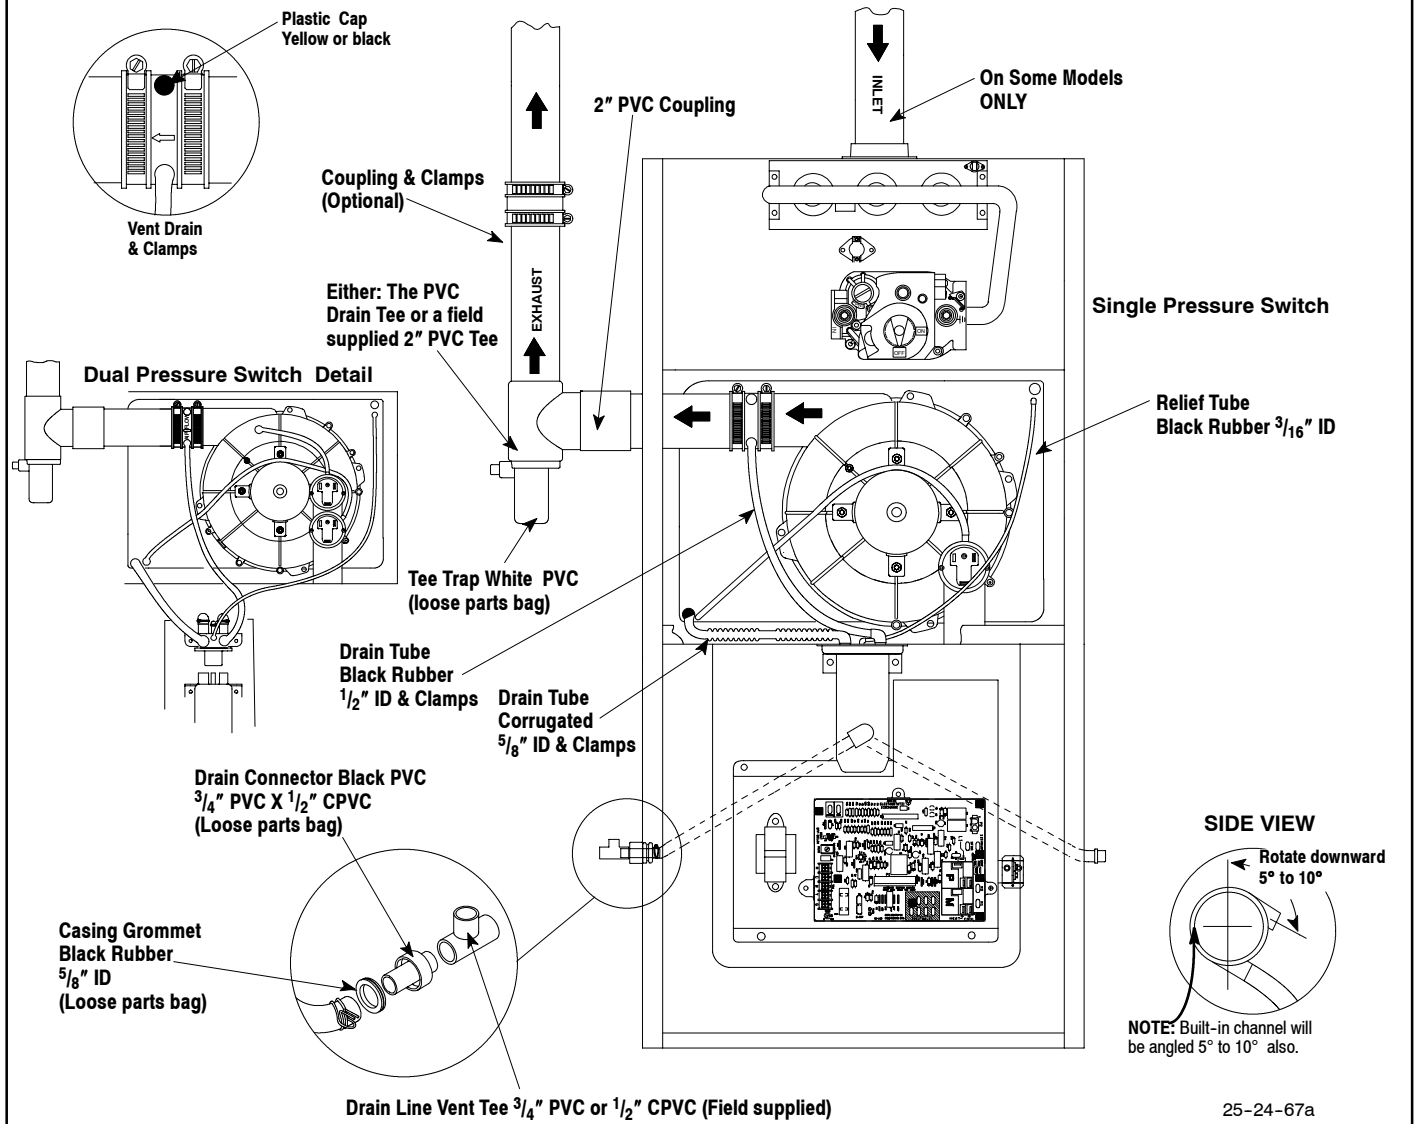

25-24-67a

Upflow Installations Vent thru Left Side (See Figure 11)

Remove Drain Tee from inducer discharge and remove black Drain Tube (1/2" ID) from bottom of Drain Tee. (\*9MPT or V models only)

Install Vent Pipe grommet in side of casing.

Cut an appropriate length of 2" PVC pipe long enough to exit the cabinet and connect the vent drain to either:

- A 2" PVC coupling fastened onto the Drain Tee (\*9MPT or V models)

Install Tee trap into bottom of tee.

Install the 1/2" CPVC street elbow on discharge of Trap

Install the black PVC drain connector (3/4" PVC x 1/2" CPVC from loose parts bag) as shown in the illustration above.

Cut the black Drain Tube (5/8" ID - in loose parts bag) to length to fit between Trap and tube connector through grommet.

Clamp both ends of the Drain Tube using clamps provided.


Glue the CPVC street elbow to the Trap using appropriate cleaner and solvent cement.

Connect the Tee trap and the main drain line exiting the casing as shown in **Figure 19**.

**Note:** It is recommended that all PVC piping and fitting connections be fit up and inspected before final cementing. **Both the internal Trap and the external Tee Trap must be primed before operation.** Verify all condensate drain connections are securely clamped. A coupling and clamps (in loose part bag) may be installed as shown for future servicing of the vent system.

Figure 12

All Models Vent thru Right Side

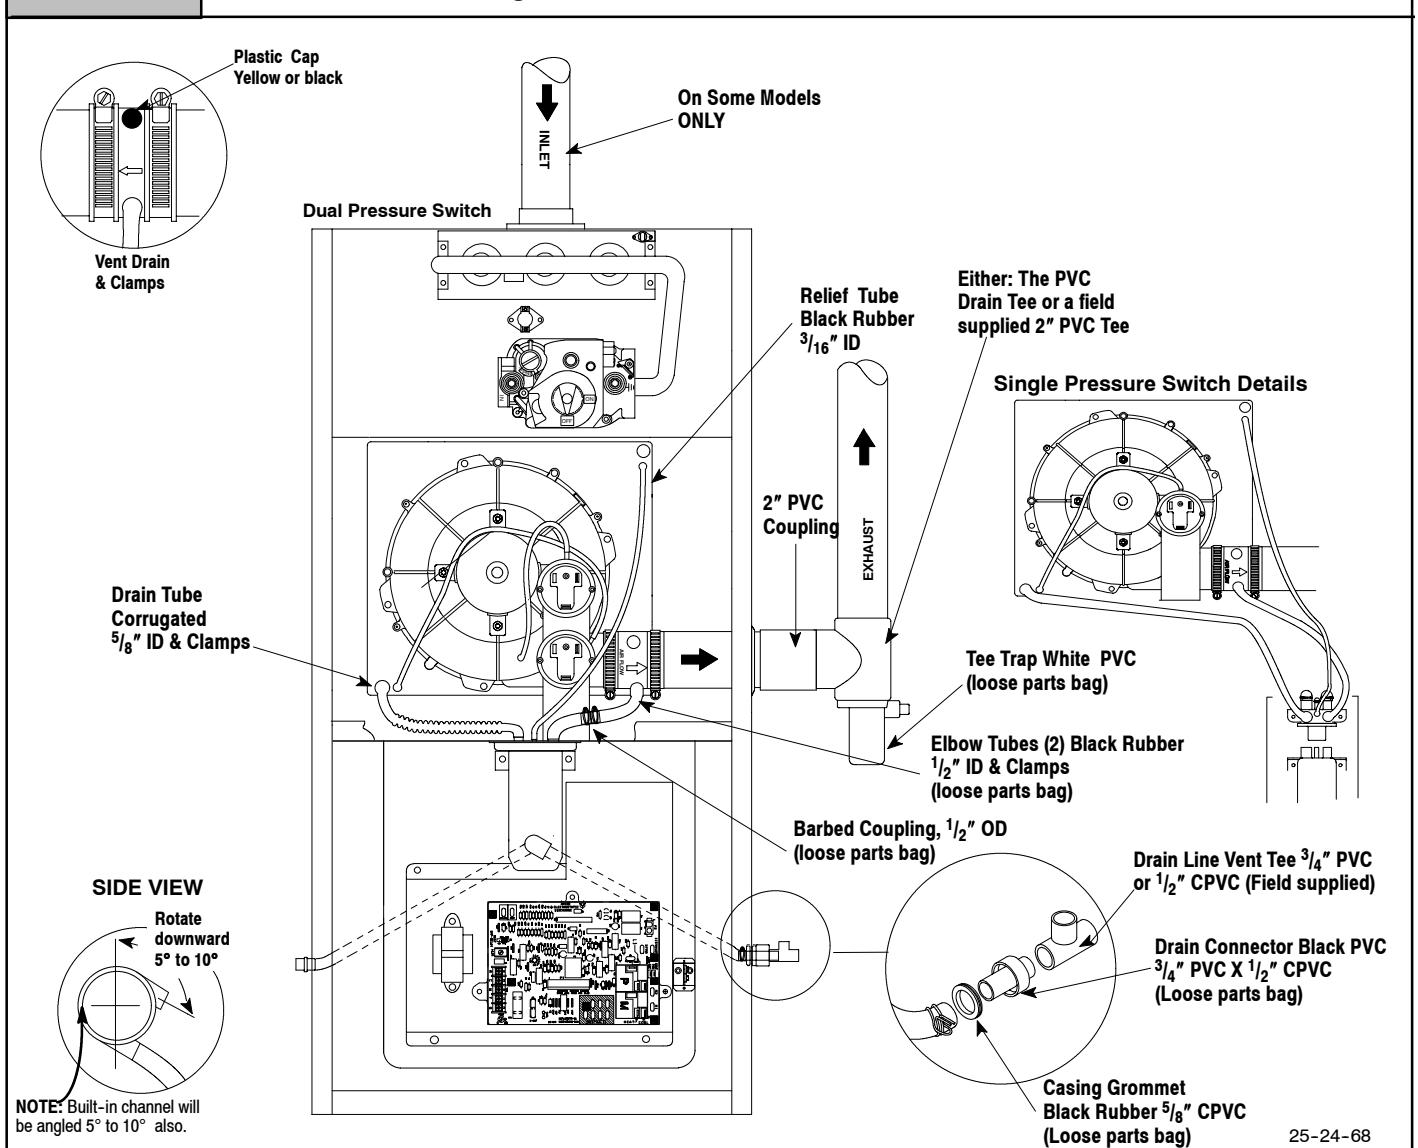

All Models Vent thru Right Side (See Figure 12)

Disconnect the black Drain Tube between the drain vent and the Trap.

Rotate the inducer 180° for a right side vent after loosening the 4 inducer attachment screws. Reinstall and retighten the inducer screws to 20" pounds torque.

Using the 1/2" OD barbed coupling in the loose parts bag connect together with the 2 short 1/2" ID elbow tubes and connect the lower discharge port of the vent drain to the Trap. Secure all connections with clamps.

Install the vent pipe grommet into the casing

Cut an appropriate length of 2" PVC pipe long enough to exit the cabinet and connect the vent drain to either:

- A 2" PVC coupling fastened onto the Drain Tee

Install Tee Trap into bottom section of Tee.

Remove plug from the side of the furnace casing where Drain Tube will exit.

Install casing grommet (black rubber 5/8" ID grommet - in loose parts bag)

Install the 1/2" CPVC street elbow on discharge of Trap

Install the black PVC tube connector (3/4" PVC x 1/2" CPVC from loose parts bag) as shown in the illustration above

Cut the black Drain Tube (5/8" ID - in loose parts bag) to length to fit between Trap and tube connector through grommet.

Clamp both ends of the Drain Tube using clamps provided.


Glue the CPVC street elbow to the Trap using appropriate cleaner and solvent cement.

Connect the Tee trap and the main drain line exiting the casing as shown in Figure 19.

**Note:** It is recommended that all PVC piping and fitting connections be fit up and inspected before final cementing. **Both the internal Trap and the external Tee Trap must be primed before operation.** Verify all condensate drain connections are securely clamped. A coupling and clamps (in loose part bag) may be installed as shown for future servicing of the vent system.

Figure 13

Downflow Left Side Vent and Trap

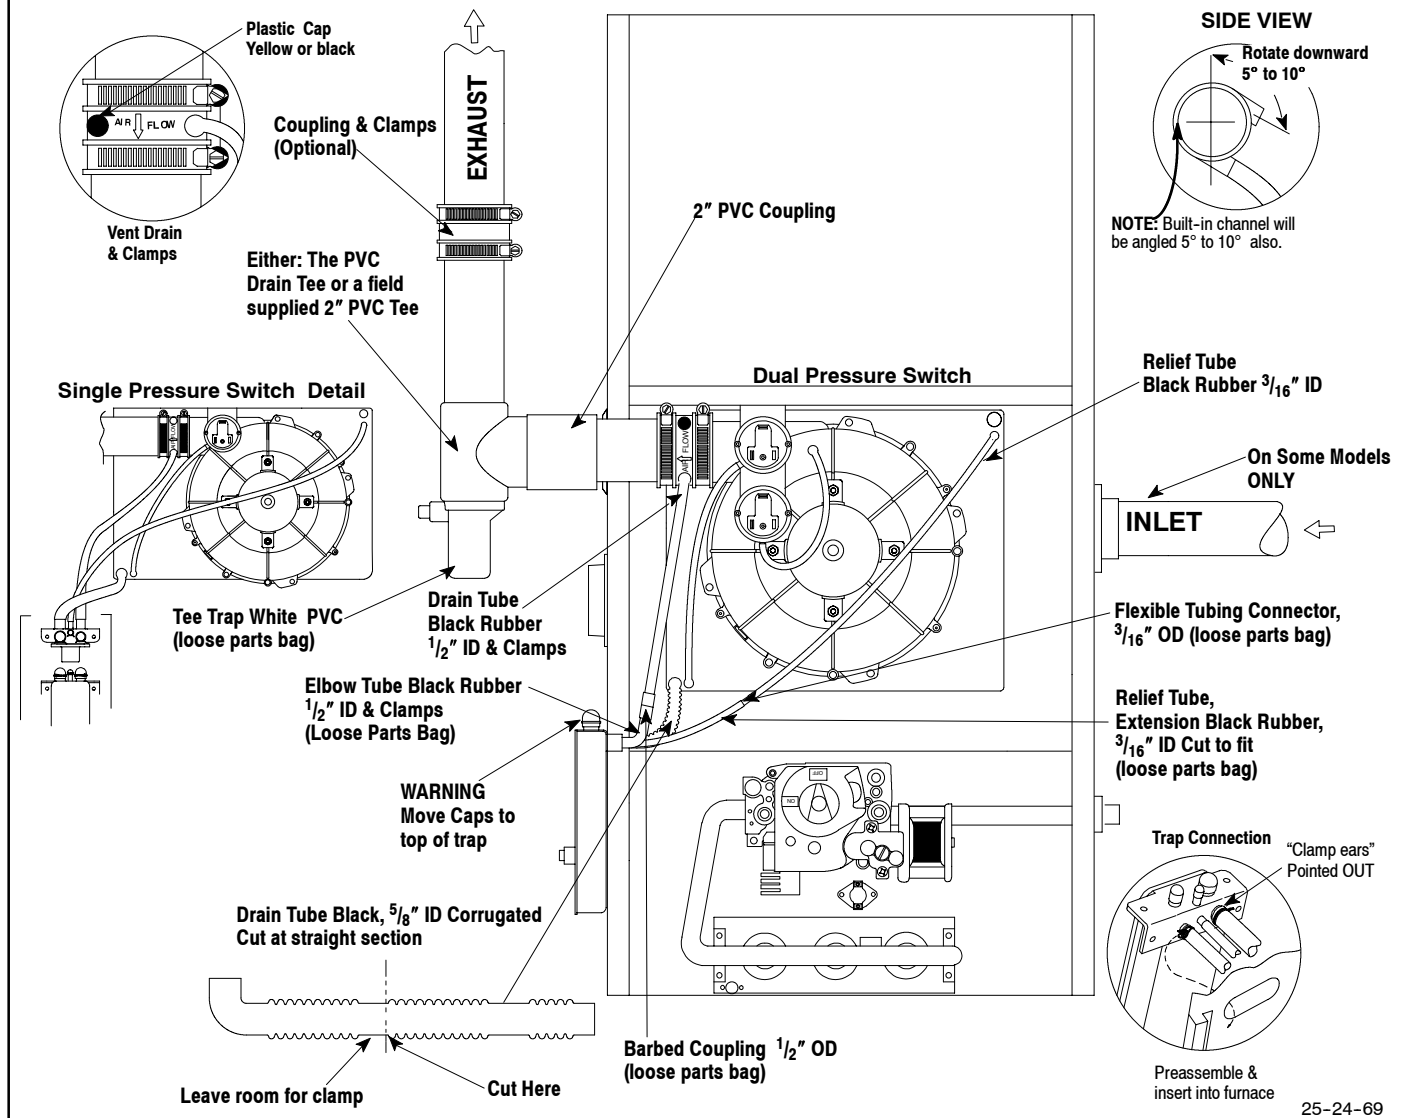

**Downflow Left Side Vent and Trap (See Figure 13)**

Remove the inducer mounting screws, rotate the inducer 180° and retighten the inducer screws to 20” pounds torque.

Disconnect the hoses from the Trap assembly, and remove Trap and Trap mounting bracket from the blower compartment. Using cover plate and gasket provided in the loose parts bag, cover the hole from the burner compartment to the blower compartment and secure with screws.

Move the caps to the top of the Trap and mount the Trap externally to the left side of the unit using the 2 screws provided.

Cut the 5/8” ID corrugated hose as shown above and fasten the 90° bend end to the Trap and fasten the straight end to the transition drain. Secure both connections with clamps.

Reconnect the 1/2” ID drain hose from the vent drain to the Trap and secure with a clamp. In some cases, additional length will be required for this hose. Use the Black plastic 1/2” OD barbed coupling and a suitable section of 1/2” ID hose to make the connection. Secure all connections with clamps

Connect the 3/16” ID relief tube from the small port on the Trap to the top port of the transition as shown in the picture. In some cases, additional hose length will be needed. Use the clear plastic 3/16” OD flexible tubing connector and a suitable length of extra 3/16” ID hose to make this connection.

Install the vent pipe grommet into the casing

Cut an appropriate length of 2” PVC pipe long , enough to exit the cabinet and connect the vent drain to either:


- A 2” PVC coupling fastened onto the Drain Tee
- Install Tee Trap into bottom section of Tee and glue pipe.

Connect the Tee trap and the main drain line exiting the casing as shown in **Figure 19**.

**Note:** It is recommended that all PVC piping and fitting connections be fit up and inspected before final cementing. **Both the external Trap and the external Tee Trap must be primed before operation.** Verify all condensate drain connections are securely clamped. A coupling and clamps (in loose part bag) may be installed as shown for future servicing of the vent system.

Figure 14

Downflow Right Side Vent and Trap

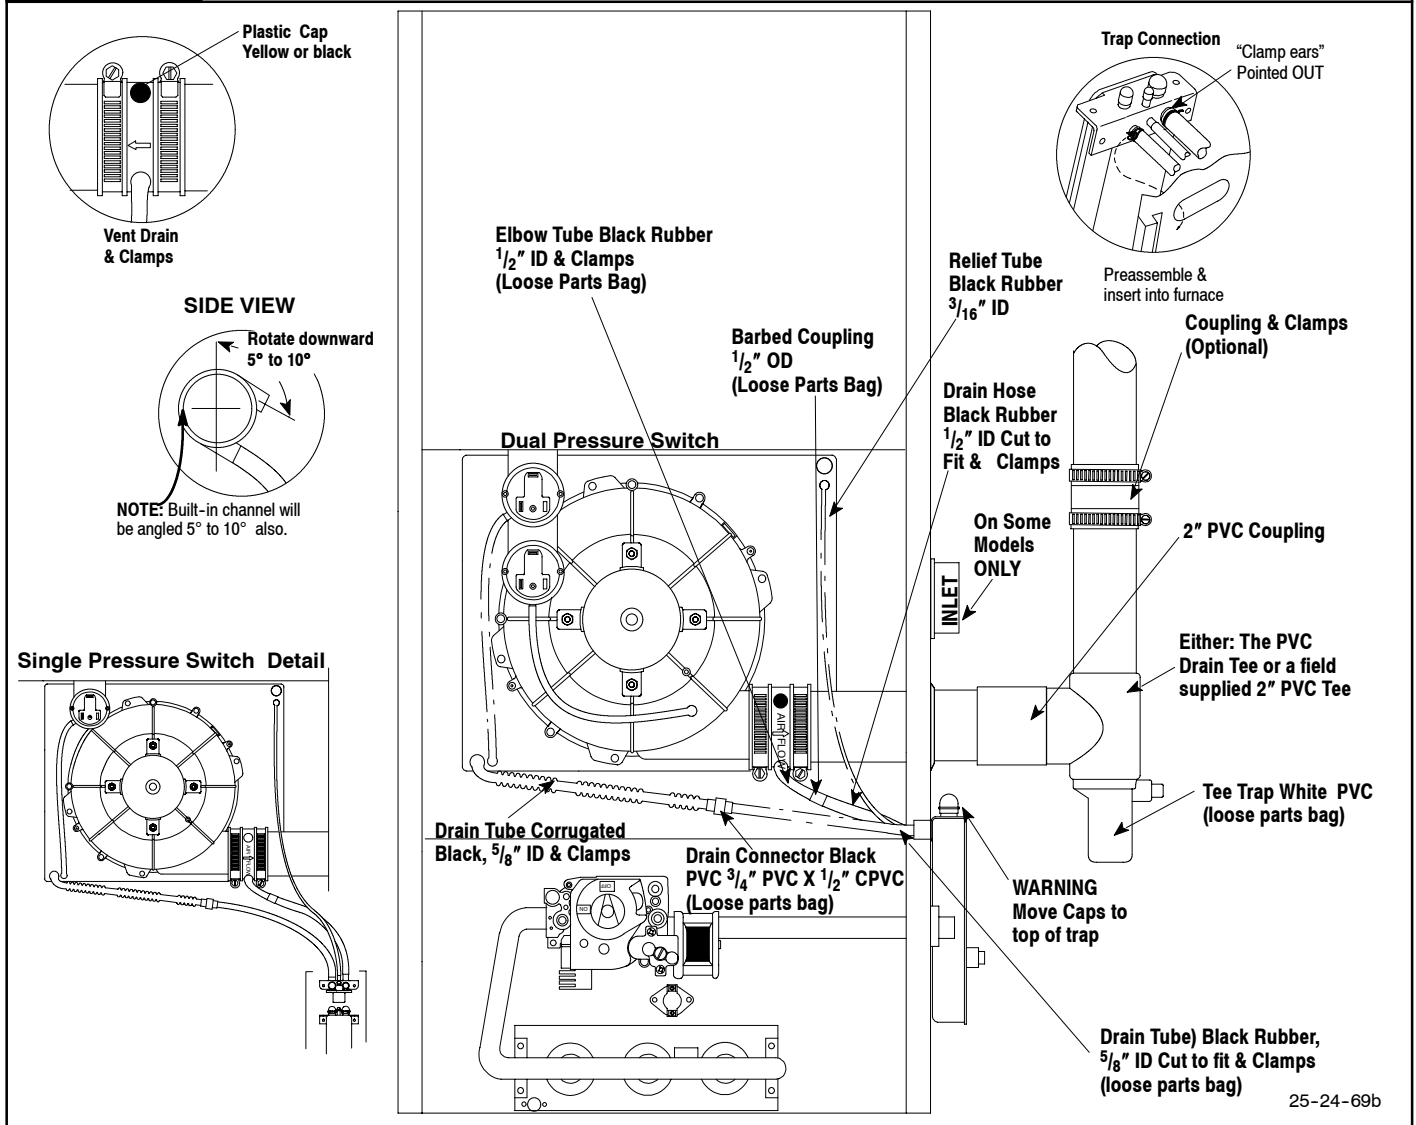

**Downflow Right Side Vent and Trap (See Figure 14)**

Remove the Drain Tee if installed.

Disconnect the hoses from the Trap assembly, and remove Trap and Trap mounting bracket from the blower compartment. Using cover plate and gasket provided in the loose parts bag, cover the hole from the burner compartment to the blower compartment and secure with screws.

Move the caps to the top of the Trap and mount the Trap externally to the right side of the unit using the 2 screws provided.

Connect the corrugated Drain Tube from the transition box to the Trap as shown. If an extension is required, use the black PVC tube connector and the black 5/8" ID Drain Tube in the loose parts bag. Cut tube to length. Secure all connections with clamps.

Connect the drain hose from the Vent Drain to the Trap. If an extension is required, use the black 1/2" OD barbed coupling, connect a black 1/2" ID elbow tube and a suitable section of a 1/2" ID

drain tube to make connection from the vent drain to the trap. Secure all connections with clamps.

Install the vent pipe grommet into the casing

Cut an appropriate length of 2" PVC pipe long, enough to exit the cabinet and connect the vent drain to either:

- A 2" PVC coupling fastened onto the Drain Tee


Install Tee Trap into bottom section of Tee and glue pipe.

Connect the Tee trap and the main drain line exiting the casing as shown in **Figure 19**.

**Note:** It is recommended that all PVC piping and fitting connections be fit up and inspected before final cementing. **Both the external Trap and the external Tee Trap must be primed before operation.** Verify all condensate drain connections are securely clamped. A coupling and clamps (in loose part bag) may be installed as shown for future servicing of the vent system.

Figure 15

Horizontal Left Thru Top

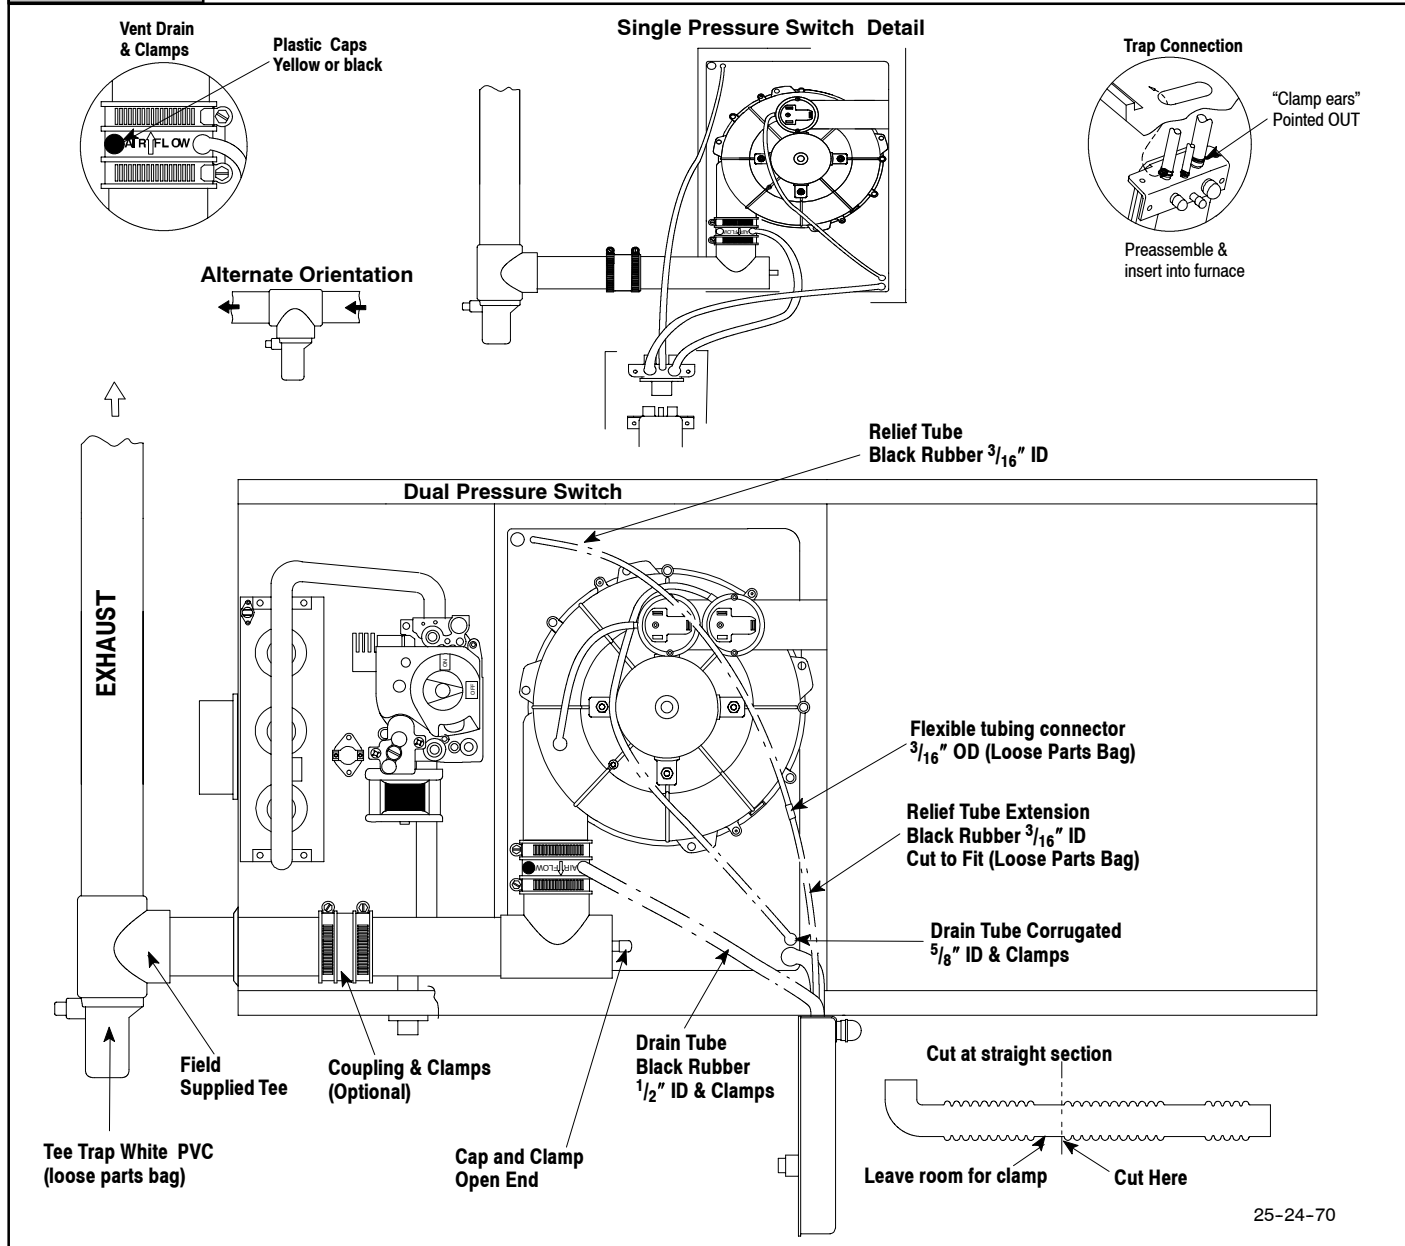

**Horizontal Left-Thru Top (See Figure 15)**

Disconnect the hoses from the Trap assembly, and remove Trap and Trap mounting bracket from the blower compartment. Using cover plate and gasket provided in the loose parts bag, cover the hole from the burner compartment to the blower compartment and secure with screws.

Mount the Trap externally to the bottom side of the unit using the 2 screws provided in the location shown.

Cut the corrugated tube as shown in the illustration above. Connect the corrugated hose from the transition to the Trap. Secure connections with clamps.

Remove the black 1/2" ID Drain Tube from the Drain Tee. Install a yellow cap and clamp over the open drain port of the Drain Tee.

Connect the black 1/2" ID Drain Tube from the Vent Drain to the Trap. Secure connections with clamps.

Connect the 3/16" ID relief tube to the middle port on the Trap. If an extension is required, use the 3/16" OD flexible tubing connector

and the black 3/16" ID relief tube in the loose parts bag. Cut tube to length. Secure all connections with clamps.

Cut an appropriate length of 2" PVC pipe, long enough to exit the cabinet and connect the vent drain to either:

- A 2" PVC coupling fastened onto the Drain Tee


Install Tee Trap into bottom section of Tee and glue pipe.

Connect the Tee trap and the main drain line exiting the casing as shown in **Figure 19**.

**Note:** It is recommended that all PVC piping and fitting connections be fit up and inspected before final cementing. **Both the external Trap and the external Tee Trap must be primed before operation.** Verify all condensate drain connections are securely clamped. A coupling and clamps (in loose part bag) may be installed as shown for future servicing of the vent system.

Figure 16

Horizontal Left-Side Vent

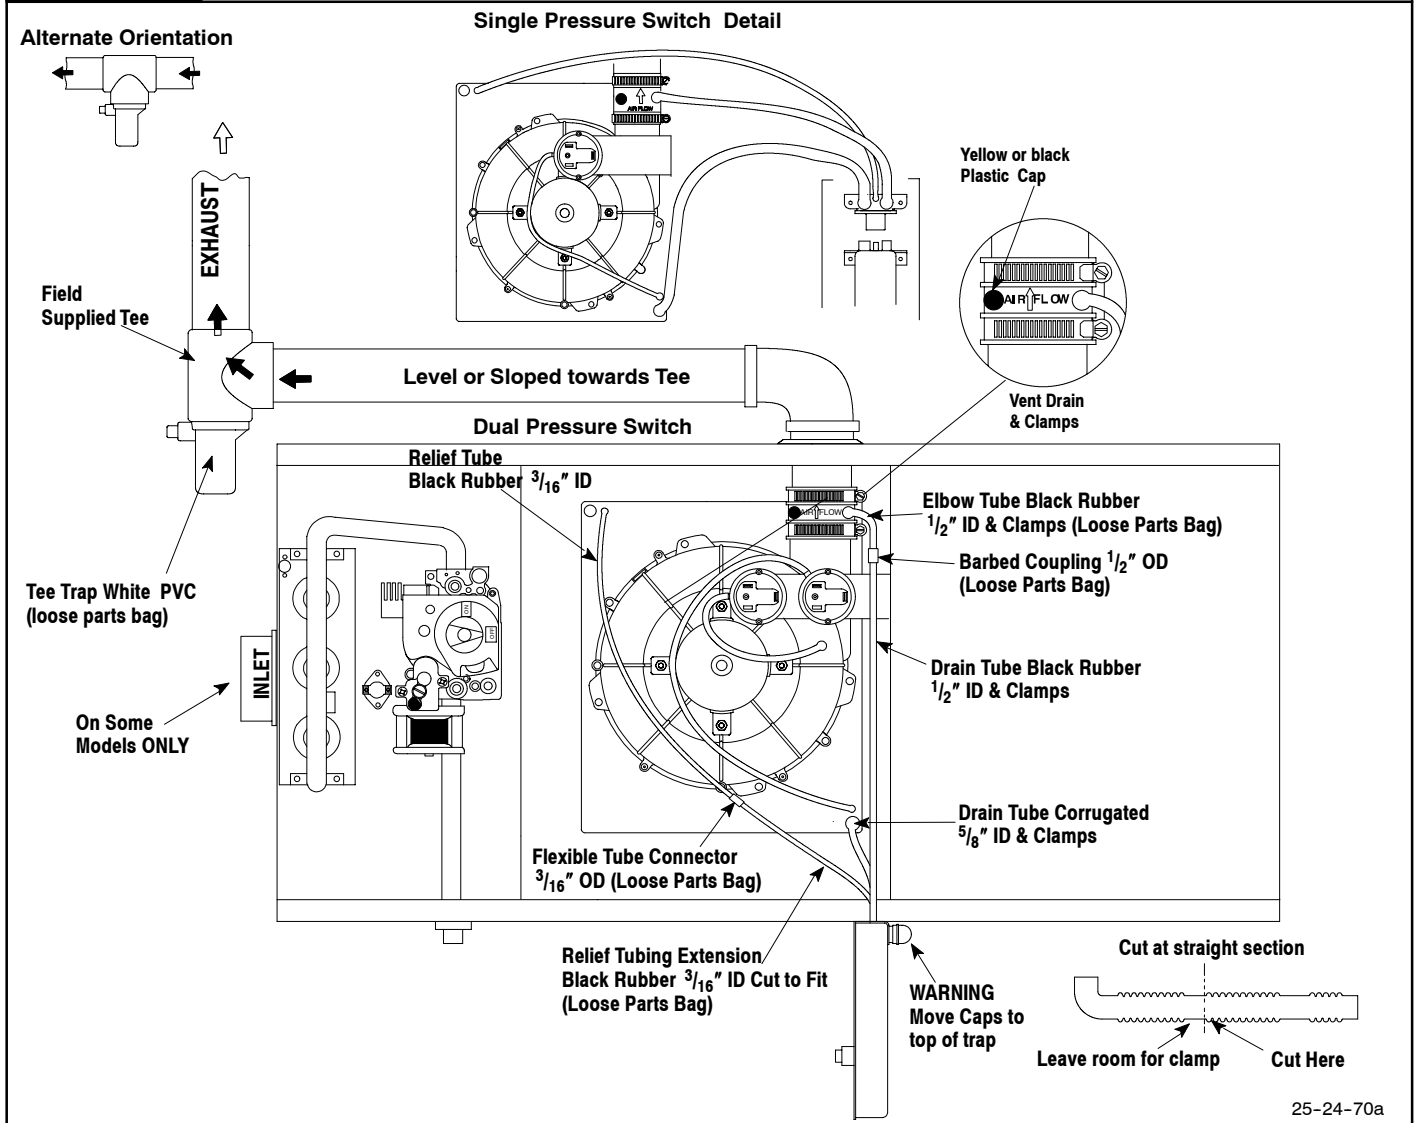

Horizontal Left-Side Vent (See Figure 16)

Remove the Drain Tee from the Vent Drain if installed (\*9MPD models only)

Rotate the inducer 180° for a side vent after loosening the 4 inducer attachment screws. Reinstall and retighten the inducer screws to 20" pounds torque.

Disconnect the hoses from the Trap assembly, and remove Trap and Trap mounting bracket from the blower compartment. Using cover plate and gasket provided in the loose parts bag, cover the hole from the burner compartment to the blower compartment and secure with screws.

Mount the Trap externally to the bottom side of the unit using the 2 screws provided in the location shown.

Cut the corrugated tube as shown in the illustration above. Connect the corrugated hose from the transition to the Trap. Secure connections with clamps.

Connect the black 1/2" ID Drain Tube from the Vent Drain to the Trap. If an extension is required, use the black 1/2" OD flexible tubing connector and the black 1/2" ID Drain Tube in the loose parts bag. Cut tube to length. Secure connections with clamps.

Connect the 3/16" ID relief tube to the middle port on the Trap. If an extension is required, use the 3/16" OD flexible tubing connector and the black 3/16" ID relief tube in the loose parts bag. Cut tube to length.

Cut an appropriate length of 2" PVC pipe, fittings and extension pipe long enough to exit the cabinet and connect the vent drain to either:

- A 2" PVC coupling fastened onto the Drain Tee

Install Tee Trap into bottom section of Tee and glue pipe.

Important: The pipe to the Tee Trap must be level or sloping towards the Tee Trap


Connect the Tee trap and the main drain line exiting the casing as shown in **Figure 19**.

**Note:** It is recommended that all PVC piping and fitting connections be fit up and inspected before final cementing. **Both the external Trap and the external Tee Trap must be primed before operation.** Verify all condensate drain connections are securely clamped. A coupling and clamps (in loose part bag) may be installed as shown for future servicing of the vent system.

A coupling and clamps (in loose part bag) may be installed as shown for future servicing of the vent system.

Figure 17

Horizontal Right thru Top

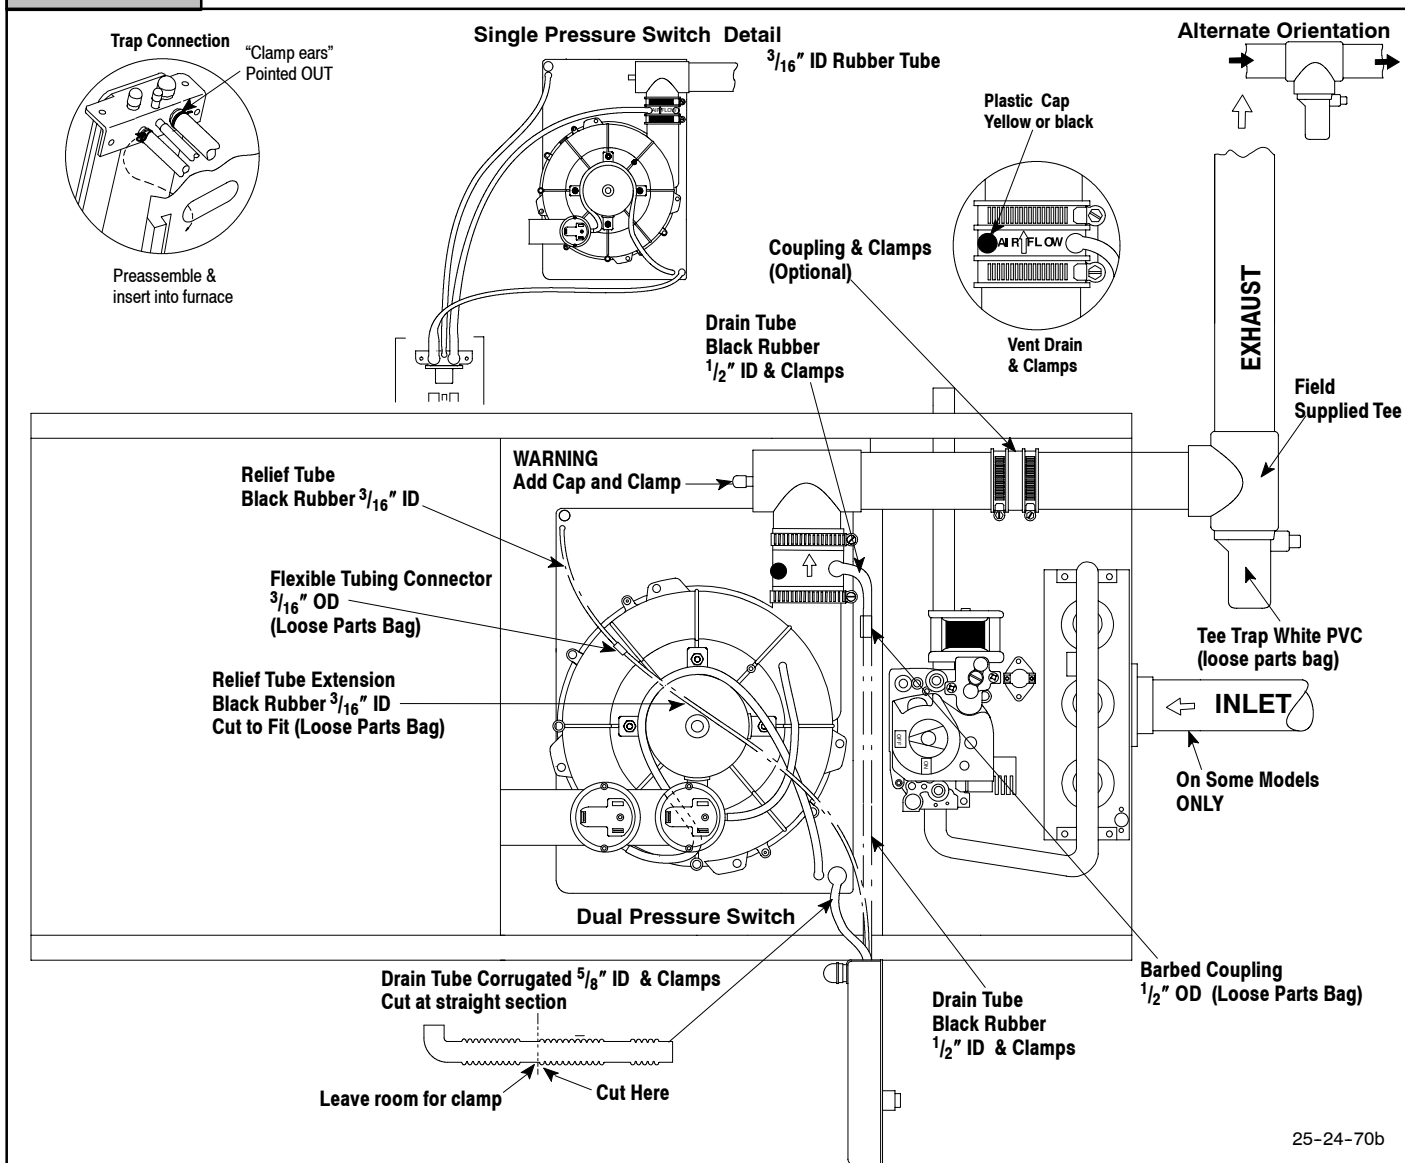

Horizontal Right Thru Top (See Figure 17)

Disconnect the hoses from the Trap assembly, and remove Trap and Trap mounting bracket from the blower compartment. Using cover plate and gasket provided in the loose parts bag, cover the hole from the burner compartment to the blower compartment and secure with screws.

Mount the Trap externally to the bottom side of the unit using the 2 screws provided in the location shown.

Cut the corrugated tube as shown in the illustration above. Connect the corrugated hose from the transition to the Trap. Secure connections with clamps.

Connect the black 1/2" ID Drain Tube from the Vent Drain to the Trap. If an extension is required, use the black 1/2" OD barbed coupling and the black 1/2" ID Drain Tube in the loose parts bag. Cut tube to length. Secure connections with clamps.

Connect the 3/16" ID relief tube to the middle port on the Trap. If an extension is required, use the clear 3/16" OD flexible tubing con-

nect and the black 3/16" ID relief tube in the loose parts bag. Cut tube to length.

Cut an appropriate length of 2" PVC pipe, fittings and extension pipe long enough to exit the cabinet and connect the vent drain to a standard field supplied 2" PVC tee

- A 2" PVC coupling fastened onto the Drain Tee

Install Tee Trap into bottom section of Tee and glue pipe.


Connect the Tee trap and the main drain line exiting the casing as shown in Figure 19.

**Note:** It is recommended that all PVC piping and fitting connections be fit up and inspected before final cementing. **Both the external Trap and the external Tee Trap must be primed before operation.** Verify all condensate drain connections are securely clamped. A coupling and clamps (in loose part bag) may be installed as shown for future servicing of the vent system.



Figure 18

Horizontal Right-Side Vent

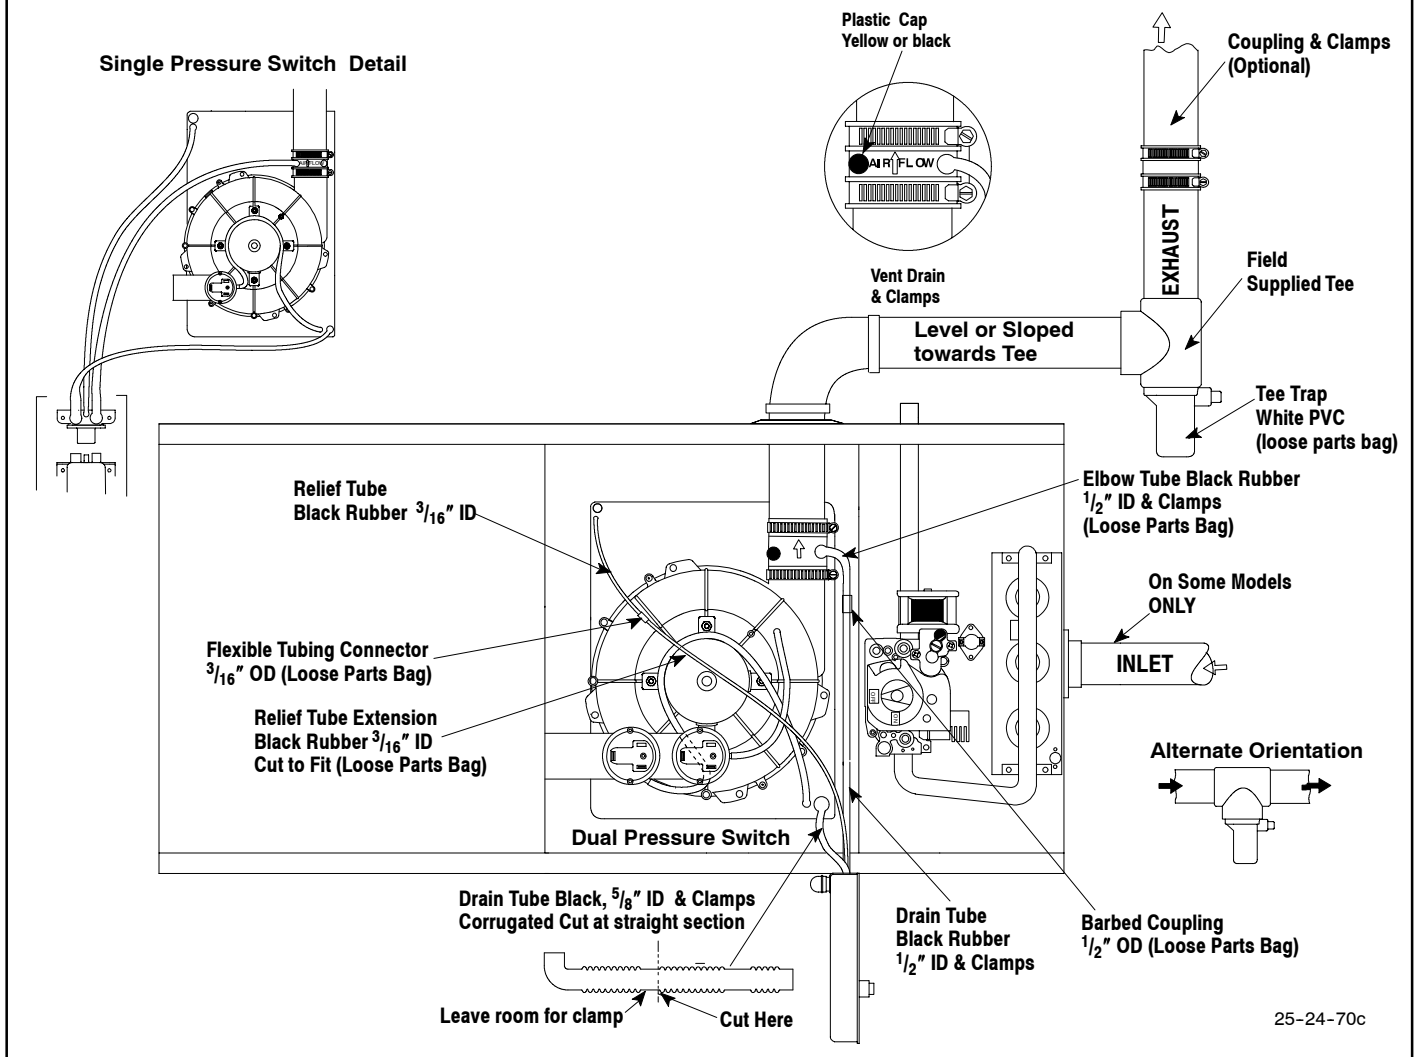

Horizontal Right Side Vent (See Figure 18)

Disconnect Drain Tee if installed

Disconnect the hoses from the Trap assembly, and remove Trap and Trap mounting bracket from the blower compartment. Using cover plate and gasket provided in the loose parts bag, cover the hole from the burner compartment to the blower compartment and secure with screws.

Mount the Trap externally to the bottom side of the unit using the 2 screws provided in the location shown.

Cut the corrugated tube as shown in the illustration above. Connect the corrugated hose from the transition to the Trap. Secure connections with clamps.

Connect the black 1/2" ID Drain Tube from the Vent Drain to the Trap. If an extension is required, use the 1/2" OD barbed coupling and the black 1/2" ID Drain Tube in the loose parts bag. Cut tube to length. Secure connections with clamps.

Connect the 3/16" ID relief tube to the middle port on the Trap. If an extension is required, use the clear 3/16" OD splice connector

and the black 3/16" ID relief tube in the loose parts bag. Cut tube to length.

Cut an appropriate length of 2" PVC pipe, fittings and extension pipe long enough to exit the cabinet and connect the vent drain to either:

- A 2" PVC coupling fastened onto the Drain Tee

Install Tee Trap into bottom section of Tee and glue pipe.


Important: The pipe to the Tee Trap must be level or sloping towards the Tee Trap

Connect the Tee trap and the main drain line exiting the casing as shown in Figure 19.

**Note:** It is recommended that all PVC piping and fitting connections be fit up and inspected before final cementing. **Both the external Trap and the external Tee Trap must be primed before operation.** Verify all condensate drain connections are securely clamped. A coupling and clamps (in loose part bag) may be installed as shown for future servicing of the vent system.

Figure 19

**Connecting Tee Trap to Condensate Trap and Main Drain Line**

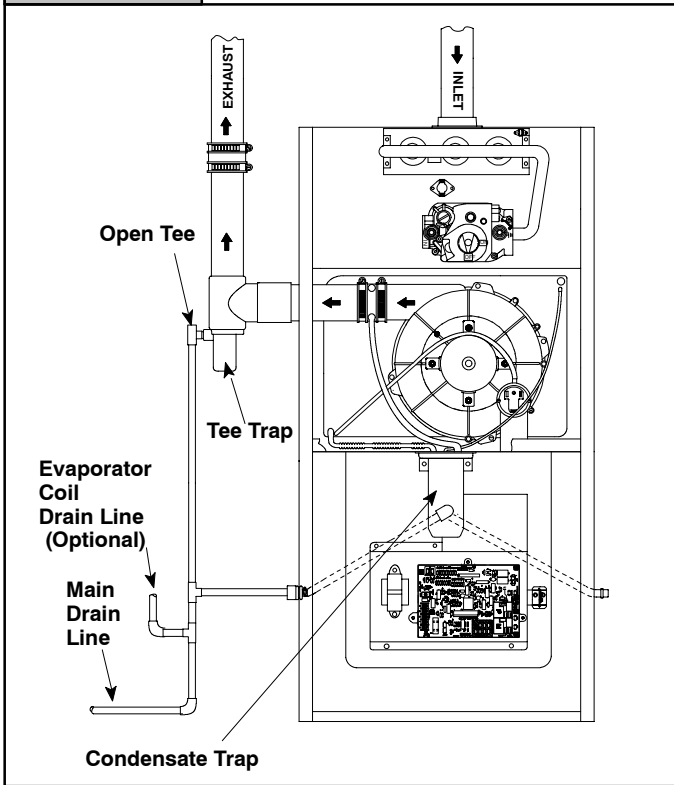

The Tee Trap must be connected to the main condensate drain line as conceptually shown above. Different installations may require slightly different orientations. The following steps apply to all installations.

1. The Tee Trap should be installed as close to the side or top of the furnace as practical. Minimize the distance between the inducer and the Tee Trap as much as possible.
2. An open tee is to be used at the Tee Trap discharge. The top end of the tee should be open to the atmosphere to eliminate potential air lock problems.
3. The drain line from the Tee Trap is to be connected to the furnace condensate trap drain line as shown above.
4. Condensate drain lines from a cooling coil may be connected downstream of the connection point of the Tee Trap and Furnace Condensate Trap.

**Important: Prime both traps with water before operation.** Failure to prime the traps may result in discharge of flue gases from the condensate drain line and open tee for a period of time, and may result in temporary lockout of the furnace upon start up. Main drain line construction is left to the discretion of the installer. It may be made of either ridged pipe or flexible tube. Tube ID should NOT be less than 1/2".

**Connecting Vent and Combustion Air Piping**

**⚠ WARNING**

**CARBON MONOXIDE POISONING HAZARD**

Failure to properly seal vent piping could result in death or personal injury.

Cement or mechanically seal all joints, fittings, etc. to prevent leakage of flue gases.

Refer to **Figure 10** through **Figure 18** that corresponds to the installation position of the furnace for the application.

Preassemble the vent and combustion air piping from the furnace to the vent termination. Do not cement the pipe joints until the pipe preassembly process is complete.

**Combustion Air Pipe Connection (Direct Vent)**

Install the air intake coupling and gasket to the furnace with the four(4) screws.

Note: The air intake coupling and gasket can be installed to the top panel to the alternate air intake locations on either the left or right side panels of the furnace.

For downflow installation, the air intake coupling and gasket must be installed to the alternate air intake location on either the left or right side panels. Remove the 3" hole plug from the furnace accessory bag and relocate to the open hole in the furnace panel. Use four screws to seal the four(4) mounting holes in the top panel next to the hole plug. Drill four(4) 7/64" diameter holes in the casing using the air intake coupling as the template.

The air intake coupling is sized for 2" PVC pipe.


Install the combustion air pipe to the air intake coupling using RTV sealant to provide for future serviceability.

**Vent Pipe Connection**

Install the vent pipe grommet to the furnace panel. Locate the grommet in the furnace panel at a location directly away from the vent fitting on the combustion blower. The grommet snaps into the 3" hole from the furnace panel. NOTE: Depending on the installation position, the vent pipe grommet will be installed to the top panel or to the alternate location on the side panels. If needed, remove the 3" hole plug from the loose parts bag and install it in the open hole in the furnace panel. (See **Figure 10** or **Figure 19**)

Install the vent pipe to the rubber coupling, the vent fitting or the PVC vent extension pipe. Securely attach using the clamp or PVC cement as required.

**Note: The vent fitting MUST be installed with the air flow marking arrow pointed toward the vent pipe. (See Figure 20) Some installations require the vent fitting to be installed with a 5° to 10° downward slope. (See Figure 10 thru Figure 19)**

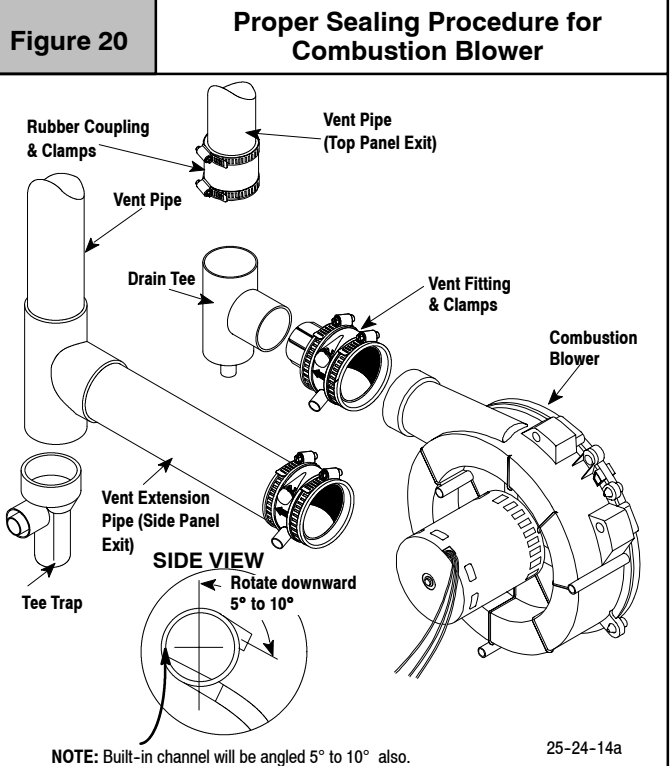

## Joining Pipe and Fittings



# WARNING

### CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in death or personal injury.

Do NOT use solvent cement that has become curdled, lumpy or thickened and do NOT thin. Observe precautions printed on containers. For applications below 32° F., use only low temperature type solvent cement. Poor joints may lead to disconnected or leaking vent pipe joints allowing carbon monoxide to enter the living space.

1. Cut pipe end square, remove ragged edges and burrs. Chamfer end of pipe, then clean fitting, socket and pipe joint of all dirt, grease, or moisture.

**NOTE:** Stir the solvent cement frequently while using. Use a natural bristle brush or the dauber supplied with the cement. The proper brush size is one inch.

2. After checking pipe and socket for proper fit, wipe socket and pipe with cleaner-primer. Apply a liberal coat of primer to inside surface of socket and outside of pipe. Do NOT allow primer to dry before applying cement.
3. Apply a thin coat of cement evenly in the socket. Quickly apply a heavy coat of cement to the pipe end and insert pipe into fittings with a slight twisting movement until it bottoms out.

**NOTE:** Cement **MUST** be fluid while inserting pipe. If **NOT**, recoat pipe.

4. Hold the pipe in the fitting for 30 seconds to prevent the tapered socket from pushing the pipe out of the fitting.
5. Wipe all excess cement from the joint with a rag. Allow 15 minutes before handling. Cure time varies according to fit, temperature and humidity.

## Connecting Vent Pipes and Termination

**NOTE:** Combustion air intake and vent **MUST** terminate in the same atmospheric pressure zone. If installation is in a cold climate (sustained temperatures 0° F and below for 24 or more consecutive hours), increase the minimum distance between vent pipe and air intake from 8" to 18".




# WARNING

### CARBON MONOXIDE POISONING HAZARD.

Failure to properly vent this furnace could result in death or personal injury.

Maintain a minimum of 36" between combustion air inlet and clothes dryer vent. Terminate the combustion air intake as far as possible from any air conditioner, heat pump, swimming pool, swimming pool pumping, chlorinator or filtration unit.

1. Install all couplings, nipples and elbows using proper procedures for **Joining Pipe and Fittings** and maintain spacing between vent and combustion air piping as indicated in **Figure 21** through **Figure 28**.

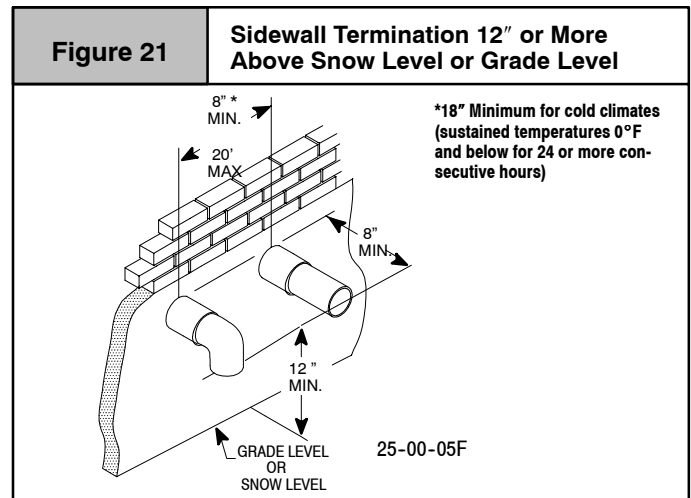

## Horizontal Termination

1. Cut two holes. 2<sup>1</sup>/<sub>2</sub>" for 2" pipe, 3" for 2<sup>1</sup>/<sub>2</sub>" pipe, or 3<sup>1</sup>/<sub>2</sub>" for 3" pipe. Do **NOT** make the holes oversized, or it will be necessary to add a sheet metal or plywood plate on the outside with the correct size hole in it.
2. Check hole sizes by making sure it is smaller than the couplings or elbows that will be installed on the outside. The couplings or elbows **MUST** prevent the pipe from being pushed back through the wall.
3. Extend vent pipe and combustion air pipe through the wall <sup>3</sup>/<sub>4</sub>" to 1" and seal area between pipe and wall.
4. Install the couplings, nipple and termination elbows as shown and maintain spacing between vent and combustion air piping as indicated in **Figure 21** and **Figure 22**.



A metal shield is recommended 18" x 18" min. or 18" min. diameter around the vent termination at the exterior wall to protect the house exterior materials from flue product or condensation (freezing) damage.

## Using Exterior Risers

1. Install elbows and pipe to form riser as shown in **Figure 22**.
2. Secure vent pipe to wall with galvanized strap or other rust resistant material to restrain pipe from moving.
3. Insulate pipe with Armaflex or equivalent moisture resistant closed cell foam insulation or Fiberglass insulation if boxed in and sealed against moisture.

## Vertical Termination

1. **Figure 23** shows the proper installation and clearances for vertical vent termination. The vertical roof termination should be sealed with a plumbing roof boot or equivalent flashing. The inlet of the intake pipe and end of the exhaust vent must be terminated no less than 12" above the roof or snow accumulation level, and 12" away from a vertical wall or other protrusion.
2. If the vent system is installed in an existing chimney make sure clearances shown in **Figure 23** are maintained. Horizontal section before the termination elbow can be extended on the inlet air to provide necessary clearance.

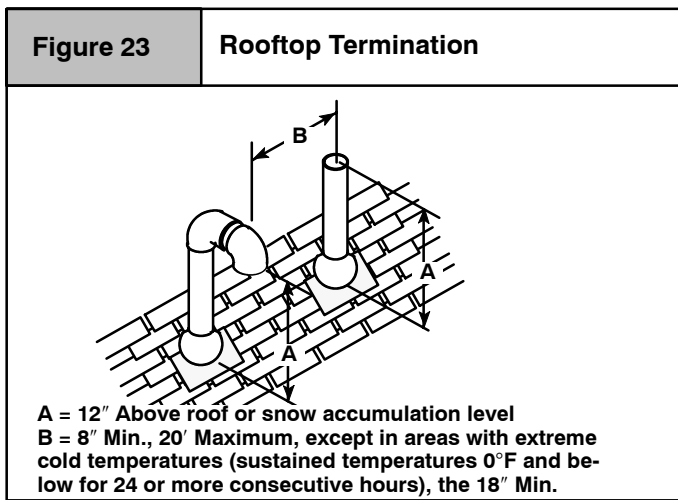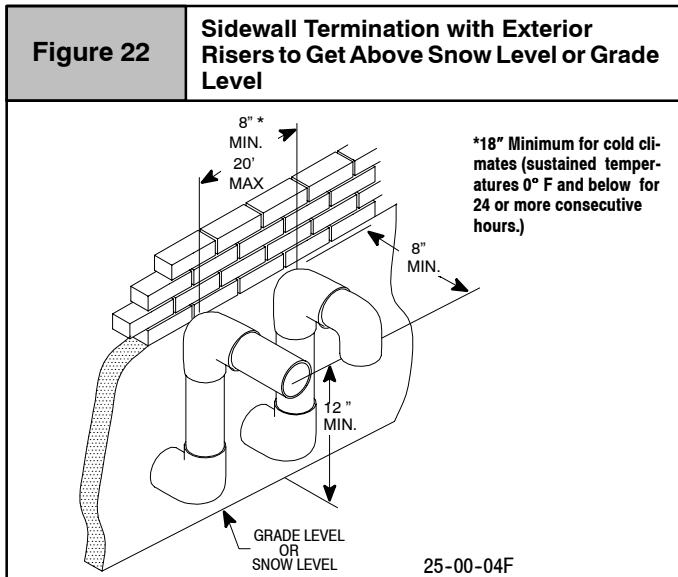




### Vent Termination Shielding




Under certain wind conditions some building materials may be affected by flue products expelled in close proximity to unprotected surfaces. Sealing or shielding of the exposed surfaces with a corrosion resistant material (such as aluminum sheeting) may be required to prevent staining or deterioration. The protective material should be attached and sealed (if necessary) to the building before attaching the vent terminal.

### Multi Vent Termination Clearances

When two (2) or more furnaces are vented near each other, each furnace must be individually vented.

Two (2) vent terminations may be installed as shown in **Figure 24**, **Figure 25**, **Figure 26**, **Figure 27**, **Figure 28** and **Figure 29**, but the next vent termination must be at least 36" away from first 2 terminations. It is important that vent terminations be made as shown to avoid recirculation of flue gases.

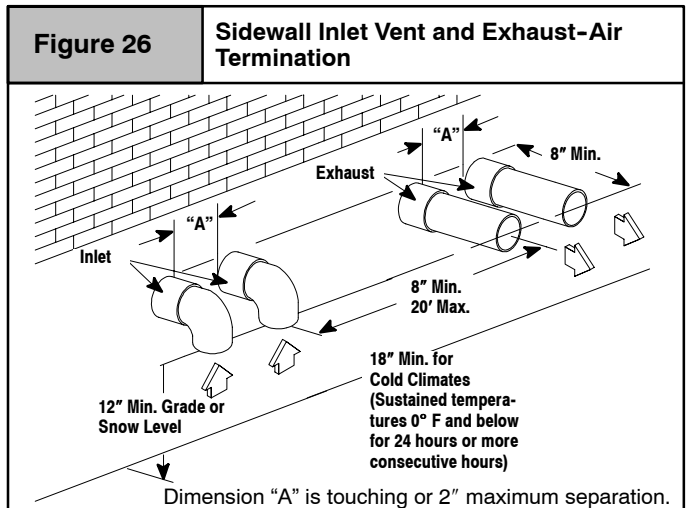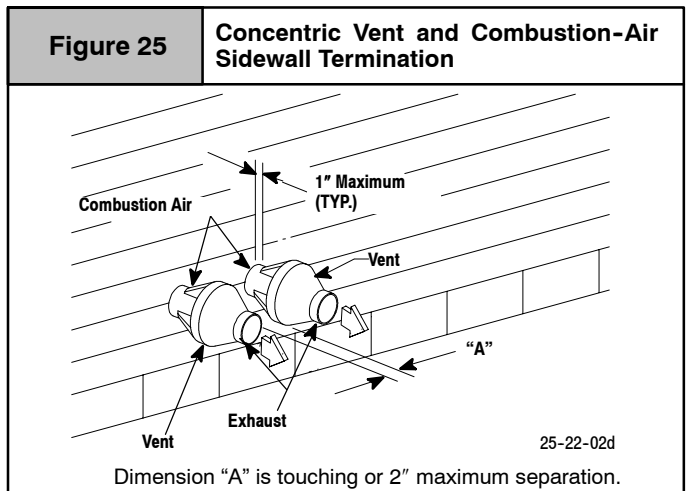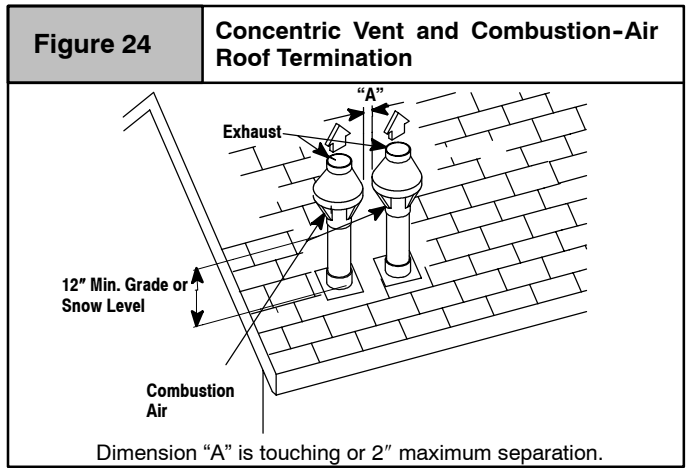

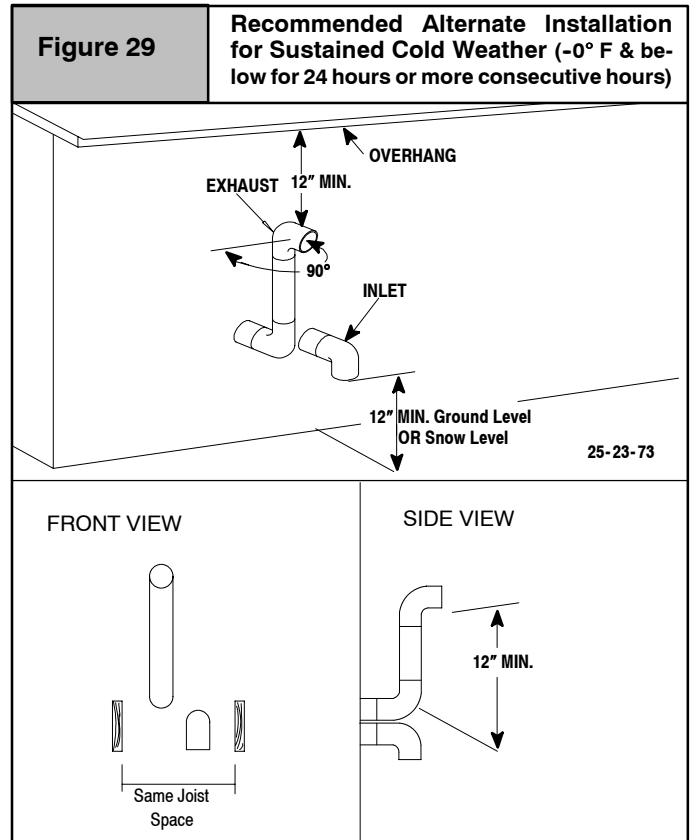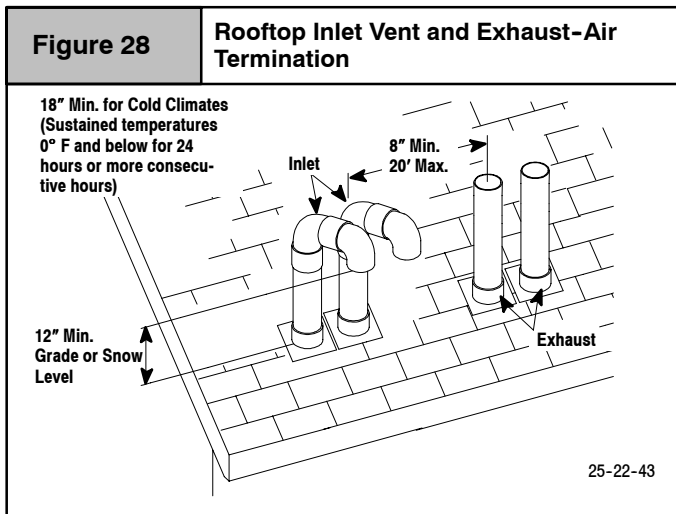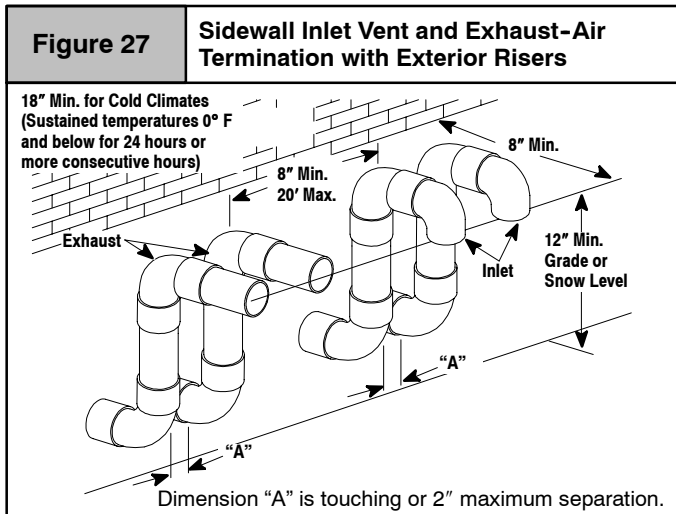

## 5. Concentric Vent Termination

### Vent Termination Clearances

**⚠ WARNING**

**CARBON MONOXIDE POISONING, FIRE AND EXPLOSION HAZARD.**

Failure to properly vent this furnace could result in death, personal injury and/or property damage.

Inlet and outlet pipes may NOT be vented directly above each other (standard vent terminals).

1. Determine termination locations based on clearances specified in following steps and as shown in **Figure 8**, **Figure 30** through **Figure 35**.
2. The vent termination must be located at least 12" above ground or normally expected snow accumulation levels.
3. Do **NOT** terminate over public walkways. Avoid areas where condensate may cause problems such as above planters, patios, or adjacent to windows where steam may cause fogging.

4. The vent termination shall be located at least 4' horizontally from any electric meter, gas meter, gas regulator, and any relief equipment. These distances apply **ONLY** to U.S. installations.
5. The vent termination is to be located at least 3' above any forced air inlet located within 10' ; and at least 10' from a combustion air intake of another appliance, except another direct vent furnace intake.
6. In Canada, the *Canadian Fuel Gas Code* takes precedence over the preceding termination instructions.

### Concentric Vent Termination - Kit # NAHA001CV & NAHA002CV

These kits are for vertical or horizontal termination of the combustion air inlet and the exhaust vent pipes on Category IV gas-fired condensing furnaces. The NAHA001CV kit can be used for 3" diameter pipe systems. The NAHA002CV kit can be used for 2" diameter pipe system. Refer to **Table 5** for the correct pipe size for the furnace. Both the combustion air inlet and the exhaust vent pipes must attach to the termination kit. The termination kit must terminate outside the structure and must be installed per the instructions outlined below for vertical or horizontal termination. Vertical termination is preferred. Field supplied pipe and fittings are required to complete the installation.

## Vertical & Horizontal Termination

1. Determine the pipe diameters required for the installation from **Table 5** and **Figure 32**.
2. Determine the best location for the termination kit. See **Figure 31** for vertical termination or **Figure 30** and **Figure 35** for horizontal termination. Roof termination is preferred since it is less susceptible to damage, has reduced intake contaminants and less visible vent vapor. For side wall termination, consideration should be given to: 1) possible damage from the vapors to plants/shrubs, other equipment and building materials, 2) possible damage to the terminal from foreign objects, 3) wind effects that may cause recirculation of flue products, debris or light snow and 4) visible vent vapor.

Figure 30	Kit Components
<b>Kit Contents:</b>	
3" Rain Cap or 2" Rain Cap	
3" Diameter SDR-26 Pipe, 19 <sup>1</sup> / <sub>2</sub> " Long or	
4" Diameter SDR-26 Pipe, 37 <sup>1</sup> / <sub>8</sub> " Long,	
2" Diameter SDR-26 Pipe, 31 <sup>5</sup> / <sub>8</sub> " Long or	
2 <sup>1</sup> / <sub>2</sub> " Diameter SDR-26 Pipe, 24" Long,	
3" Y Concentric Fitting or 2" Y Concentric Fitting	
2" or 3" Dia. Rain Cap	
25-22-03	

Figure 32	Concentric Vent Dimensional Drawing			
25-22-03				
Model	A*	B	C	D**
NAHA002CV	33 <sup>3</sup> / <sub>8</sub>	2	3 <sup>1</sup> / <sub>2</sub>	16 <sup>7</sup> / <sub>8</sub>
NAHA001CV	38 <sup>7</sup> / <sub>8</sub>	3	4 <sup>1</sup> / <sub>2</sub>	21 <sup>1</sup> / <sub>8</sub>
* = Dimension will change accordingly as dimension D is lengthened or shortened.				
** = Dimension D may be lengthened to 60" may also be shortened by cutting the pipes provided in the kit to 12" minimum				

Figure 31	Concentric Vent Roof Installation
<p><b>Note:</b> Support must be field installed to secure termination kit to structure.</p>	
25-22-02	

3. Cut one 5" diameter hole through the structure for the NAHA001CV Kit or one 4" diameter hole for the NAHA002CV Kit.
4. Dimension D may be lengthened to 60" max. or shortened by cutting the pipes to 12" min. Dimension A will change according to D dimension. (See **Figure 32**)

Table 5	Concentric Termination Kit NAHA001CV & NAHA002CV Venting Table Dual Piping ONLY
<b>50,000 &amp; 75,000 Btuh Furnaces</b>	
NAHA002CV - 35' & (4) 90° elbows with 2" PVC pipe	
<b>100,000 &amp; 125,000 Btuh Furnaces</b>	
NAHA001CV - 35' & (4) 90° elbows with 3" PVC pipe	
<ol style="list-style-type: none"> <li>1. Do not include the field supplied 45° elbow in the total elbow count.</li> <li>2. If more than four elbows are required, reduce the length of both the inlet and the exhaust pipes five feet for each additional elbow used.</li> <li>3. Elbows are DWV long radius type for 2" and 3" vents.</li> </ol>	

If more than four elbows are required, reduce the length of both the inlet and exhaust pipes 5' for each additional elbow used.


\* Feet of pipe is whichever pipe run is the longest, either inlet or outlet side.

If assembly needs to be extended to meet height or side wall thickness requirement, the two pipes supplied in the kit may be replaced by using the same diameter solid, single (no coupling connections) field supplied SDR-26 PVC (ASTM D2241) pipes. Do not extend dimension D more than 60". (See **Figure 32**)

**Do not use field supplied couplings to extend the pipes. Airflow restriction will occur and the furnace pressure switch may cause intermittent operation.**

5. Partially assemble the concentric vent termination kit. Clean and cement the parts using the procedures for Join-

ing Pipe and Fittings section of the manual. A) Cement the Y Concentric fitting to the 4" diameter kit pipe. (See **Figure 33**) B) Cement the 3" rain cap to the 2<sup>1</sup>/<sub>2</sub>" diameter kit part. (See **Figure 33**) **NOTE:** A field supplied stainless steel screw may be used to secure the rain cap to the pipe instead of cementing when field disassembly is desired for cleaning (See **Figure 33**)

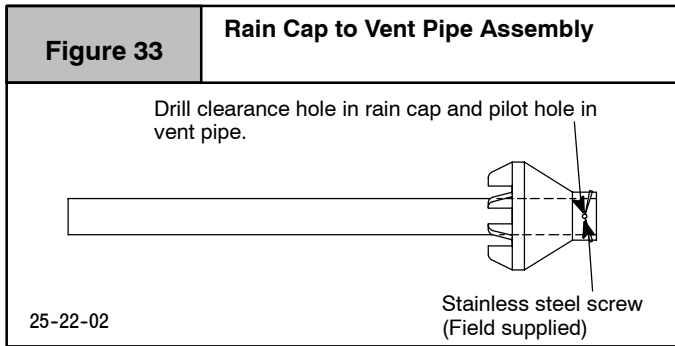

**⚠ WARNING**

**CARBON MONOXIDE POISONING HAZARD.**  
 Failure to follow this warning could result in death or personal injury.

When using the alternate screw assembly method, drill a clearance hole in the rain cap and a pilot hole in the vent pipe for the screw size being used. Failure to drill adequate holes may cause cracking of the PVC components, allowing flue gases to be recirculated.



**⚠ WARNING**

**CARBON MONOXIDE POISONING HAZARD.**  
 Failure to follow this warning could result in death or personal injury.

Do not operate the furnace with the rain cap removed as recirculation of the flue gases may occur. Water may also collect inside the larger combustion air pipe and flow to the burner enclosure.

6. Install the Y concentric fitting and the pipe assembly through the structure's hole. For vertical termination, install the parts through the field supplied roof boot/flashing. **NOTE:** Do not allow insulation or other materials to accumulate inside the pipe assembly when installing through the structure's hole.
7. Secure the assembly to the structure as shown in **Figure 31** or **Figure 35** using field supplied metal strapping or equivalent material.

**NOTE:** Ensure the termination height is above the roof surface or anticipated snow level as shown in **Figure 31** for vertical termination. Ensure the termination location clearance dimensions are as shown in **Figure 34** and **Figure 35** for horizontal termination.

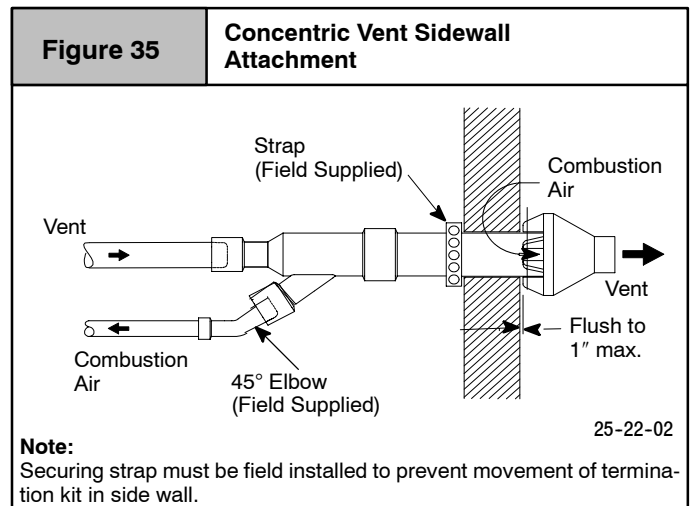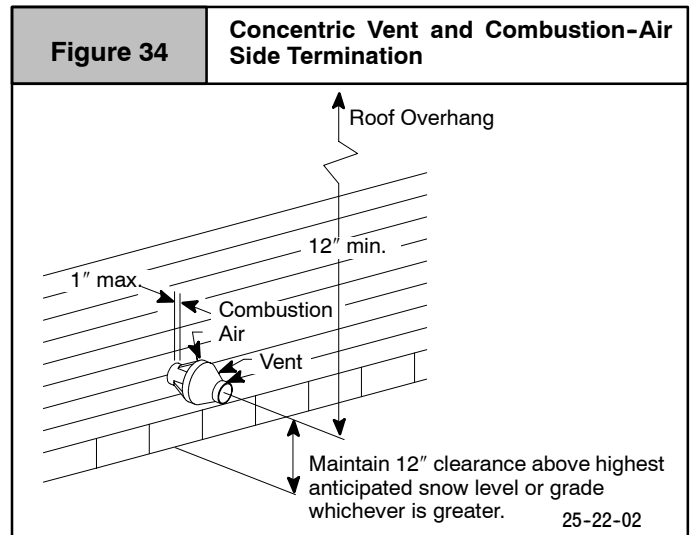

8. Install the rain cap and the small diameter pipe assembly in the Y concentric fitting and the large pipe assembly. Ensure that the small diameter pipe is bottomed out and securely cemented in the Y concentric fitting.
9. Cement the furnace combustion air and vent pipes to the concentric vent termination assembly. See **Figure 31** or **Figure 35** for proper pipe attachment.
10. Operate the furnace through one heat cycle to ensure combustion air and vent pipes are properly connected to the concentric termination connections.

## 6. Gas Supply and Piping



### WARNING

**CARBON MONOXIDE POISONING, FIRE AND EXPLOSION HAZARD.**

Failure to follow these instructions could result in death, personal injury and/or property damage.

Models designated for Natural Gas are to be used with Natural Gas ONLY, unless properly converted to use with LP gas.

**NOTE:** The rating plate is stamped with the model number, gas type and gas input rating. In addition, models manufactured for sale in Canada have orifice size information stamped on the rating plate.

### Gas Piping Requirements

1. Properly size gas pipe to handle combined appliance load or run gas pipe directly from gas meter or LP gas regulator. Refer to NFGC and ANSI Z223.1 for proper gas pipe size.
2. Install correct pipe size for run length and furnace rating.
3. Measure pipe length from gas meter or LP second stage regulator.

**NOTE:** In the state of Massachusetts:

1. Gas supply connectors MUST be performed by a licensed plumber or gas fitter.
2. When flexible connectors are used, the maximum length shall not exceed 36" (915 mm).
3. When lever handle type manual equipment shut off valves are used, they shall be T-handle valves.
4. The use of copper tubing for gas piping is NOT approved by the state of Massachusetts.

**NOTE:** Refer to **Figure 36** or **Figure 37** for the general layout at the furnace. The rules listed apply to natural and LP gas pipe installations.

**NOTE:** On the Dual Certified or Direct Vent models, install the gas pipe grommet to the furnace side panel with the gas pipe entry. If needed, remove the 2" hole plug from the plastic accessory bag and relocate to the open hole in the furnace side panel.



### WARNING

**FIRE OR EXPLOSION HAZARD**

Failure to properly install metal gas connector could result in death, personal injury and/or property damage.

A flexible corrugated metal gas connector must be properly installed, shall not extend through the side of the furnace, and shall not be used inside the furnace.

Black iron pipe shall be installed at the furnace gas control valve and extend a minimum of 2" outside furnace casing.

4. Use black iron or steel pipe and fittings or other pipe approved by local code.
5. Use ground joint unions and install a drip leg no less than 3" long to trap dirt and moisture before it can enter gas valve.
6. Use two pipe wrenches when making connections to prevent gas valve from turning.
7. Install a manual shut-off valve external to furnace casing and tighten all joints securely.
8. If local codes allow the use of flexible gas appliance connectors, always use a new listed connector. Do not use a connector which has previously serviced another gas appliance.

**Figure 36**

**Typical Gas Piping for Upflow**


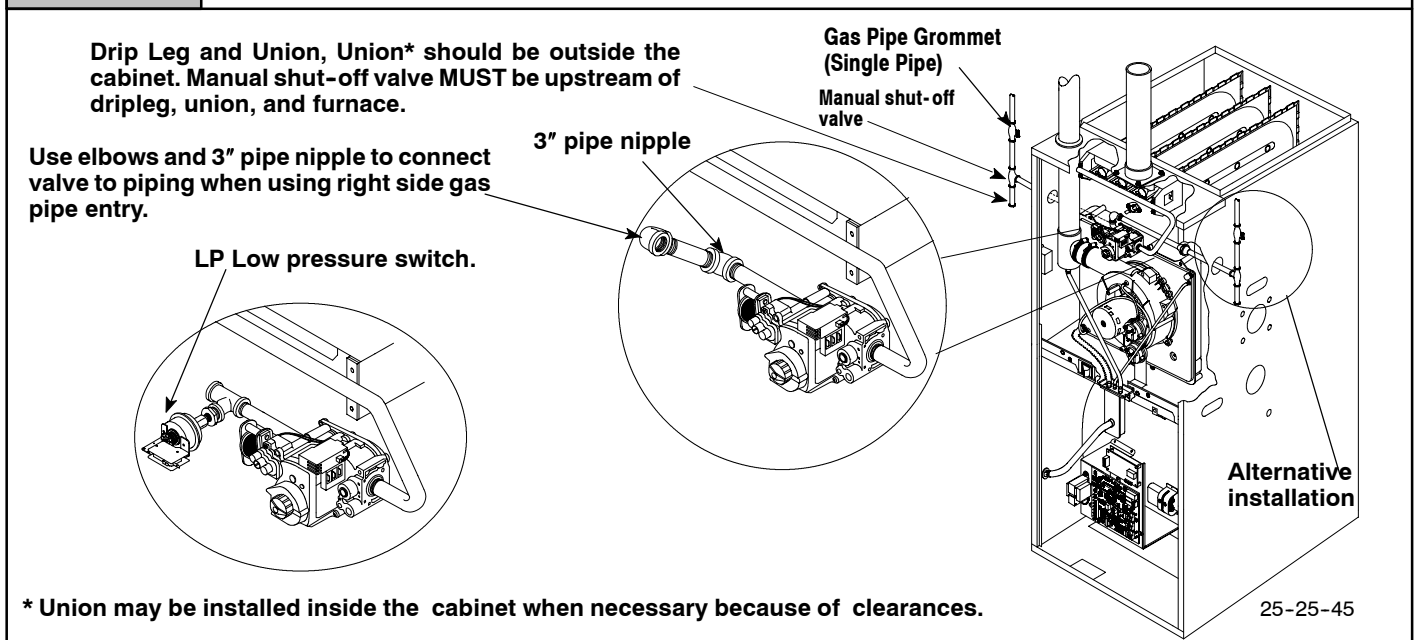




Figure 37

Typical Gas Piping for Downflow

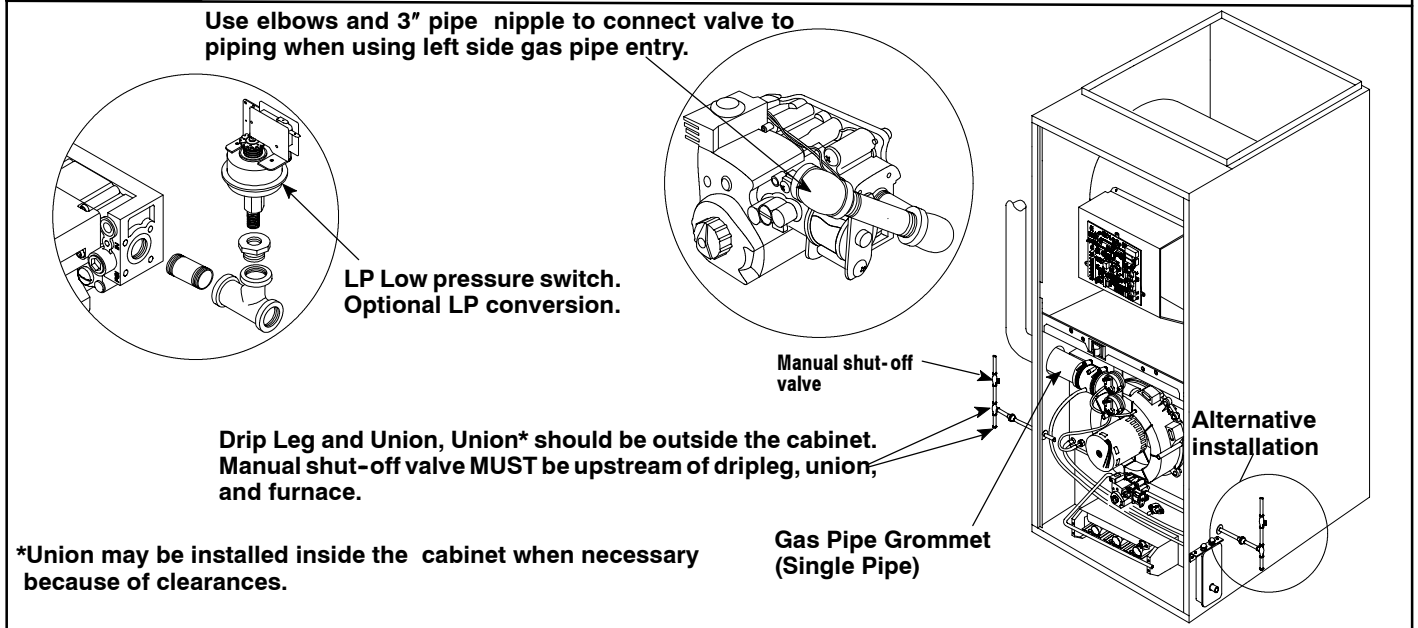

**Additional LP Connection Requirements**

1. Have a licensed LP gas dealer make all connections at storage tank and check all connections from tank to furnace.
2. If copper tubing is used, it **MUST** comply with limitation set in National Fuel Gas Code or CGA codes.
3. Two-stage regulation of LP gas is recommended.

**LP Conversion**

An accessory kit shall be used to convert to propane gas use, see the furnace rating plate for the LP conversion accessory kit part number.

1. A 1/8" NPT plugged fitting, accessible for a test gauge connection, must be installed immediately upstream of the gas supply connection to furnace.
2. Gas input to burners **MUST NOT** exceed the rated input shown on rating plate.
3. Do **NOT** allow minimum gas supply pressure to vary downward. Doing so will decrease input to furnace. Refer to **Table 6** or **Table 7** for normal gas supply and manifold pressures.

**Gas Supply Pressure**

Gas supply pressure should be within minimum and maximum values listed on rating plate. Pressures are usually set by gas suppliers.

**Manifold Gas Pressure Adjustment (Hi & Lo Fire)**

**NOTE:** Make adjustment to manifold pressure with burners operating.

**General Derating Rules**

1. These furnaces may be used at full input rating when installed at altitudes up to 2,000'. When installed above 2,000', the input must be decreased 2% (natural) or 4% (LP) for each 1000' above sea level in the USA. In Canada, the input rating must be derated 5% (natural) or 10% (LP) for each 1000' above sea level.
2. For operation with natural gas at altitudes above 2,000', orifice change and/or manifold pressure adjustments may be required for the gas supplied. First consult your local gas supplier, then refer to **Table 6** for required pressure change and/or orifice change for high altitudes.
3. For operation with LP gas, gas orifices **MUST** be changed and manifold pressure **MUST** be *maintained* as per **Table 7**. Orifices can be ordered through our distributor. (See **Figure 38**)

**⚠ WARNING**

**FIRE, EXPLOSION, UNIT DAMAGE HAZARD.**

Failure to follow this warning can result in death, property damage and/or personal injury.

An LP conversion accessory kit is required when operating the furnace with LP gas.

**Supply Pressure**

**⚠ WARNING**

**FIRE HAZARD.**

Failure to properly set input pressure could result in death, personal injury and/or property damage.

Do **NOT** set input rating above that shown on rating plate.

High Altitude Input Rate = Nameplate Sea Level Input Rate x (Multiplier) [USA]		
Elevation	High Altitude Multiplier	
	Natural Gas	LP Gas
2001' - 3000'	0.95	0.90
3001' - 4000'	0.93	0.86
4001' - 5000'	0.91	0.82
5001' - 6000'	0.89	0.78
6001' - 7000'	0.87	0.74
7001' - 8000'	0.85	0.70

\* Based on mid-range of elevation.

## MANIFOLD PRESSURE AND ORIFICE SIZE FOR HIGH ALTITUDE APPLICATIONS

Table 6	NATURAL GAS MANIFOLD PRESSURE (" w.c.)																				
	MEAN ELEVATION FEET ABOVE SEA LEVEL																				
	0 to 2000			2001 to 3000			3001 to 4000			4001 to 5000			5001 to 6000			6001 to 7000			7001 to 8000		
	HEATING VALUE at ALTITUDE BTU/CU. FT.	Orifice No.	Mnflid Pressure		Orifice No.	Mnflid Pressure		Orifice No.	Mnflid Pressure		Orifice No.	Mnflid Pressure		Orifice No.	Mnflid Pressure		Orifice No.	Mnflid Pressure		Orifice No.	Mnflid Pressure
Hi			Lo	Hi		Lo	Hi		Lo	Hi		Lo	Hi		Lo	Hi		Lo	Hi		Lo
700	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	41	3.7	1.8
725	--	--	--	--	--	--	--	--	--	--	--	--	--	--	41	3.7	1.8	41	3.4	1.7	
750	--	--	--	--	--	--	--	--	--	--	--	--	--	41	3.5	1.7	42	3.6	1.7		
775	--	--	--	--	--	--	--	--	--	--	--	41	3.6	1.7	42	3.6	1.8	42	3.3	1.6	
800	--	--	--	--	--	--	--	--	41	3.6	1.8	42	3.7	1.8	42	3.4	1.7	42	3.1	1.5	
825	--	--	--	--	--	--	41	3.7	1.8	41	3.4	1.7	42	3.5	1.7	42	3.2	1.6	43	3.6	1.8
850	--	--	--	--	--	--	41	3.5	1.7	42	3.6	1.7	42	3.3	1.6	43	3.7	1.8	43	3.4	1.7
875	--	--	--	41	3.6	1.7	42	3.6	1.8	42	3.4	1.6	42	3.1	1.5	43	3.5	1.7	43	3.2	1.6
900	--	--	--	42	3.7	1.8	42	3.4	1.7	42	3.2	1.6	43	3.6	1.7	43	3.3	1.6	44	3.5	1.7
925	41	3.7	1.8	42	3.5	1.7	42	3.3	1.6	43	3.7	1.8	43	3.4	1.7	43	3.1	1.5	44	3.3	1.6
950	41	3.5	1.7	42	3.3	1.6	42	3.1	1.5	43	3.5	1.7	43	3.2	1.6	44	3.4	1.7	44	3.1	1.5
975	42	3.7	1.8	42	3.2	1.6	43	3.6	1.8	43	3.3	1.6	44	3.5	1.7	44	3.2	1.6	45	3.6	1.7
1000	42	3.5	1.7	43	3.7	1.8	43	3.4	1.7	43	3.1	1.5	44	3.3	1.6	45	3.7	1.8	45	3.4	1.7
1050	42	3.2	1.6	43	3.3	1.6	43	3.1	1.5	44	3.3	1.6	45	3.6	1.8	--	--	--	--	--	--
1100	43	3.6	1.7	44	3.5	1.7	44	3.2	1.6	45	3.6	1.8	--	--	--	--	--	--	--	--	--

NOTE: Natural gas data is based on 0.60 specific gravity. For fuels with different specific gravity consult the National Fuel Gas Code ANSI Z223.1-2002/NFPA 54-2002 or National Standard of Canada, Natural

Gas and Propane Installation Code CSA B149.1-05.

**Bold**- indicates factory orifice size.

Table 7	LPG or PROPANE GAS MANIFOLD PRESSURE (" w.c.)														
	MEAN ELEVATION FEET ABOVE SEA LEVEL														
	0 to 2000		2001 to 3000		3001 to 3999		4001 to 5000		5001 to 6000		6001 to 7000		7001 to 8000		
	Hi	Lo	Hi	Lo	Hi	Lo	Hi	Lo	Hi	Lo	Hi	Lo	Hi	Lo	
2500	10.0	4.9	10.0	4.9	9.0	4.4	10.0	4.9	9.4	4.6	8.5	4.2	10	4.9	
Orifice Size	#54		#54		#54		#55		#55		#55		#56		

NOTE: Propane data is based on 1.53 specific gravity. For fuels with different specific gravity consult the National Fuel Gas Code ANSI Z223.1-2002/NFPA 54-2002 or National Standard of Canada, Natural Gas and Propane Installation Code CSA B149.1-05.

NOTE: The derating of these furnaces at 2% (Natural Gas) and 4% (Propane Gas) has been tested and design-certified by CSA. In Canada, the input rating must be derated 5% (Natural Gas) and 10% (Propane Gas) for altitudes of 2,000 to 4,500 above sea level. Use the 2001 to 3000 column in **Table 6** and **Table 7**.

The burner orifice part nos. are as follows:

Orifice #41	1096942	Orifice #42	1011351
Orifice #43	1011377	Orifice #44	1011352
Orifice #45	1011353	Orifice #54	1011376
Orifice #55	1011354	Orifice #56	1011355

- In cases where **Table 6** is not applicable, eg. alternate input rate application, refer to above table for required high altitude input rate.

## High Altitude Air Pressure Switch

Altitudes over 4,000' may require a different air pressure switch than the one installed at the factory. Check parts list for pressure switch and consult your distributor for part number and availability. In Canada, provincial codes may govern installation of switch. Check with governing authorities.

NOTE: The derating of these units at 2% (Natural) and 4% (L.P.) has been tested and approved by CSA.

## Changing Orifices for High Altitude

**⚠ WARNING**

**ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD.**


**Failure to properly install orifices could result in death, personal injury and/or property damage.**

**Turn OFF electric power (at disconnect) and gas supply (at manual valve in gas line) when installing orifices. Installation of orifices requires a qualified service technician.**

NOTE: Main burner orifices can be changed for high altitudes.

- Disconnect gas line from gas valve.
- Remove manifold from furnace.

- Remove the orifices from the manifold and replace them with properly sized orifices.
- Tighten orifices so it is seated and gas tight. (See Figure 38)

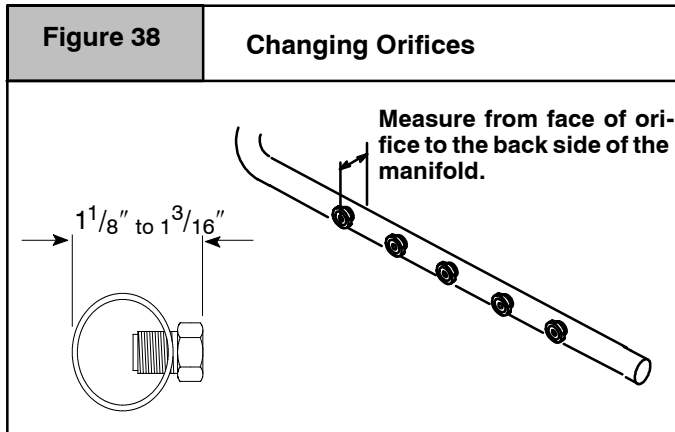

- Reinstall manifold. Ensure burners do **NOT** bind on new orifices.

## Natural Gas Input Rating Check

**NOTE:** The gas meter can be used to measure input to furnace. Rating is based on a natural gas BTU content of 1,000 BTU's per cubic meter. Check with gas supplier for actual BTU content.

- Turn **OFF** gas supply to all appliances and start furnace. Use jumper wire on R to W1 and W2 for Hi fire.
- Time how many seconds it takes the smallest dial on the gas meter to make one complete revolution. Refer to **Example**.
- Repeat steps 1 and 2 with jumper wire on R to W1 for low fire.

**NOTE:** Third (3rd) dip switch must be in "ON" position. (See Furnace Wiring Diagram). Return third (3rd) dip switch to previous setting after check.

## 7. Electrical Wiring

**⚠ WARNING**

**ELECTRICAL SHOCK HAZARD.**

**Failure to turn off power could result in death or personal injury.**

**Turn OFF electrical power at fuse box or service panel before making any electrical connections and ensure a proper ground connection is made before connecting line voltage.**

### Power Supply Wiring

The furnace **MUST** be electrically wired and grounded in accordance with local codes, or in the absence of local codes with the latest edition of The National Electric Code, ANSI NFPA 70 and/or The Canadian Electric Code CSA C22.1.

Field wiring connections must be made inside the furnace connection box. A suitable strain relief should be used at the point the wires exit the furnace casing.

Example			
Natural Gas BTU Content	No. of Seconds Per Hour	Time Per Cubic Foot in Seconds	BTU Per Hour
1,000	3,600	48	75,000
$1,000 \times 3,600 \div 48 = 75,000 \text{ BTUH}$			

### Final Check

**⚠ WARNING**

**FIRE OR EXPLOSION HAZARD**

**Failure to follow this warning exactly could result in serious injury, death and/or property damage.**

**Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion could result causing property damage, personal injury and/or loss of life.**

- The furnace and the equipment shut off valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of  $1/2$ " PSIG. Close the manual shut-off valve before testing at such pressures.
- The furnace must be isolated from the gas supply system by closing the equipment shut off valve during any pressure testing of the gas supply system at test pressure equal to or less than  $1/2$ " PSI (3.5 pa).
- When installation is complete, test all pipe connections for leaks with the gas pressure less than  $1/2$ " PSIG to the gas valve.
- Apply a commercial soap solution to all joints to test for leaks. Correct any leaks indicated by bubbles.
- Correct even the smallest leak at once.
- Check for leaks at gas valve and orifice connections to the burner manifold along with the pilot tube connections to the valve and pilot assembly while the furnace is operating.

**NOTE:** Furnace will not have normal operation is line polarity is reversed. Check ALL field and control connections prior to operation.

**Copper conductors shall be used.** Line voltage wires should conform to temperature limitation of 63° F (35° C) rise and be sized for the unit maximum amps stated on the rating plate. Add the full load amps for potential field-installed accessories such as electronic air cleaners and humidifiers that would receive power from the furnace control. The furnace control is rated for a maximum of 1.0 amps combined for EAC and HUM. Consult NEC or local codes for proper wire and circuit sizing.

### J-Box Relocation

The J-box is installed on left side of casing. An alternate J-box location on right side can be used.

- Remove bag containing two hole plugs and two self tapping screws from loose parts bag in blower compartment.
- Remove two screws holding J-box to casing.
- Install large hole plug from loose furnace accessory bag into the left J-box location.
- Clip wire tie holding J-box wires.

5. Move J-box to alternate location and attach using two self tapping screws from bag.
6. Apply two hole plugs from bag at left J-box location.

## Thermostat

The 2-stage furnace control will operate with either a single stage or a two stage heating thermostat and will provide 2-stage heating operation.

For **single-stage** thermostat installations, the R and W wires from the thermostat connect to the R and W1 connections on the furnace control.

**Note:** The TT (Thermostat Type) DIP switch (SW1-3) should be in the off position for the furnace to operate properly with a single-stage thermostat. Failure to change DIP switch with single stage thermostat will result in Low Heat operation ONLY. (See **Figure 39** and wiring diagram)

During operation, the furnace will operate on low Heat for up to 12 minutes. If the heat request exists for more than 12 minutes, the furnace will automatically shift to the high Heat mode for the remaining duration of the heating cycle.

For **2-stage** thermostat installations, the R, W1 and W2 wires from the thermostat connect to the R, W1 and W2 connections on the furnace control. Set TT Dip switch (SW1-3) to ON position. During operation, the furnace will shift from Low Heat to high Heat as requested by the thermostat.

Set thermostat heat anticipator in accordance with the *Technical Support Manual*.

Heat anticipator setting will need to be measured if 24VAC humidifier is installed. Measure current in series from R to W1 at the thermostat. Be sure 24VAC humidifier is wired up to control. Allow furnace to operate for 2 minutes before recording the AC amperage reading. Set anticipator on thermostat to recorded value.

Thermostat location has an important effect on the operation of the furnace. Follow instructions included with thermostat for correct mounting and wiring.

Low voltage connections to furnace must be made on terminal board to furnace control. (See **Figure 40**)

If cooling is used, the **Y** and **G** from the thermostat must be connected to the control board **Y** and **G** to energize cooling blower speed.

## Optional Equipment

All wiring from furnace to optional equipment **MUST** conform to local codes or, in the absence of local codes with the latest edition of The National Electric Code, ANSI NFPA 70 and/or The Canadian Electric Code CSA C22.1. Install wiring in accordance with manufacturer's instructions. The wiring **MUST** have a minimum temperature rating of 105° C. codes or, in the absence of local codes, the applicable national codes. Install wiring in accordance with manufacturer's instructions.

## Humidifier/Electronic Air Cleaner

The furnace is wired for humidifier and/or electronic air cleaner connection.

**HUMIDIFIER** – The HUM (115) is energized when the pressure switch closes on a call for heat. The HUM is energized when the inducer is energized.


**ELECTRONIC AIR CLEANER** – EAC is energized when there is a blower speed call, except is NOT energized when blower operates in the hard-wired continuous fan mode.

## Furnace Control

The furnace control is preset at the factory with a fixed blower **ON** delay of 30 seconds in the heating mode. The blower **OFF** timing is preset at 140 seconds. If desired, the fan **OFF** delay can be reset to obtain the longest delay times while still maintaining comfort levels. See "Furnace Wiring Diagram".

## Dehumidification - Variable Speed ONLY (\*9MPV)

The furnace control is wired for 24 VAC normally-open (N/O) dehumidistat connection. Connect dehumidistat to the **Y** terminal and the 1/4" male quick connect **Dehum** terminal on the furnace control (See **Figure 40** and "Furnace Wiring Diagram".) A 20% reduction of cooling airflow will occur when the **Dehum** dehumidistat terminal is energized by being connected to **Y** during a call for cooling from the thermostat.

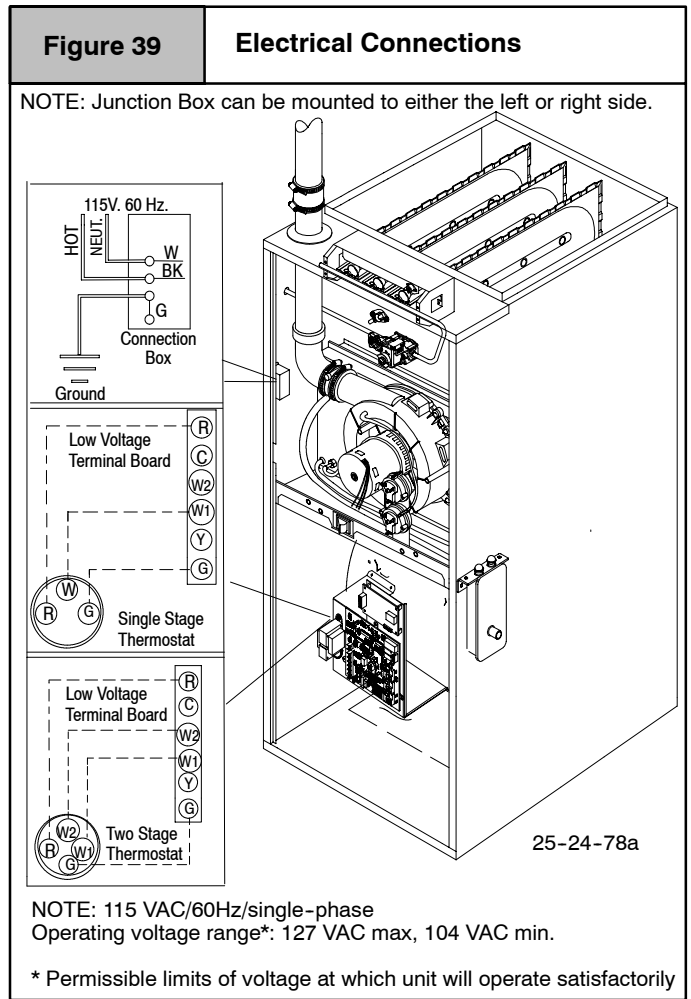

**⚠ CAUTION**

**REDUCED FURNACE LIFE HAZARD**

Failure to follow caution may result in reduced furnace life.


**Do NOT exceed 115V/1.0 amp. maximum current load for both the EAC terminal and the HUM terminal combined.**

## Furnace Control Fuse

The 24V circuit contains a 5-amp, automotive-type fuse located on furnace control board. (See **Figure 40**) Any electrical shorts of 24V wiring during installation, service, or maintenance may cause fuse to blow. If fuse replacement is required, use only a fuse of identical size (5 amp.)

Figure 40

## Control Connections

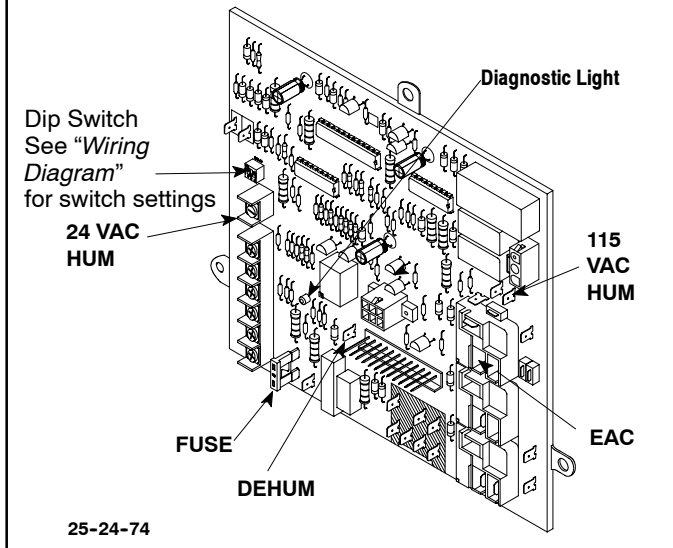

## 8. Ductwork and Filter



### WARNING

#### CARBON MONOXIDE POISONING HAZARD.

Failure to properly seal duct could result in death or personal injury.

Do NOT draw return air from inside a closet or utility room. Return air duct MUST be sealed to furnace casing.



### WARNING

#### CARBON MONOXIDE POISONING HAZARD.

Failure to follow this warning could result in death or personal injury.

Cool air passing over heat exchanger can cause condensate to form resulting in heat exchanger failure.

### Installation

**NOTE:** Design and install the air distribution system to comply with Air Conditioning Contractors of America manuals and/or NFPA pamphlets 90A and 90B or other approved methods that conform to local codes and good trade practices.

1. When furnace supply ducts carry air outside furnace area, seal return air duct to furnace casing and terminate duct outside furnace space.
2. Install air conditioning cooling coil (evaporator) on outlet side of furnace.
3. For furnaces installed without a cooling coil, it is recommended that the outlet duct be provided with a removable access panel. This panel should be accessible when the furnace is installed so the exterior of the heat exchanger can be viewed for inspections. The access panel **MUST** be sealed to prevent leaks.
4. If separate evaporator and blower units are used, install good sealing dampers for air flow control. Chilled air going through the furnace could cause condensation and shorten the furnace life.

**NOTE:** Dampers (field supplied) can be either automatic or manual. Manually operated dampers **MUST** be equipped with a means to prevent furnace or air conditioning operation unless damper is in the full heat or cool position.

### Connections

**NOTE:** On upflow installations, return air can enter through either side, both sides, or the bottom. On horizontal or downflow installations the return air must enter through the knockout opening in the lower panel of the furnace. Return air **can not** enter through rear of the furnace. When the furnace is located in an area near or adjacent to the living area, the system should be carefully designed with returns to minimize noise transmission through the return grille. Any blower moving a high volume of air will produce audible noise which could be objectionable to when the unit is located very close to living areas. It is advisable to route the return air ducts under the floor or through the attic.


1. For side connections using a 16" x 25" filter, cut out the embossed area shown in **Figure 41**. This will provide a 14<sup>1</sup>/<sub>2</sub>" x 22<sup>1</sup>/<sub>2</sub>" approximate opening.

Figure 41

## Side Return Air Cutout

A = 14<sup>1</sup>/<sub>2</sub>" Height of Cutout for 16" x 25" Filter  
B = 22<sup>1</sup>/<sub>2</sub>" Width of Cutout for 16" x 25" Filter

Embossed Area  
on Side of Furnace

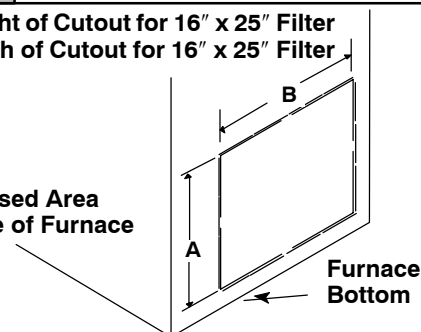

**NOTE: Furnaces with 5 TONS cooling rating REQUIRE two(2) side returns or one side return with bottom return.**

2. Bottom returns can be made by removing the knockout panel in the furnace base. Do **NOT** remove knock-out except for a bottom return.
3. Installation of locking-type dampers are recommended in all branches, or in individual ducts to balance system's air flow.
4. Non-combustible, flexible duct connectors are recommended for return and supply connections to furnace.
5. If air return grille is located close to the fan inlet, install at least one, 90° air turn between fan and inlet grille to reduce noise.

**NOTE:** To further reduce noise, install acoustical air turning vanes and/or line the inside of duct with acoustical material.

### Sizing

Existing or new ductwork **MUST** be sized to handle the correct amount of airflow for either heating only or heating and air conditioning.

### Insulation

1. Insulate ductwork installed in attics or other areas exposed to outside temperatures with a minimum of 2" insulation and vapor barrier.
2. Insulate ductwork in indoor unconditioned areas with a minimum of 1" insulation with indoor type vapor barrier.

### Filters


A Filter **must** be used:

Filters are supplied with these furnaces, and additional filters may be purchased from the distributor.

Use either filter type:



- Washable, high velocity filters are based on a maximum air flow rating of 600 FPM.
- Disposable, low velocity filters are based on a maximum air flow of 300 FPM when used with filter grille.
- See pages 51 & 57, *Circulating Air Blower Data* for additional data.

**NOTE:** Disposable, low velocity filters may be replaced with washable, high velocity filter providing they meet the minimum size areas. Washable, high velocity filters can be replaced **ONLY** with same type and size.

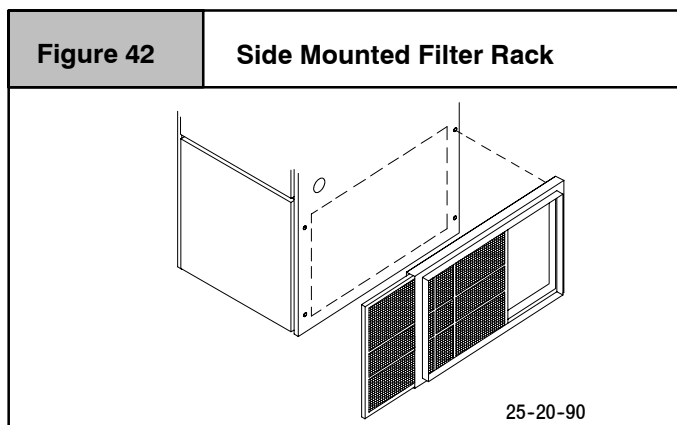

### Filter Installation using Filter Rack

When installing or removing a bottom mounted filter, slide the two side filter clips to the back of the furnace **BEFORE** installing or removing. This will allow the filter to clear the front raised edge of the furnace. Insert filter into side clips first and push filter back until it is fully engaged into back clip. When filter is in place, slide clips back into place midway on filter as shown in **Figure 43** or **Figure 44**.

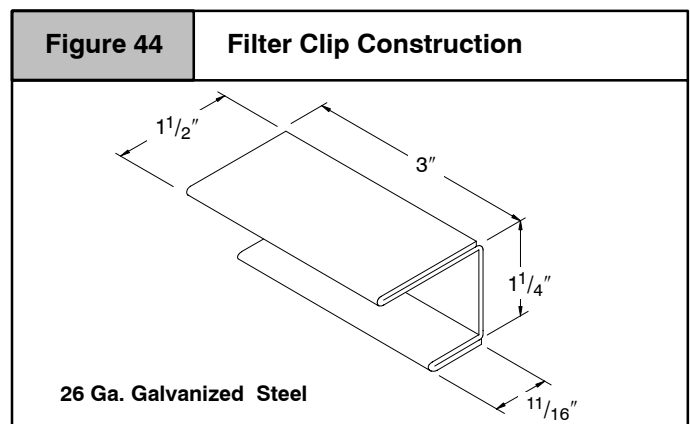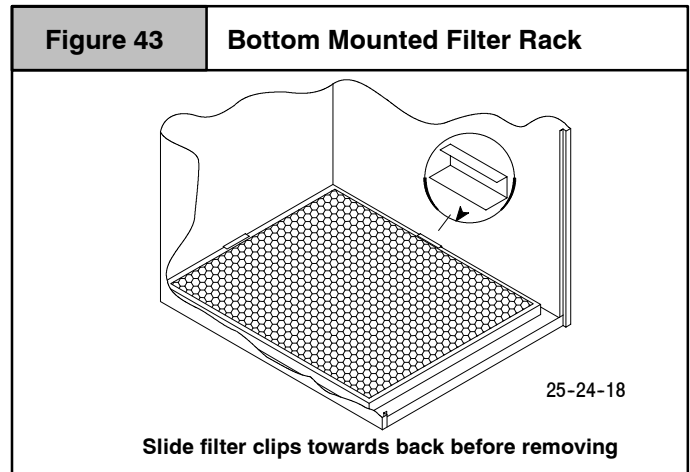

Refer to **Figure 45** and for guidelines to install filters. Furnaces which require larger filter media and have limited clearances on one side of furnace, require a standoff filter rack, see **Figure 45**, available from your distributor.


### CAUTION

If filters are only suitable for heating application, advise homeowner that filter size may need to be increased if air conditioning is added.

### Addition Of Air Conditioning

When a refrigeration coil is used in conjunction with this unit, it must be installed parallel with or on the discharge side of the unit to avoid condensation on the heat exchanger. All furnaces are designed with a break-away duct flange on the supply air side of the furnace. This allows for installation in the horizontal right or downflow applications. The coil installation instructions must be consulted for proper coil location and installation procedures. With a parallel flow arrangement, dampers must be installed to prevent chilled air from entering the furnace. If manually operated dampers are used, they must be equipped with a means to prevent operation of either unit unless the damper is in full heat or full cool position.

A 3" clearance is required on the right side of the furnace in order to run the condensate drain line. Copper, iron or plastic tubing may be used for the condensate drain line.

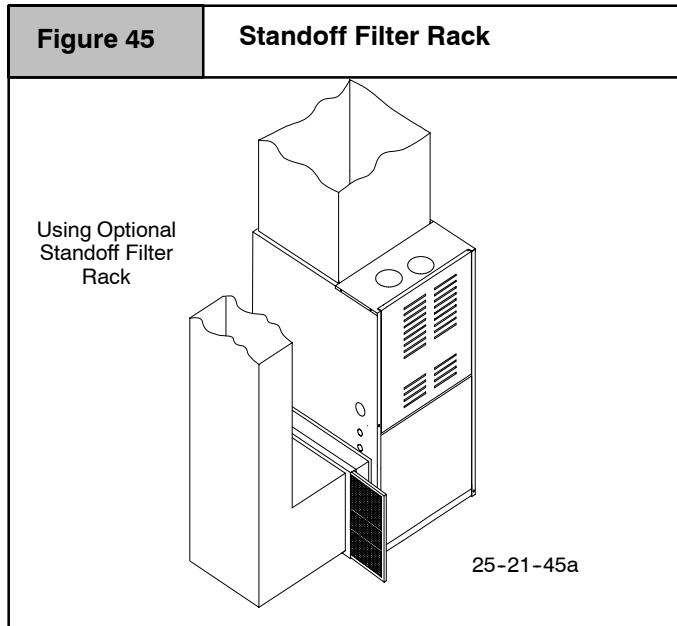

## Downflow Furnace Installation Non-Combustible Floor Installation

Fabricate a plenum to the dimensions given in **Figure 4**, for the furnace outlet. Plenum should be flanged, approximately  $\frac{3}{4}$ " for support.

Note: The three(3) screws in the top panel of the furnace next to the duct flange **MUST** be removed to provide serviceability of the primary heat exchangers in the downflow installation

1. Position plenum through the floor and set the furnace over the opening in the floor. If necessary, grout around the base to seal air leaks between the base and the floor.

## Combustible Floor Installation

**⚠ WARNING**

**FIRE HAZARD.**

**Failure to install unit on noncombustible subbase could result in death, personal injury and/or property damage.**

**Place furnace on noncombustible subbase on downflow applications, unless installing on non-combustible flooring.**

### Subbase for Combustible Floor

**NOTE:** The three(3) screws in the top panel of the furnace next to the duct flange **MUST** be removed to provide serviceability of the primary heat exchangers in the downflow installation

Note: When using the subbase for combustible floors, the discharge air duct flanges on the furnace **MUST** be broken down to provide proper fit up to the subbase. Use duct pliers to bend the duct flanges flat onto the furnace casing. **DO NOT** bend the duct flanges inward (toward the heat exchangers) as air flow restrictions may occur.

The Subbase for Combustible Floors **MUST** be used when a downflow furnace is set on a combustible floor, even when the furnace is installed on a coil box.



1. Cut the opening in the floor according to **Table 8**. The hole in the floor must be cut to the dimensions listed in **Table 8** since the base is equipped with locating tabs that center the base over the opening.

The opening in the base is  $1\frac{1}{4}$ " shorter and  $1\frac{1}{8}$ " narrower than the recommended size of the opening in the floor. This is done to maintain clearance between the floor and the plenum.



2. Fabricate the plenum to the dimensions given in **Table 8**. Note that the dimensions given are outside dimensions.

Table 8		Subbases for Combustible Floors Dimensions									
Subbase for Combustible Floors Part Number	Subbase for Combustible Floor Dimensions				Opening In Floor		Opening In Base For Plenum		Typical Plenum Dimensions		
	H*	J*	K**	L	M	N	P	R	S	T	
<b>Furnace Subbase</b>											
NAHH001SB	$15\frac{11}{16}$	$28\frac{3}{4}$	$14\frac{9}{16}$	16	$16\frac{1}{4}$	$14\frac{5}{8}$	15	$13\frac{1}{2}$	15	$13\frac{1}{2}$	
NAHH002SB	$19\frac{5}{16}$	$28\frac{3}{4}$	$18\frac{3}{16}$	16	$16\frac{1}{4}$	$18\frac{1}{4}$	15	$17\frac{1}{8}$	15	$17\frac{1}{8}$	
NAHH003SB	$22\frac{5}{16}$	$28\frac{3}{4}$	$21\frac{13}{16}$	16	$16\frac{1}{4}$	$21\frac{7}{8}$	15	$19\frac{3}{4}$	15	$19\frac{3}{4}$	
NAHH010SB	$24\frac{11}{16}$	$28\frac{3}{4}$	$23\frac{9}{16}$	16	$16\frac{1}{4}$	$23\frac{5}{8}$	15	$22\frac{1}{2}$	15	$22\frac{1}{2}$	
<b>Subbase for Coil Cabinets</b>											
NAHH004SB	$15\frac{11}{16}$	$20\frac{9}{16}$	$14\frac{9}{16}$	$16\frac{1}{4}$	$16\frac{1}{4}$	$14\frac{5}{8}$	15	$13\frac{1}{2}$	15	$13\frac{1}{2}$	
NAHH005SB	$19\frac{5}{16}$	$20\frac{9}{16}$	$18\frac{3}{16}$	$16\frac{1}{4}$	$16\frac{1}{4}$	$18\frac{1}{4}$	15	$17\frac{1}{8}$	15	$17\frac{1}{8}$	
NAHH006SB	23	$20\frac{9}{16}$	$21\frac{13}{16}$	$16\frac{1}{4}$	$16\frac{1}{4}$	$21\frac{7}{8}$	15	$19\frac{3}{4}$	15	$19\frac{3}{4}$	
NAHH009SB	$24\frac{3}{4}$	$20\frac{9}{16}$	$23\frac{9}{16}$	$16\frac{1}{16}$	$16\frac{1}{4}$	$23\frac{5}{8}$	15	$22\frac{1}{2}$	15	$22\frac{1}{2}$	
* Outside Dimension											
** Base Spacer Side To Side											

3. Set the base over the opening in the floor, centering it over the opening. Fasten the base to the floor with screws or nails. See **Figure 46**, **Figure 47** and **Figure 48**.

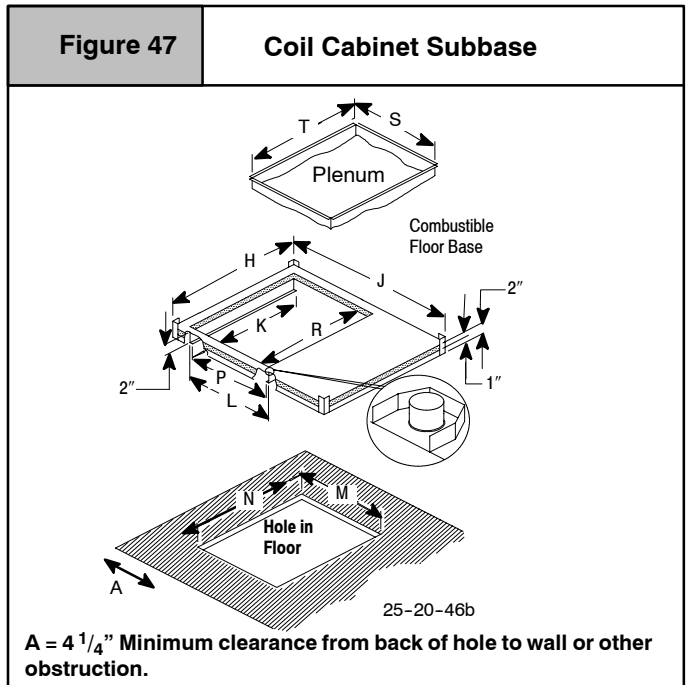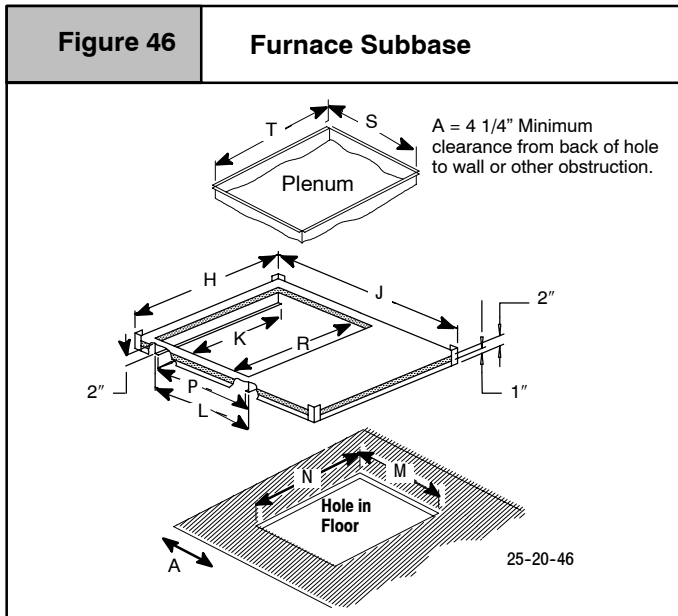

4. Drop the plenum through the opening in the base. The flange of the plenum should rest on top of the subbase.
5. Position furnace or coil cabinet and furnace on subbase so it aligns between the locating tabs.

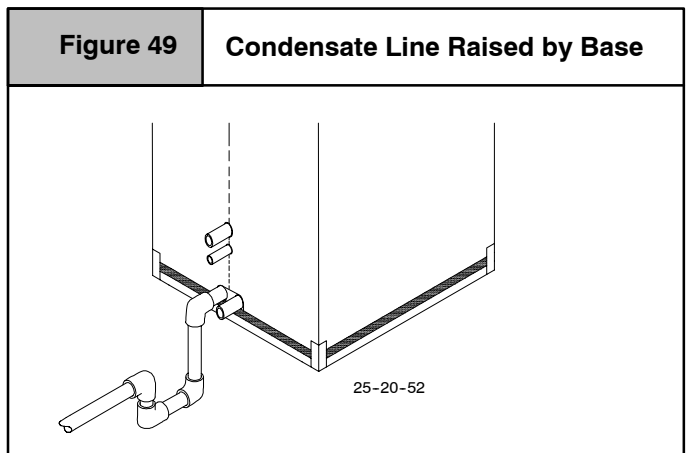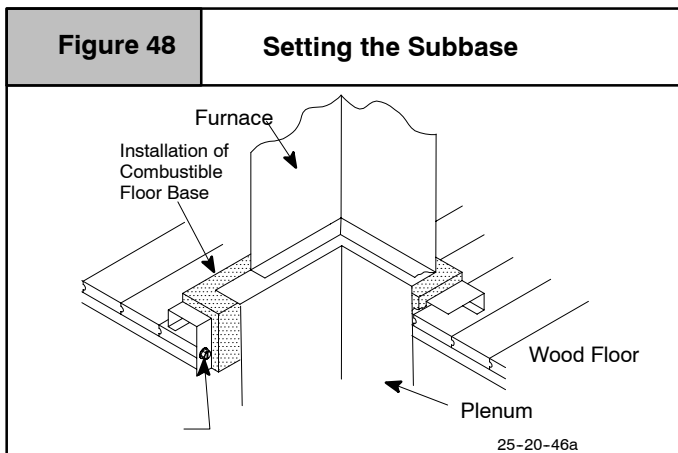

This subbase for combustible floors has been designed so that the height of the subbase raises the downflow coil off the floor to allow easy installation of the condensate drain. See **Figure 49**.

## 9. Checks and Adjustments

**NOTE:** Verify the input rate of the furnace.

**⚠ WARNING**

**FIRE OR EXPLOSION HAZARD.**  
 Failure to turn OFF gas at shut off before connecting manometer could result in death, personal injury and/or property damage.  
 Turn OFF gas at shut off before connecting manometer.

### Startup

**NOTE:** Refer to the start-up procedures in the "User's Information Manual" or to the "Operating Instructions Label" on the furnace.

**⚠ WARNING**

**FIRE OR EXPLOSION HAZARD.**  
 Failure to correct hazard could result in death, personal injury, and/or property damage.  
 If any sparks, odors or unusual noises occur, immediately shut OFF power to furnace. Check for wiring errors or obstruction to blower.

### Gas Supply Pressure

Gas supply pressure should be within minimum and maximum values listed on rating plate. Pressures are usually set by gas suppliers.



## Manifold Gas Pressure Adjustments

### (Hi & Lo Fire)

**NOTE:** Make adjustment to manifold pressure with burners operating.



## WARNING


### FIRE OR EXPLOSION HAZARD.

Failure to turn OFF gas at shut off before connecting manometer could result in death, personal injury and/or property damage.

Turn OFF gas at shut off before connecting manometer.

1. With gas **OFF**, connect manometer to manifold pressure tap on the outlet of gas control valve. See **Figure 50**. Use a manometer with a 0" to 12" water column range.
2. Turn gas **ON**. Operate the furnace on high fire by using a jumper wire on the R to W1 & W2 thermostat connections on the fan board.
3. Remove manifold pressure adjustment screw cover on furnace gas control valve. Turn adjusting screw counterclockwise to decrease the manifold pressure and clockwise to increase pressure. See **Figure 50**.

**NOTE:** Adjustment screw cover **MUST** be replaced on gas control valve before reading manifold pressure and operating furnace.

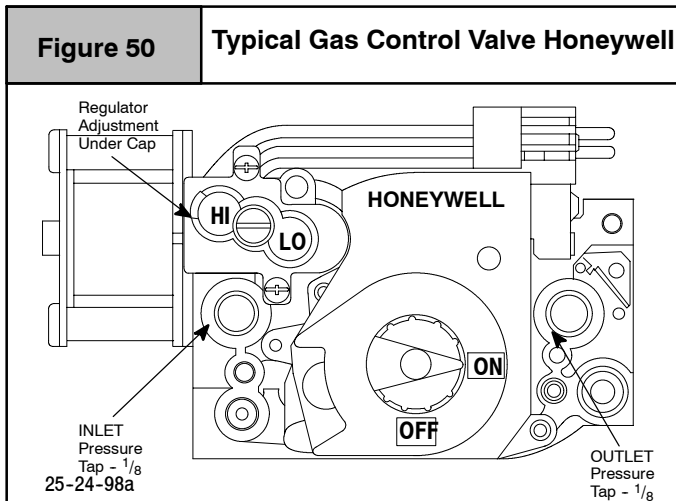

4. Set manifold pressure to value shown in **Table 6** or **Table 7**.
5. Operate the furnace on low fire by using a jumper wire on the R to W1 thermostat connections on the fan board.  
**Note:** The third (3rd) DIP switch should be in the on position to set the low fire manifold pressure. (See wiring diagram.)
6. Repeat steps 3 and 4 for low fire operation.
7. When the manifold pressures are properly set, replace the adjustment screw covers on the gas control valve.
8. Remove the jumper wires from the thermostat connections on the fan board. Remove manometer connection from manifold pressure tap, and replace plug in gas valve.
9. Return third (3rd) DIP switch to previous setting.


## Main Burner Flame Check

Allow the furnace to run approximately 10 minutes then inspect the main burner and pilot flames. See **Figure 51**.


Check for the following (**Figure 51**):

- Stable and blue flames. Dust may cause orange tips or wisps of yellow, but flames **MUST NOT** have solid, yellow tips.
- Flames extending directly from burner into heat exchanger.
- Flames do **NOT** touch sides of heat exchanger.

If any problems with main burner flames are noted, it may be necessary to adjust gas pressures, or check for drafts.

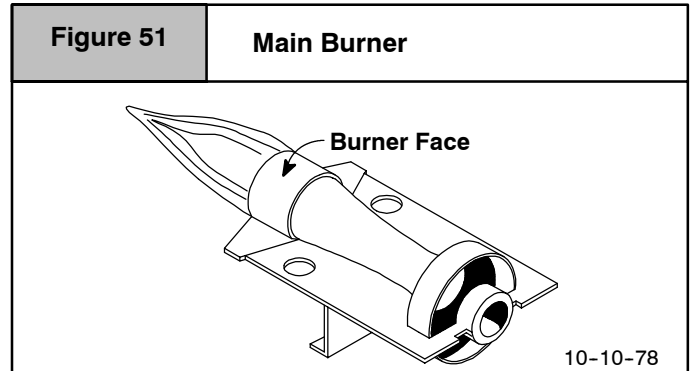

**NOTE:** For Ignitor location see **Figure 52**.

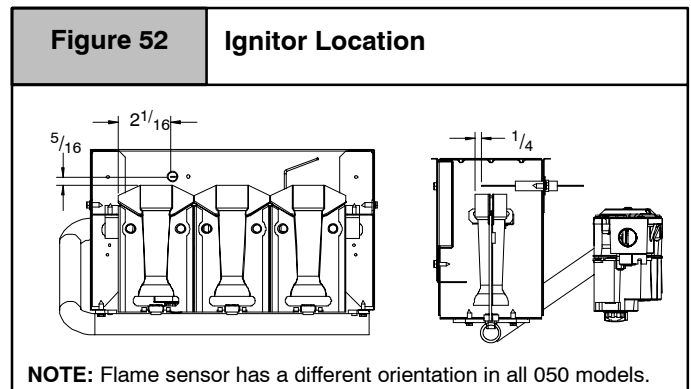

**NOTE:** Flame sensor has a different orientation in all 050 models.

## Temperature Rise Check

The blower speed **MUST** be set to give the correct air temperature rise through the furnace as marked on the rating plate for both high fire and low fire operation. Temperature rise is the difference between supply and return air temperatures.

To check temperature rise, use the following procedure:

1. Place thermometers in supply and return air registers as close to furnace as possible, avoiding direct radiant heat from heat exchangers.
2. Operate furnace on high fire for 10 minutes with all the registers and duct dampers open by using a jumper wire on R to W1 and W2 thermostat connections on the fan board.  
**Note:** The third (3rd) DIP switch should be in the on position. (See furnace wiring diagram)
3. Take readings and compare with range specified on rating plate.
4. If the temperature rise is not in the correct range, the blower speed must be changed. A higher blower speed will lower the temperature rise. A lower blower speed will increase the temperature rise.
5. Repeat steps 2 thru 4 with the furnace operating on low fire for 10 minutes by using a jumper wire on the R to W1 thermostat connections on the furnace control board.
6. Remove the jumper wire after the adjustments are complete. Return third (3rd) dip switch to previous setting.

## Changing Blower Speed (\*9MPT Models)

**⚠ WARNING**

**ELECTRICAL SHOCK HAZARD.**

Failure to do so could result in death or personal injury.

Turn OFF power to furnace before changing speed taps.

**NOTE:** The speed taps that the manufacturer sets from the factory for this product are based on a nominal 400 CFM per ton cooling and the basic mid range on the temperature rise for heating.

Since the manufacturer cannot establish the static pressure that will be applied to the unit, it is the responsibility of the installer dealer/contractor to select the proper speed taps for the application when the unit is installed.

**⚠ CAUTION**

**REDUCED FURNACE LIFE HAZARD**

Failure to properly set the air temperature rise may result in reduced furnace life.

Use **ONLY** the following blower motor speed taps for setting air temperature rise.

Blower Motor Speed Taps	Model Sizes	
	Heat High	Heat Low
Hi (BLK)	All	None
Med-Hi (O)	All	All
Med Lo (BL)	All	All
Lo (R)	None	125L20

If it is necessary to change speeds, refer to steps below.

1. Refer to *Furnace Wiring Diagram* for location of the heating and cooling speed taps located on the furnace control as well as location of unused blower motor speed leads. Use the chart (**Table 9**) to determine the blower motor speed settings.

Table 9		Blower Speed Chart
Wire Color	Motor Speed	
Black	High	
Orange*	Med-High	
Blue	Medium	
Red	Low	

\* Med-High speed may not be provided on all models.

2. Change the heat or cool blower motor speed by removing the motor lead from the "**Hi Heat or Lo Heat**" or "**Cool**" terminal and replace it with the desired motor speed lead from the "**M1**" or "**M2**" location. Connect the wire previously removed from the "**Hi Heat or Lo Heat**" or "**Cool**" terminal to the vacated "**M1**" or "**M2**" terminal.
3. If the same speed must be used for both heating and cooling, remove the undesired motor speed lead from the "**Hi Heat or Lo Heat**" or "**Cool**" terminal and connect that lead to the open terminal at "**M1**" or "**M2**" location or tape off. Attach a jumper between the "**Hi Heat or Lo Heat**" and "**Cool**" terminals and the remaining motor speed lead.

**Note:** When using the same speed on motors with (4) speed leads, it will be necessary to tape off the terminal of the motor speed lead removed from the "**Hi Heat or Lo Heat**" or "**Cool**" terminal with electrical tape since an open terminal will not be available at the "**M1**" or "**M2**" location.

### Continuous-Fan Operation using "G"

#### \*9MPT Models

Energizing the "G" terminal on the furnace control provides continuous fan operation. This is done by connecting the G terminal of the thermostat to the G terminal on the furnace control. When the FAN switch is turned from auto to ON the fan will operate continuously at "LO HEAT" speed. EAC will be energized in this mode.

**NOTE:** In heating, the fan will turn off during furnace ignition and warm up then restart at heating speed.

#### \*9MPV Models

Energizing the "G" terminal on the furnace control provides continuous fan operation. This is done by connecting the G terminal of the thermostat to the G terminal on the furnace control. When the FAN switch is turned from auto to ON the fan will operate continuously at "LO HEAT" speed. EAC will be energized in this mode.

**NOTE:** No hard-wired continuous fan mode option available for variable speed applications.

**NOTE:** In heating, the fan will continue to operate at continuous fan speed until the furnace control calls for heat speed after warm-up. Then the fan will run at heat speed.

### Hard-Wired Continuous Fan Operation (\*9MPT ONLY)

A terminal is provided on the furnace control located in the circulating air blower compartment for operation of the continuous fan option. This connection is intended for the low speed motor tap, and has a lower contact rating (8 amps) than the heat and cool taps. When the low speed blower lead is connected to this terminal, this will provide low speed blower operation whenever the other three speeds ("**Hi Heat or Lo Heat**" or **Cool**) are not energized.

Thoroughly check the system after modification to ensure the proper operation of the circulating air blower in all modes of operation.

### Separate speed selections for Heat, Cool, and Continuous-Fan

Connect low speed lead from circulating air motor to the "**Cont**" terminal at the furnace control board. The appropriate motor leads should already be connected to the "**Hi Heat and Lo Heat**" and "**Cool**" terminals.

### Heating and Continuous-Fan Speed the Same

If it is necessary to operate the low heating speed and continuous-fan speed using the same blower speed, connect a jumper between the "**Lo Heat**" and "**Cont**" terminals on the furnace control.

**Note:** There should be only ONE motor lead going to the "**Lo Heat**" and "**Cont**" terminals.

### Hard Wired Continuous Fan Operation

A terminal is provided on the furnace control board located in the circulating blower compartment for operation of the continuous fan option. This connection is intended for the low speed motor tap, and has a lower contact rating (8 amps) than the heat and cool taps. When the low speed blower lead is connected to this terminal, this will provide low speed blower operation whenever the other three speeds (**Lo Heat or Hi Heat or Cool**) are not energized.

Thoroughly check the system after modification to ensure the proper operation of the circulating air blower in all modes of operation.

### Separate speed selections for Heat, Cool, and Continuous Fan

Connect low speed lead from circulating motor to the "Cont." terminal at the furnace control board. The appropriate motor leads should already be connected to the "Lo Heat and Hi Heat" and "Cool" terminals.

### Heating and Continuous Blower Speed the Same

If it is necessary to operate the heating speed and continuous blower speed using the same blower speed, connect a jumper between the "Heat" and "Cont." terminals on the furnace control. (Will not have EAC energized during Continuous Fan)

**Note:** There should be only **ONE** motor lead going to the "Heat" and "Cont." terminals.

### Changing Blower Speed (\*9MPV Models)

**⚠ WARNING**

**ELECTRICAL SHOCK HAZARD.**

Failure to disconnect power could result in death or personal injury.

Turn OFF power to furnace before changing blower speed.

**NOTE:** The blower speeds that the manufacturer sets from the factory for this product are based on a nominal 400 CFM per ton cooling and the mid range on the temperature rise for heating.


**Since the manufacturer cannot predict the static pressure that will be applied to the furnace, it is the responsibility of the installer dealer/contractor to select the proper speeds for the application when the furnace is installed.**

If it is necessary to change speeds, refer to steps below.

1. The 115 VAC power supply to the furnace must be turned OFF before making adjustments to the motor.

**NOTE:** Allow at least 1 minute before restoring power to the furnace after making Blower Control changes.

2. The heating, cooling and continuous blower speeds can be adjusted by changing the dip switch settings that are located on the tap-select interface board (see **Figure 53**). Switches #1 and #2 adjust the continuous blower speeds. Switches #3, #4 and #5 adjust the heating speeds. Switches #6, #7 and #8 adjust the cooling speed. See the "Technical Support Manual" for the switch settings for the desired airflow rates for the installation.

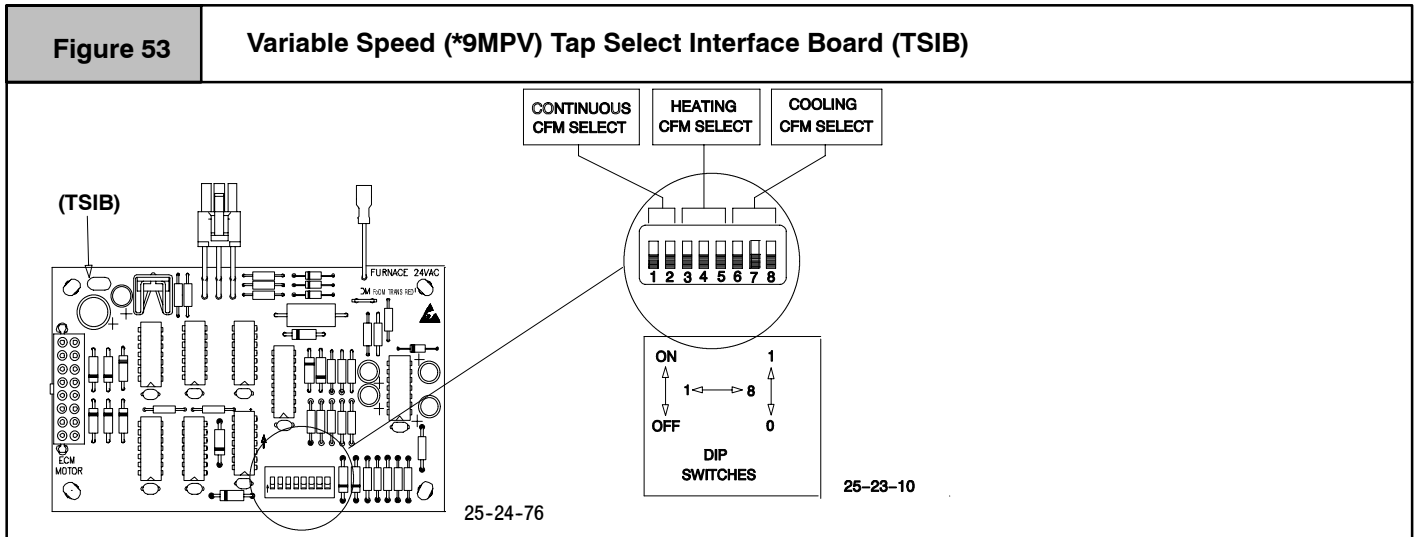

## 10. Furnace Maintenance

**⚠ WARNING**

**FIRE, EXPLOSION, OR CARBON MONOXIDE HAZARDS**

Failure to have the furnace inspected and maintained could result in fire, explosion, personal injury or death.

It is recommended that the furnace be inspected and serviced on an annual basis (before the heating season) by a qualified service technician.

See "User's Information Manual".

See "User's Information Manual" and the "Service Manual".

**⚠ WARNING**

**ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD**

Failure to follow this warning exactly could result in dangerous operation, death, personal injury and/or property damage.

Improper servicing could result in dangerous operation, serious injury, death or property damage.

- Before servicing, disconnect all electrical power to furnace.
- When servicing controls, label all wires prior to disconnecting. Reconnect wires correctly.
- Verify proper operation after servicing.

# 11. Sequence of Operation & Diagnostics (\*9MPV)

The following is the normal operating sequence.

## Cooling (Y) Request:

24VAC signals applied to Y & G terminals of FCB (furnace control board). **(Must have Y & G for cooling)**

- Cool motor speed is energized after 5 second Cool Fan On Delay time.

Y & G signals removed from FCB

- Cool motor speed is de-energized after 90 second Cool Fan Off Delay time.

Cooling (Y) and dehumidification (DEHUM) requests:

- 24 VAC signals applied to Y, DEHUM & G terminals of FCB (furnace control board).
- Same operation as the cooling (Y) request, except the cooling speed is reduced 20% to compensate for high humidity conditions during cooling operation. The cooling speed returns to the normal setting after the DEHUM signal is removed.

## Continuous Circulating Fan (G) Request:

24VAC signal applied to G terminal of FCB.

- Continuous fan speed is energized.

G signal removed from FCB.

- Continuous fan speed is de-energized without delay.

NOTE 1) Blower motor runs at the continuous fan speed selected by DIP Switches 1 & 2 in response to a G request.

continuous circulating speed after the selected Fan Off Delay time expires following loss of the Heating or Cooling request.

NOTE 2) Heating or Cooling requests received during a Fan request cause the fan speed to change to the appropriate heat or cool speed after the Fan On Delay time expires. The fan returns to

NOTE 3) Hard-wire option not available for variable speed models.

## Heating (W1) Request (single stage thermostat operation, 3<sup>rd</sup> DIP switch (SW1-3) on the FCB must be in off position) (see furnace wiring diagram):

24VAC signal applied to W1 terminal of FCB.

- Inducer motor turns on at high speed and pressure switches close.
- Following a 15 second prepurge delay after the low pressure switch closes, the ignitor begins a 17 second warm up.
- The gas valve is energized, the main burners light at low heat rate and flame is sensed.
- The ignitor is de-energized, and the inducer drops to low speed after the main burners ignite.
- The FCB will delay Low Heat blower operation for the 45-second Low Heat Fan On Delay time timed from the opening of the gas valve.
- If the W1 request is still present after 12 minutes, timed from the opening of the gas valve, the inducer switches to high speed, closing the high pressure switch, then the high fire solenoid energizes, and the fan switches to High Heat speed.

W1 signal removed from FCB.

- The gas valve de-energizes and the main burners go out.
- The inducer runs at its present speed for a 15 second postpurge period.
- The fan runs at its present speed.
- The blower de-energizes after the selected Heat Fan Off Delay time expires timed from the gas valve de-energizing.

NOTE 4) If a new Heating request arrives while the control is waiting for the Heat Fan Off Delay time to expire, the FCB will wait for the selected Heat Fan Off Delay, and then start a new heating cycle.

## Heating (W1 & W2) Request (two stage thermostat operation, 3<sup>rd</sup> DIP (SW1-3) switch must be in on position) (see furnace wiring diagram):

24VAC signals applied to W1 terminal of FCB.

- Same response as single stage thermostat operation described above except the burners, inducer, and blower will not go to high heat rate, and High Heat Fan speed unless a W2 signal is applied.

24VAC signal applied to W1 and W2 terminals of FCB.

- Same light-off routine as described for the signal stage thermostat operation except burners light at high heat rate, the inducer remains on high speed after ignition, and the FCB will delay High Heat blower operation for the 30-second High Stage Heat Fan On Delay.

NOTE 5) The FCB responds without delay to the presence or loss of W2 (with W1 constant). W1 & W2 result in high inducer, high heat rate, and High Heat Fan speed. W1 only results in low inducer, low heat rate, and Low Heat Fan speed.

## Heating Request with Gas Shut Off:

24 VAC signals applied to W1 terminal of FCB.

The FCB will attempt 4 cycles for ignition then go to soft lockout for 3 hours, and then try for ignition again as long as the heat call remains. Power reset will clear lockout.


- Inducer motor turns on at high speed.
- Following a 15 second prepurge delay after the low pressure switch closes, the ignitor begins warm up.
- The ignitor glows red-hot for 22 seconds, then turns off. The FCB flashes error code 6.
- The ignitor stays off for 17 seconds, then begins to warm up again.
- The ignitor glows red hot for 22 seconds then turns off. The FCB continues flashing error code 6.
- The ignitor stays off for 17 seconds, then begins to warm up again.
- The ignitor glows red hot for 22 seconds then turns off. The FCB continues flashing error code 6.
- The ignitor stays off for 17 seconds, then begins to warm up again.
- The ignitor glows red hot for 22 seconds then turns off. The FCB proceeds to soft lockout. Stops flashing error code 6, and begins flashing error code 6 + 1.
- The inducer motor de-energizes 15 seconds after error code 6 + 1 starts flashing.

## Furnace Control Board Diagnostic Codes (See Figure 54)

OFF	= 24VAC or 115VAC is off, fuse is open
Heartbeat	= Normal operation or no previous Diagnostic Code
ON SOLID	= Soft Lockout - Furnace Control Error (1 hr delay) If code repeats immediately following power reset then replace control
1 Flash	= Not used
2 Flashes	= Pressure switch(es) closed when should be open
3 Flashes	= Low pressure switch open when should be closed
4 Flashes	= Limit or flame roll-out switch open (less than 2 minutes)
5 Flashes	= Flame sensed out of sequence
6 Flashes	= Failure to ignite or flame sense lost while running
6 + 1 Flashes	= Soft Lockout - Max of four trials for ignition reached (3hr delay)
7 Flashes	= Soft Lockout - Limit or flame roll-out switch open longer than 2 minutes (1 hr delay) (roll-out switch requires manual reset)
8 Flashes	= Permanent Lockout - Gas valve relay contact stuck closed or miswired gas valve (power reset only)
9 Flashes	= High pressure switch open when should be closed
10 Flashes	= Improper transformer phasing on twinned applications or improper line voltage polarity.

\* If status code recall is needed, briefly (2-3 seconds) remove then reconnect one limit switch wire (main or rollout) to display last stored status code. Do not remove power or blower door before initiating status code recall or code will be lost. Code is automatically cleared after 72 hours or upon power reset.

\* Proper flame sense microamps: 0.7 microamps D.C. minimum, 2.0 - 4.0 microamps nominal

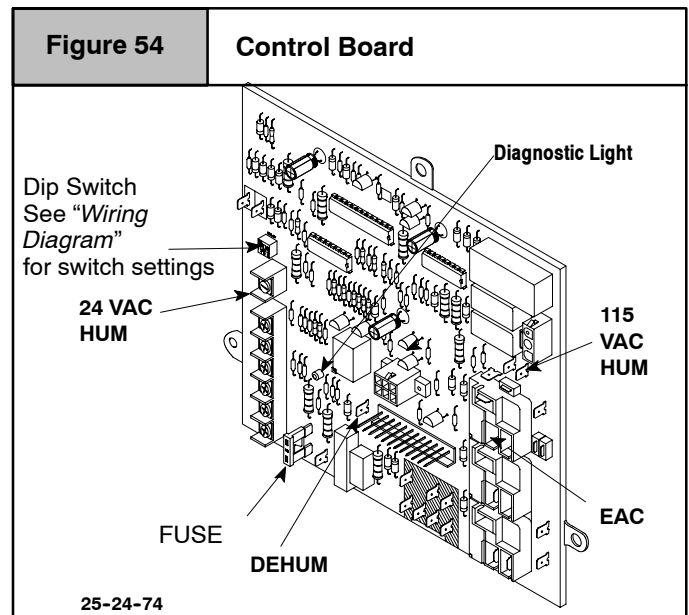

## 12. Sequence of Operation & Diagnostics (\*9MPT)

The following is the normal operating sequence.

### Cooling (Y) Request:

24VAC signals applied to Y & G terminals of FCB (furnace control board).

- Cool motor speed is energized after 5 second Cool Fan On Delay time.

Y & G signals removed from FCB

- Cool motor speed is de-energized after 90 second Cool Fan Off Delay time.

NOTE: DEHUM not available on the \*9MPT models.

### Continuous Circulating Fan (G) Request:

24VAC signal applied to G terminal of FCB.

- Low-Heat motor speed is energized without delay.

G signal removed from FCB.

- Low-Heat motor speed is de-energized after 5 second delay.

NOTE 1) Furnace de-energizes the fan during the heat exchanger warm-up period on a call for Heating that occurs during a G request unless a blower motor lead is connected to the **Cont** terminal on the FCB, in which case see NOTE 2)

request cause the fan speed to change to the appropriate heat or cool speed after the Fan On Delay time expires. The fan returns to continuous circulating speed after the selected Fan Off Delay time expires following loss of the Heating or Cooling request.

NOTE 2) Heating or Cooling requests received during a Fan

### Continuous Circulating Fan Hard-Wired (Cont) Request:

Field selected low speed motor tap installed on "CONT" terminal.

- Low speed is energized when power applied to furnace. Operates at this speed continuously while there are no other blower demands from furnace control. Fan demands from furnace control for heat, cool or "G" will override hard-wired speed tap.

NOTE 3) EAC is NOT active for hard-wired mode but IS active for fan demands from furnace control for heat, cool and "G".

### Heating (W1) Request (single stage thermostat operation, 3<sup>rd</sup> DIP switch (SW1-3) must be in off position) (see furnace wiring diagram):

24VAC signal applied to W1 terminal of FCB.

- Inducer motor turns on at high speed.
- Following a 15 second prepurge delay after the low pressure switch closes, the ignitor begins a 17 second warm up.
- The gas valve is energized, the main burners light at low heat rate and flame is sensed.
- The ignitor is de-energized, and the inducer drops to low speed after the main burners ignite.
- The FCB will delay Low Heat blower operation for the 45-second Low Heat Fan On Delay time, timed from the opening of the gas valve.
- If the W1 request is still present after 12 minutes, timed from the opening of the gas valve, the inducer switches to high speed, closing the high pressure switch, then the high fire solenoid energizes, and the fan switches to High Heat speed.

W1 signal removed from FCB.

- The gas valve de-energizes and the main burners go out.
- The inducer runs at its present speed for a 15 second postpurge period.
- The fan runs at its present speed.
- The fan de-energizes after the selected Heat Fan Off Delay time expires, timed from the gas valve de-energizing.

NOTE 4) If a new Heating request arrives while the control is waiting in the Heat Fan Off Delay time, the FCB will wait for the selected Heat Fan Off Delay then start a new heating cycle as long as the heat call remains.

### Heating Request (W1 & W2) (two stage thermostat operation, 3<sup>rd</sup> DIP switch (SW1-3) must be in on position) (see furnace wiring diagram):

24VAC signal applied to W1 terminal of FCB.

- Same response as single stage thermostat operation (fan uses Low Stage Heat On Delay) described above except the control will not go to high heat rate, and High Heat Fan speed unless a W2 signal is applied.

24VAC signal applied to W1 and W2 terminals of FCB.

- Same light-off routine as described for the signal stage thermostat operation except main burners light at high heat rate, the inducer remains on high speed after ignition, and the FCB will delay blower operation at the High Heat Fan speed for 30 second On Delay time.

NOTE 5) The FCB responds without delay to the presence or loss of W2 (with W1 constant). W1 & W2 result in high inducer, high heat rate, and High Heat Fan speed. W1 only results in low inducer, low heat rate, and Low Heat Fan speed.

## Heating Request with Gas Shut Off:

24 VAC signal applied to W1 terminal of FCB.

The FCB will attempt 4 cycles for ignition then go to soft lockout for 3 hours, and then try for ignition again as long as the heat call remains. Power reset will clear lockout.

- Inducer motor turns on at high speed.
- Following a 15 second prepurge delay, the ignitor begins warm up.
- The ignitor glows red-hot for 22 seconds, then turns off. The FCB flashes error code 6.
- The ignitor stays off for 17 seconds, then begins to warm up again.
- The ignitor glows red hot for 22 seconds then turns off. The FCB continues flashing error code 6.
- The ignitor stays off for 17 seconds, then begins to warm up again.
- The ignitor glows red hot for 22 seconds then turns off. The FCB continues flashing error code 6.
- The ignitor stays off for 17 seconds, then begins to warm up again.
- The ignitor glows red hot for 22 seconds then turns off. The FCB proceeds to soft lockout. Stops flashing error code 6, and begins flashing error code 6 + 1.
- The inducer motor de-energizes after a 15 second post purge.

HUMIDIFIER - The 24VAC HUM is energized when the low pressure switch closes on a call for heat. The 115V HUM (called HUM on Control) is energized when the inducer is energized.

ELECTRONIC AIR CLEANER - EAC is energized when there is a blower speed call. It is NOT energized when blower operates in the hard-wired continuous fan mode.

## Furnace Control Board Diagnostic Codes (See Figure 54)

- OFF = 24VAC or 115VAC is off, fuse is open
- Heartbeat = Normal operation or no previous Diagnostic Code
- ON SOLID = Soft Lockout - Furnace Control Error (1 hr delay)  
If code repeats immediately following power reset then replace control
- 1 Flash = Not used
- 2 Flashes = Pressure switch(es) closed when should be open
- 3 Flashes = Low pressure switch open when should be closed
- 4 Flashes = Limit or flame roll-out switch open (less than 2 minutes)
- 5 Flashes = Flame sensed out of sequence
- 6 Flashes = Failure to ignite or flame sense lost while running
- 6 + 1 Flashes = Soft Lockout - Max of four trials for ignition reached (3hr delay)
- 7 Flashes = Soft Lockout - Limit or flame roll-out switch open longer than 2 minutes (1 hr delay)  
(roll-out switch requires manual reset)
- 8 Flashes = Permanent Lockout - Gas valve relay contact stuck closed or miswired gas valve (power reset only)
- 9 Flashes = High pressure switch open when should be closed
- 10 Flashes = Line voltage polarity or improper transformer phasing on twinned applications

NOTE1: The 6 + 1 designation indicates a combination of flash codes.

\* If status code recall is needed, briefly (2-3 seconds) remove then reconnect one limit switch wire (main or rollout) to display last stored status code. Do not remove power or blower door before initiating status code recall or code will be lost. Code is automatically cleared after 72 hours or upon power reset.

\* Proper flame sense microamps: 0.7 microamps D.C. minimum, 2.0 - 4.0 microamps nominal






# Technical Support Manual

## *Four Position Furnace*

### Models

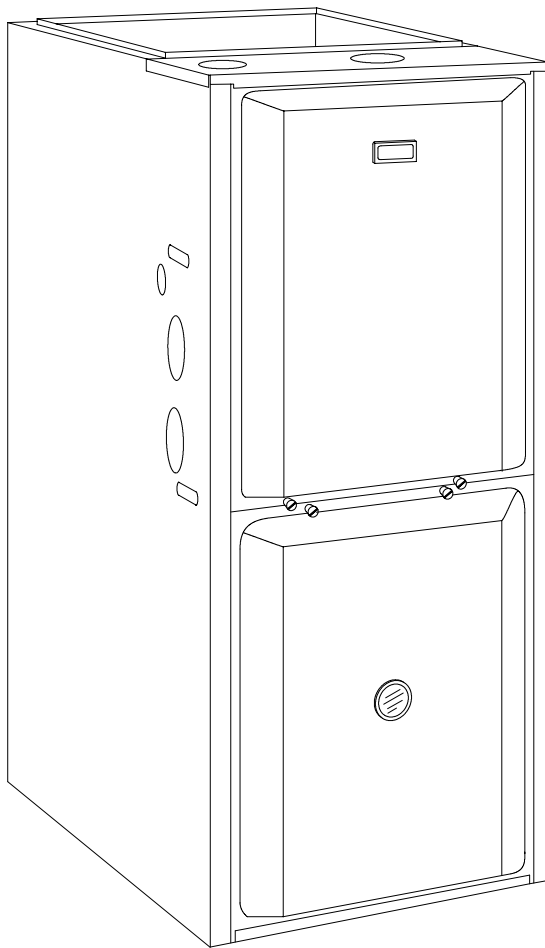

#### Dual Certified

**\*9MPT050F12C1**

**\*9MPT075F14C1**

**\*9MPT100J16C1**

**\*9MPT125L20C1**

**\*9MPV050F12C1**

**\*9MPV075F12C1**

**\*9MPV100J16C1**

**\*9MPV125L20C1**

**\* Denotes Brand (C, H, T)**



**International Comfort Products, LLC**  
Lewisburg, TN 37091  
Fast Parts Division  
866-380-3278

**Save This Manual For Future Reference**

# TECHNICAL SUPPORT

Specifications									
	*9MPT050F12		*9MPT075F14		*9MPT100J16		*9MPT125L20		
General	Nat	L.P.	Nat	L.P.	Nat	L.P.	Nat	L.P.	
Transformer Size (VA)	40								
T'stat Heat Anticipator	.50								
Input (Btuh) Std/Alt. Hi Fire	50,000		75,000		100,000		125,000		
Lo Fire	35,000		53,000		70,000		87,500		
Output (Btuh) Std/Alt. Hi Fire	46,000		70,000		93,000		117,000		
Lo Fire	32,000		49,000		65,000		82,000		
Temp. Rise (°F) Hi Fire	35-65		40-70		40-70		40-70		
Lo Fire	25-55		30-60		30-60		30-60		
Electrical (Volts/Hz)	115/60		115/60		115/60		115/60		
Rating Plate Amps	11.8		11.8		11.8		14.0		
<b>Gas &amp; Ignition</b>									
Gas Type	Nat.	L.P.	Nat.	L.P.	Nat.	L.P.	Nat.	L.P.	
Std. Main Orifices (No/Size)	2/42	2/54	3/42	3/54	4/42	4/54	5/42	5/54	
Gas Valve (Honeywell)	VR8205Q	VR8205Q	VR8205Q	VR8205Q	VR8205Q	VR8205Q	VR8205Q	VR8205Q	
Regulation Type	SNAP	SNAP	SNAP	SNAP	SNAP	SNAP	SNAP	SNAP	
Manifold Press. Hi Fire (" WC)	3.5	10.0	3.5	10.0	3.5	10.0	3.5	10.0	
Lo Fire (" WC)	1.7	4.9	1.7	4.9	1.7	4.9	1.7	4.9	
Ignition Type/Series	Hot Surface								
<b>Combustion</b>									
Flue Outlet Size (Inches)	2		2		3		3		
Std. Outlet Temp (° F)	<140		<140		<140		<140		
<b>@ Blower / @ Transition Box (Hi Fire)</b>									
Std. Pressures (" of WC)									
5' No Elbows	-1.80 / -2.60		-1.80 / -2.60		-1.80 / -2.60		-1.80 / -2.60		
40' +5-90° DWV Elbows	-1.30 / -2.30		-1.30 / -2.30		-1.70 / -2.50		-1.70 / -2.50		
<b>@ Blower / @ Transition Box (Lo Fire)</b>									
Std. Pressures (" of WC)									
5' No Elbows	-1.20 / -1.90		-1.20 / -1.90		-1.20 / -1.90		-1.30 / -2.30		
40' +5-90° DWV Elbows	-1.00 / -1.80		-1.00 / -1.80		-1.00 / -1.80		-1.20 / -2.20		
<b>Furnace Controls</b>									
Furnace Control (Type)	Integrated								
Furnace Control On	30 Hi /45 Lo								
(Timed-secs) Off	60,100,140,180								
<b>Limits &amp; Controls</b>									
Rollout Switch (°F)	300		300		300		300		
Limit Control Setting (°F)	260		210		240		180		
Std. Pressure Sw. (Part No)	1013515		1013515		1013515		1013166		
Blower Switch Pressure (Close)	0.95		0.95		0.95		1.30		
Blower Switch Pressure (Open)	0.80		0.80		0.80		1.10		
Transition Switch Pressure (Close)	1.70		1.70		1.70		1.80		
Transition Switch Pressure (Open)	1.50		1.50		1.50		1.60		
High Altitude Pressure Sw. (Part No)	1013165		1013165		1013165		1013157		
Blower Switch Pressure (Close)	0.70		0.70		0.70		0.85		
Blower Switch Pressure (Open)	0.55		0.55		0.55		0.70		
Transition Switch Pressure (Close)	1.40		1.40		1.40		1.70		
Transition Switch Pressure (Open)	1.20		1.20		1.20		1.50		
<b>Blower Data</b>									
Type & Size	11-8		11-10		11-10		11-10		
Motor Amps/Rpm	10/1050		10/1050		10/1050		13/900		
Motor Type/H.p.	PSC/1/2		PSC/1/2		PSC/1/2		PSC/3/4		
Cap. Mfd/Volts	10/370		10/370		10/370		40/370		
Filter Type & Size (Permanent - supplied)	16x25x1		16x25x1		16x25x1		16x25x1 (2)		
Cool Cap. (Tons) @ .5" W.C. L, ML, MHi & Hi	1 1/2,2,2 1/2,3		1 1/2,2,2 1/2,3.5		2 1/2,3,3 1/2,4		3 1/2,4,4 1/2,5		
<b>Gas Conversion Kits All Models</b>									
Nat to LP	NAHA002LP (1172959*)								
LP to Nat	NAHA002NG (1172961*)								
*Order from Service Parts									

# CIRCULATION AIR BLOWER DATA (CFM #)

**\*9MPT050F12 (1) \*** Denotes Brand

External Static Pressure Inches of W.C.	Speed Tap	Low	Med L	Med H	Hi
	0.1	826	1083	1301	1408
	0.2	804	1050	1242	1347
	0.3	770	1028	1195	1295
	0.4	735	985	1153	1237
	0.5	698	952	1093	1183
	0.6	657	909	1040	1118
	0.7	---	863	935	1053
	0.8	----	812	865	976
	0.9	---	---	802	887
	1.0	---	---	720	787

**\*9MPT100J16 (1) \*** Denotes Brand

External Static Pressure Inches of W.C.	Speed Tap	Low	Med L	Med H	Hi
	0.1	823	1109	1527	1850
	0.2	795	1087	1482	1791
	0.3	747	1056	1426	1720
	0.4	677	1016	1382	1648
	0.5	617	970	1317	1575
	0.6	544	854	1245	1485
	0.7	---	763	1154	1401
	0.8	---	652	1043	1284
	0.9	---	---	905	1161
	1.0	---	---	737	1028

**\*9MPT075F14 (1) \*** Denotes Brand

External Static Pressure Inches of W.C.	Speed Tap	Low	Med L	Med H	Hi
	0.1	695	1025	1455	1724
	0.2	674	1001	1410	1662
	0.3	653	951	1365	1601
	0.4	631	921	1309	1530
	0.5	609	891	1252	1460
	0.6	569	845	1187	1380
	0.7	529	799	1122	1300
	0.8	490	730	1030	1190
	0.9	---	680	950	1080
	1.0	---	---	831	969

**\*9MPT125L20 (2) \*** Denotes Brand

External Static Pressure Inches of W.C.	Speed Tap	Low	Med L	Med H	Hi
	0.1	1720	1910	2127	2315
	0.2	1686	1881	2087	2268
	0.3	1644	1833	2024	2201
	0.4	1600	1777	1961	2131
	0.5	1533	1720	1891	2029
	0.6	1494	1647	1804	1948
	0.7	1413	1571	1708	1820
	0.8	1306	1470	1604	1730
	0.9	---	1349	1484	1614
	1.0	---	---	1328	1430


NOTE: (1) Data based on Bottom Only or One Side return.  
(2) Data based on Both Sides or Bottom plus One Side

CFM - Cubic feet per minute airflow. Filter required for each return-air let. Airflow performance includes 1" washable (600 FPM max) filter media.

MAX CFM's	
Filter Size	CFM
14" X 25"	1400
16" X 25"	1600
20" X 25"	2000
24" X 25"	2500
Max CFM based on 600 FPM	



# 14. (\*9MPT)

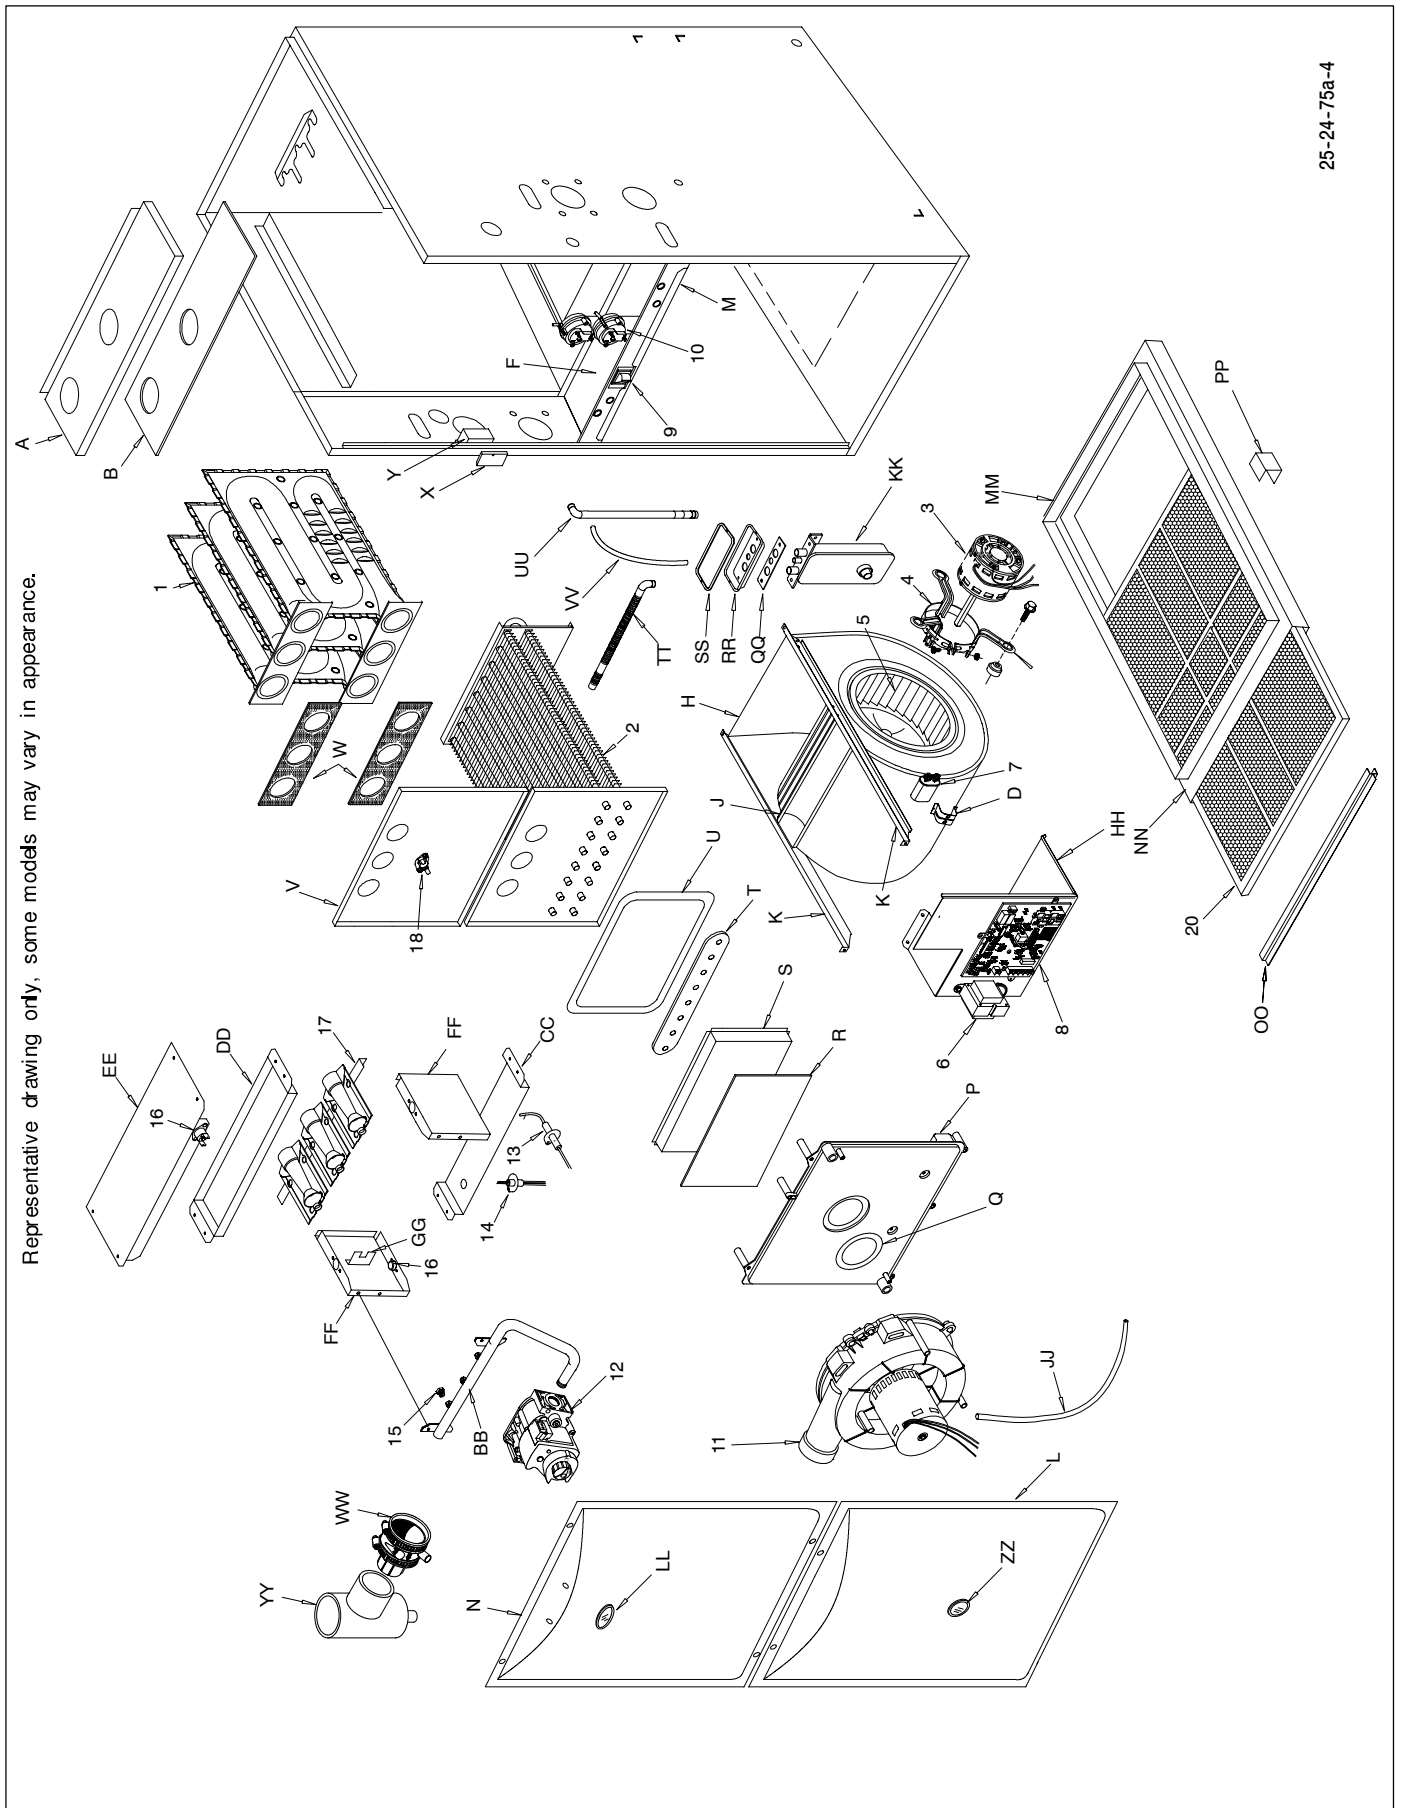

25-24-75a-4

# Replacement Parts - \*9MPT

**Models** - \*9MPT050F12C1, \*9MPT075F14C1, \*9MPT100J16C1 & \*9MPT125L20C1 (Natural Gas)


**Replacement part supplied will be current active part. For parts not listed, consult place of purchase.**

Key No.	Description Functional	Part Number	*9MPT			
			050 F12	075 F14	100 J16	125 L20
1	Heat Exchanger, Primary	1012850	1	-	-	-
		1012854	-	1	-	-
		1012858	-	-	1	-
		1012862	-	-	-	1
2	Heat Exchanger, Secondary	1013762	1	-	-	-
		1013763	-	1	-	-
		1013765	-	-	1	-
		1013767	-	-	-	1
3	Motor, Blower 1/115 1/2 CCW 1/115 3/4 CCW	1172488	1	1	1	-
		1172489	-	-	-	1
4	Mount, Motor kit*	1014824	1	-	-	-
		1014823	-	1	1	1
5	Wheel, Blower	1013011	1	-	-	-
		1011420	-	1	1	1
6	Transformer	1172810	1	1	1	1
7	Capacitor, 10Mfd., 370V 40Mfd., 370V	1171929	1	1	1	-
		1171982	-	-	-	1
8	Control, Fan Timer	1172551	1	1	1	1
9	Switch, Interlock	1171981	1	1	1	1
10	Switch, Pressure	1013166	-	-	-	1
		1013515	1	1	1	-
11	Blower, Exhaust	1172825	1	1	1	-
		1172826	-	-	-	1
12	Valve, Gas HSP Nat. 2 Stage	1172822	1	1	1	1
13	Flame Sensor	1172827	1	1	1	1
14	Igniter	1172533	1	1	1	1
15	Orifice, Burner #42 Nat.	1011351	2	3	4	5
16	Switch, Limit (Rollout)	1013102	2	2	2	2
17	Burner Assembly	1172884	1	-	-	-
		1172965	-	1	-	-
		1172966	-	--	1	-
		1172967	-	--	-	1
18	Switch, Limit (Main)	1320366	1	-	-	-
		34335002	-	-	1	-
		1008445	-	-	-	1
		34335001	-	1	-	-
20	Filter, HH 16X25X1/2"	1010365	1	1	2	2

Key No.	Description Non-Functional	Part Number	*9MPT			
			050 F12	075 F14	100 J16	125 L20
A	Panel, Top	1012866	1	1	-	-
		1012867	-	-	1	-
		1012868	-	-	-	1
B	Gasket, Top Panel	1012603	1	1	-	-
		1012604	-	-	1	-
		1012605	-	-	-	1
F	Partition, Blower	1172008	1	-	-	-
		1172005	-	1	-	-
		1172006	-	-	1	-
		1172007	-	-	-	1
H	Housing, Blower	1172885	1	-	-	-
		1172969	-	1	1	1
J	Panel, Blower Cutoff	721020013	1	-	-	-
		721020008	-	1	1	1
K	Hanger, Blower	1012328	2	2	2	2
L	Door, Blower (Comfortmaker only) (Comfortmaker only) (Comfortmaker only) (Heil only) (Heil only) (Heil only) (Tempstar only) (Tempstar only) (Tempstar only)	1173035	1	1	-	-
		1173036	-	-	1	-
		1173073	-	-	-	1
		1173038	1	1	-	-
		1173039	-	-	1	-
		1173076	-	-	-	1
		1173078	1	1	-	-
1173079	-	-	1	-		
1173080	-	-	-	1		
M	Bracket Asy., Door Filler	1172232	1	1	-	-
		1172233	-	-	1	-
		1172234	-	-	-	1
N	Door, Front (Comfortmaker only) (Comfortmaker only) (Comfortmaker only) (Heil only) (Heil only) (Heil only) (Tempstar only) (Tempstar only) (Tempstar only)	1013148	1	1	-	-
		1013149	-	-	1	-
		1013150	-	-	-	1
		1013145	1	1	-	-
		1013146	-	-	1	-
		1013147	-	-	-	1
		1173086	1	1	-	-
1173087	-	-	1	-		
1173088	-	-	-	1		
O	Clamp, Capacitor	1170643	1	1	1	-
		1014315	-	-	-	1
P	Transition Assembly	1172228	1	1	-	-
		1172229	-	-	1	-
		1172230	-	-	-	1
Q	Gasket, Blower	1014425	1	1	1	1
		1012418	1	1	-	-
		1012419	-	-	1	-
		1012420	-	-	-	1
S	Box, Collector	1012244	1	1	-	-
		1012245	-	-	1	-
		1012246	-	-	-	1
T	Gasket, Transition	1013263	1	-	-	-
		1013080	-	1	-	-
		1013083	-	-	1	-
		1013084	-	-	-	1
U	Gasket, Collector Box	1012594	1	1	-	-
		1012595	-	-	1	-
		1012596	-	-	-	1
V	Partition, Front Heat Exchanger	1012650	1	-	-	-
		1012648	-	1	-	-
		1012651	-	-	1	-
		1012653	-	-	-	1

\*See Table below for bellyband location on motor

Bellyband Location on Motor	
Model *9MPT	A(in.)
050F12	2.09"
075F14	1.81"
100J16	1.81"
125L20	1.65"

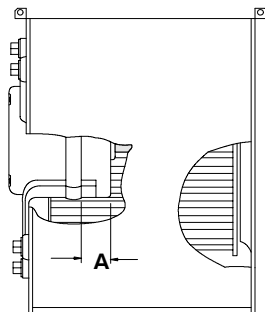

# Replacement Parts - \*9MPT

**Models** - \*9MPT050F12C1, \*9MPT075F14C1, \*9MPT100J16C1 & \*9MPT125L20C1 (Natural Gas)

**Replacement part supplied will be current active part. For parts not listed, consult place of purchase.**

Key No.	Description Functional	Part Number	*9MPT			
			050 F12	075 F14	100 J16	125 L20
W	Gasket, Attachment Plate	1012542	2	-	-	-
		1012543	-	2	-	-
		1012544	-	-	2	-
		1012545	-	-	-	2
X	Cover, Junction Box	1012350	1	1	1	1
Y	Box, Junction	1172860	1	1	1	1
BB	Manifold	1012970	1	-	-	-
		1012971	-	1	-	-
		1012278	-	-	1	-
		1012279	-	-	-	1
CC	Bottom, Burner Box	1172847	1	1	-	-
		1172849	-	-	1	-
		1172850	-	-	-	1
DD	Baffle, Burner Box	1012338	1	1	-	-
		1012339	-	-	1	-
		1012340	-	-	-	1
EE	Top, Burner Box	1013702	1	1	-	-
		1013703	-	-	1	-
		1013704	-	-	-	1
FF	Bracket, Manifold Support	1012377	2	2	2	2
GG	Bracket, Burner Box Side	1012532	2	2	2	2
HH	Bracket, Control Mounting	1172845	1	1	1	1
JJ	Tube, Sensor	1172238	1	1	1	1
		1172241	1	1	1	1
KK	Trap, Drain Assembly	1171917	1	1	1	1
LL	Sightglass	1013235	1	1	1	1
	(Tempstar only)	1013236	1	1	1	1
MM	Wrapper, Filter Rack	741010039	1	1	2	2
NN	Front, Filter Rack	741020001	1	1	2	2
OO	Cover, Filter	2791043	1	1	2	2
PP	Clip, Filter	1008482	3	3	3	3
QQ	Gasket, Trap	1013701	1	1	1	1
RR	Bracket, Trap	1171986	1	1	1	1
SS	Gasket, Trap Bracket	1171987	1	1	1	1
TT	Tube, Drain Coll. Box 5/8" ID	1172245	1	1	1	1
UU	Tube, Drain Tee 1/2" ID	1171989	1	1	1	1
VV	Tube, Relief	1172012	1	1	1	1
WW	Drain Vent	1014003	1	1	1	1
ZZ	Sightglass	1172768	1	1	1	1
YY	Tee, Drain	1171915	1	1	1	1
)	<b>PART NOT ILLUSTRATED</b>					
)	Door Screws	1014488	4	4	4	4
)	Door Screw Grommets	1171990	4	4	4	4
)	Coupling, Air Intake	1002284	1	1	1	1
)	Gasket, Air Intake	1012583	1	1	1	1
)	Clamp, Hose 5/8"	1012975	4	4	4	4
)	Clamp, Hose 3/4"	1012976	2	2	2	2
)	Coupling, Discharge	1002522	1	1	1	1
)	Clamp Hose	1013830	4	4	4	4
)	Grommet, Vent	1012697	1	1	1	1
)	Bushing, Strain Relief	1945287	1	1	1	1
)	Grommet, Vinyl (Gas Inlet)	1009535	1	1	1	1
)	Harness, Wire	1172818	1	1	1	1
)	Grommet, Casing	1171997	1	1	1	1

Key No.	Description Functional	Part Number	*9MPT			
			050 F12	075 F14	100 J16	125 L20
)	Trap, Drain Tee	1171916	1	1	1	1
)	Tube, Drain 1/2" ID Drain	1171991	1	1	1	1
)	Tube, 1/2" Elbow	1171992	2	2	2	2
)	Coupling, 1/2" Barbed	1171993	1	1	1	1
)	Tubing, 5/8" ID Drain	1171994	1	1	1	1
)	Connector, 3/4" X 1/2"	1171995	1	1	1	1
)	Elbow, 1/2" CPVC street	1171996	1	1	1	1
)	Tube, Relief Ext.	1172239	1	1	1	1
)	Connector, Relief Tube	1171998	1	1	1	1
)	Plate, Cover	1171999	1	1	1	1
)	Gasket, Cover Plate	1172000	1	1	1	1
)	Cap, Drain Tee	1172255	1	1	1	1
)	Clamp, Tee Cap	1172256	1	1	1	1
)	Manual, Users	44102201100	1	1	1	1
)	Manual, Installation	44001202103	1	1	1	1

**Gas Conversion Kits - All models**

Nat to LP NAHA002LP (1172959\*)

LP to Nat NAHA002NG (1172961\*)

\* Must be ordered from Service Parts

# TECHNICAL SUPPORT

Specifications									
	*9MPV050F12		*9MPV075F12		*9MPV100J20		*9MPV125L20		
<b>General</b>									
Gas Type	Nat	L.P.	Nat	L.P.	Nat	L.P.	Nat	L.P.	
Transformer Size (VA)	40								
T'stat Heat Anticipator	.50								
Input (Btuh) Std/Alt.	Hi Fire	50,000	75,000	100,000	125,000				
	Lo Fire	35,000	52,500	70,000	87,500				
Output (Btuh) Std/Alt.	Hi Fire	46,000	70,000	93,000	118,000				
	Lo Fire	32,000	48,000	65,000	82,000				
Temp. Rise (°F)	Hi Fire	35-65	40-70	40-70	40-70				
	Lo Fire	35-65	40-70	40-70	40-70				
Electrical (Volts/Hz)	115/60		115/60		115/60		115/60		
Rating Plate Amps	9.5		11.4		14.6		15.4		
<b>Gas &amp; Ignition</b>									
Gas Type	Nat.	L.P.	Nat.	L.P.	Nat.	L.P.	Nat.	L.P.	
Std. Main Orifices (No/Size)	2/42	2/54	3/42	3/54	4/42	4/54	5/42	5/54	
Gas Valve Honeywell	VR8205Q	VR8205Q	VR8205Q	VR8205Q	VR8205Q	VR8205Q	VR8205Q	VR8205Q	
Regulation Type	SNAP	SNAP	SNAP	SNAP	SNAP	SNAP	SNAP	SNAP	
Manifold Press.	Hi Fire (" WC)	3.5	10.0	3.5	10.0	3.5	10.0	3.5	10.0
	Lo Fire (" WC)	1.7	4.9	1.7	4.9	1.7	4.9	1.7	4.9
Ignition Type	Hot Surface								
<b>Combustion</b>									
Flue Outlet Size (Inches)	2		2		3		3		
Std. Outlet Temp (° F)	<140		<140		<140		<140		
Comb. Blower (MFD/Volts)	4/370		4/370		4/370		4/370		
<b>@ Blower / @ Transition Box (Hi Fire)</b>									
Std. Pressures (" of WC)									
5' No Elbows	-1.80 / -2.60		-1.80 / -2.60		-1.80 / -2.60		-1.80 / -2.60		
40' +5-90° DWV Elbows	-1.30 / -2.30		-1.30 / -2.30		-1.70 / -2.50		-1.70 / -2.50		
<b>@ Blower / @ Transition Box (Lo Fire)</b>									
Std. Pressures (" of WC)									
5' No Elbows	-1.20 / -1.90		-1.20 / -1.90		-1.20 / -1.90		-1.30 / -2.30		
40' +5-90° DWV Elbows	-1.00 / -1.80		-1.00 / -1.80		-1.00 / -1.80		-1.20 / -2.20		
<b>Limits &amp; Controls</b>									
Rollout Switch (° F)	300		300		300		300		
Limit Control Setting (° F)	260		210		240		190		
Furnace Control (Type)	Integrated								
Furnace Control On	30 Hi /45 Lo								
(Timed-secs) Off	60,100,140,180								
Std. Pressure Sw. (Part No)	1013515		1013515		1013515		1013166		
(Hi Fire)Blwer Switch Press (Close)	0.95		0.95		0.95		1.30		
Blower Switch Pressure (Open)	0.80		0.80		0.80		1.10		
(Lo Fire)Trans Switch Press (Close)	1.70		1.70		1.70		1.80		
Transition Switch Pressure (Open)	1.50		1.50		1.50		1.60		
High Altitude Pressure Sw. (Part No)	1013165		1013165		1013165		1013157		
(Hi Fire)Blwer Switch Press (Close)	0.70		0.70		0.70		0.85		
Blower Switch Pressure (Open)	0.55		0.55		0.55		0.70		
(Lo Fire)Trans Switch Press (Close)	1.40		1.40		1.40		1.70		
Transition Switch Pressure (Open)	1.20		1.20		1.20		1.50		
<b>Blower Data</b>									
Type & Size	11-8		11-10		11-10		11-10		
Motor Amps/Rpm	9.8/1050		8.9		11.2/1150		11.2/1150		
Motor Type/H.p.	DC <sup>1</sup> /1/2		DC <sup>3</sup> /4		DC/1		DC/1		
Filter Type & Size (Permanent - supplied)	16x25x1		16x25x1		16x25x1		16x25x1 (2)		
Min. Cool Cap. (Tons)	1.5		1.5		2		2		
Max. Cool Cap. (Tons)	3		3		5		5		
<b>Gas Conversion Kits All Models</b>									
Nat to LP	NAHA002LP (1172959*)								
LP to Nat	NAHA002NG (1172961*)								
*Order from Service Parts									



# Circulation Air Blower Data - \*9MPV

## Heating, Cooling & Continuous Airflow Settings CFM (with filter \*)

Continuous Blower (CFM) @ 0.10" Static

Switch Settings		Furnace Model			
#1	#2	50K	75K	100K	125K
0*	0*	560	576	766	888
0	1	691	697	955	1008
1	0	819	825	1139	1195
1	1	948	931	1327	1373

\*Factory Setting

Hi Heat Air Temperature Adjustment (° F)\*\*

Switch Settings			Furnace Model			
#3	#4	#5	50K	75K	100K	125K
0*	0*	0*	0	0	0	0
0	0	1	+6	+3	+4	+5
0	1	0	+6	+3	+4	+5
0	1	1	+14	+6	+9	+12
1	0	0	+17	+11	+12	+13
1	0	1	-7	-4	-2	-3
1	1	0	-10	-6	-6	-6
1	1	1	-15	-4	-9	-5

\*Factory setting

\*\*Approximate air temperature change from factory setting @ 0.20" static on high heat.

Lo Heat Air Temperature Adjustment (° F)\*\*

Switch Settings			Furnace Model			
#3	#4	#5	50K	75K	100K	125K
0*	0*	0*	0	0	0	0
0	0	1	+4	+2	+1	+8
0	1	0	+4	+2	+1	+8
0	1	1	+10	+5	+5	+14
1	0	0	+13	+7	+8	+17
1	0	1	-5	-4	-3	-3
1	1	0	-8	-6	-7	-6
1	1	1	-16	-9	-11	-6

\*Factory setting

\*\*Approximate air temperature change from factory setting @ 0.20" static on high heat.

Cooling (CFM) @ 0.50" Static (1)


Switch Settings			Furnace Model			
#6	#7	#8	50K	75K	100K	125K
0*	0*	0*	1212	1392	2093	2082
0	0	1	1117	1197	1872	1829
0	1	0	1015	1104	1702	1798
0	1	1	914	1012	1541	1728
1	0	0	836	924	1305	1530
1	0	1	743	827	1063	1304
1	1	0	670	677	857	1103
1	1	1	593	572	751	893

NOTE: (1) Data based on Bottom Only or One Side return.

Filter required for each return-air inlet. Airflow performance includes 1" washable (600 FPM max) filter media.

\*Factory setting

MAX CFM's	
Filter Size	CFM
14" X 25"	1400
16" X 25"	1600
20" X 25"	2000
24" X 25"	2500
Max CFM based on 600 FPM	

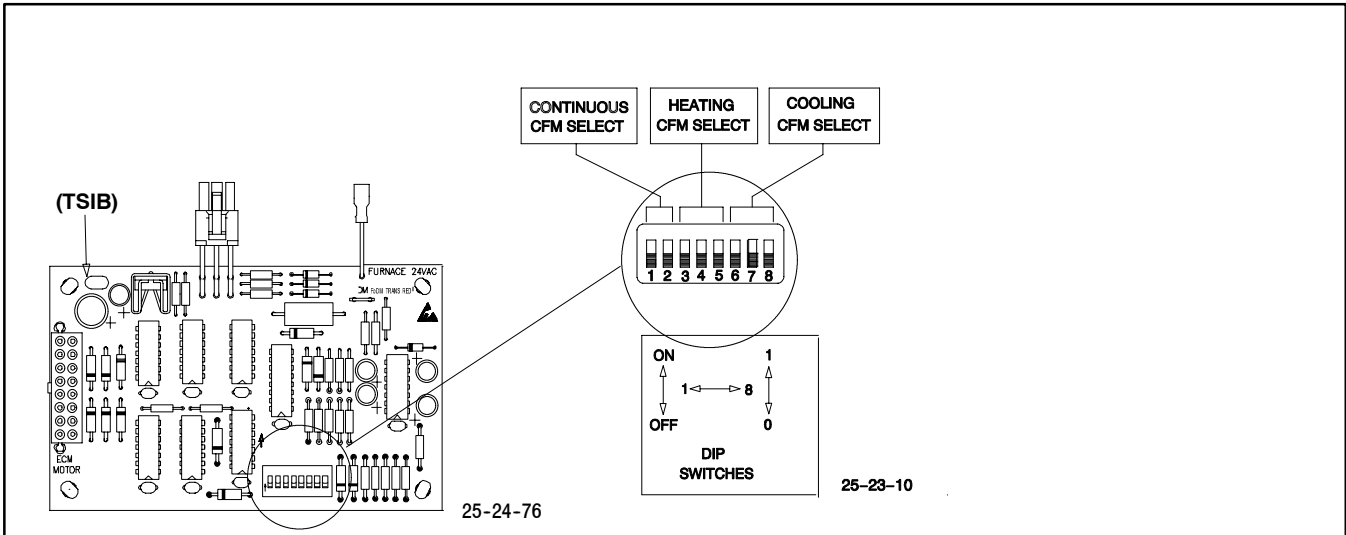

# Circulation Air Blower Data - \*9MPV

## Cooling Airflow Settings

Figure 1


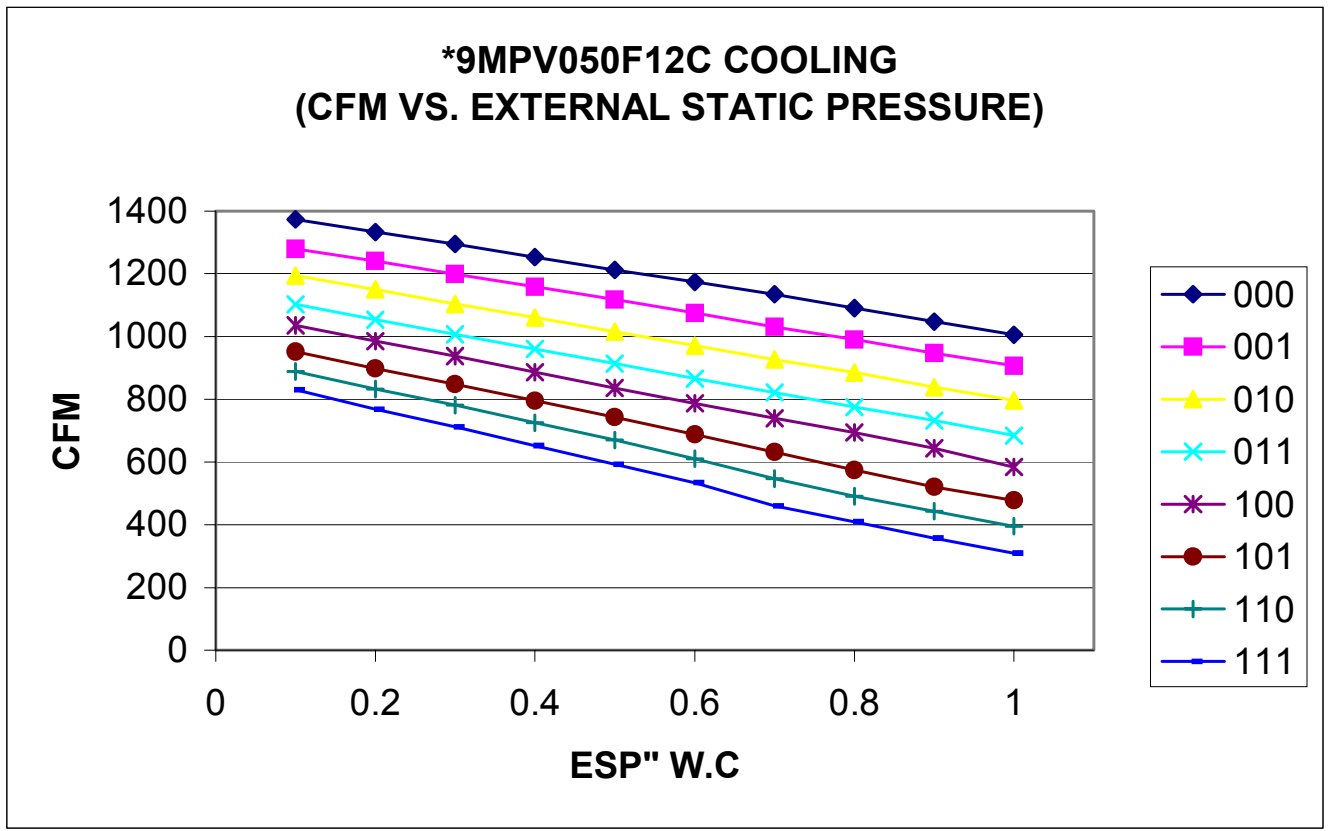


Figure 2

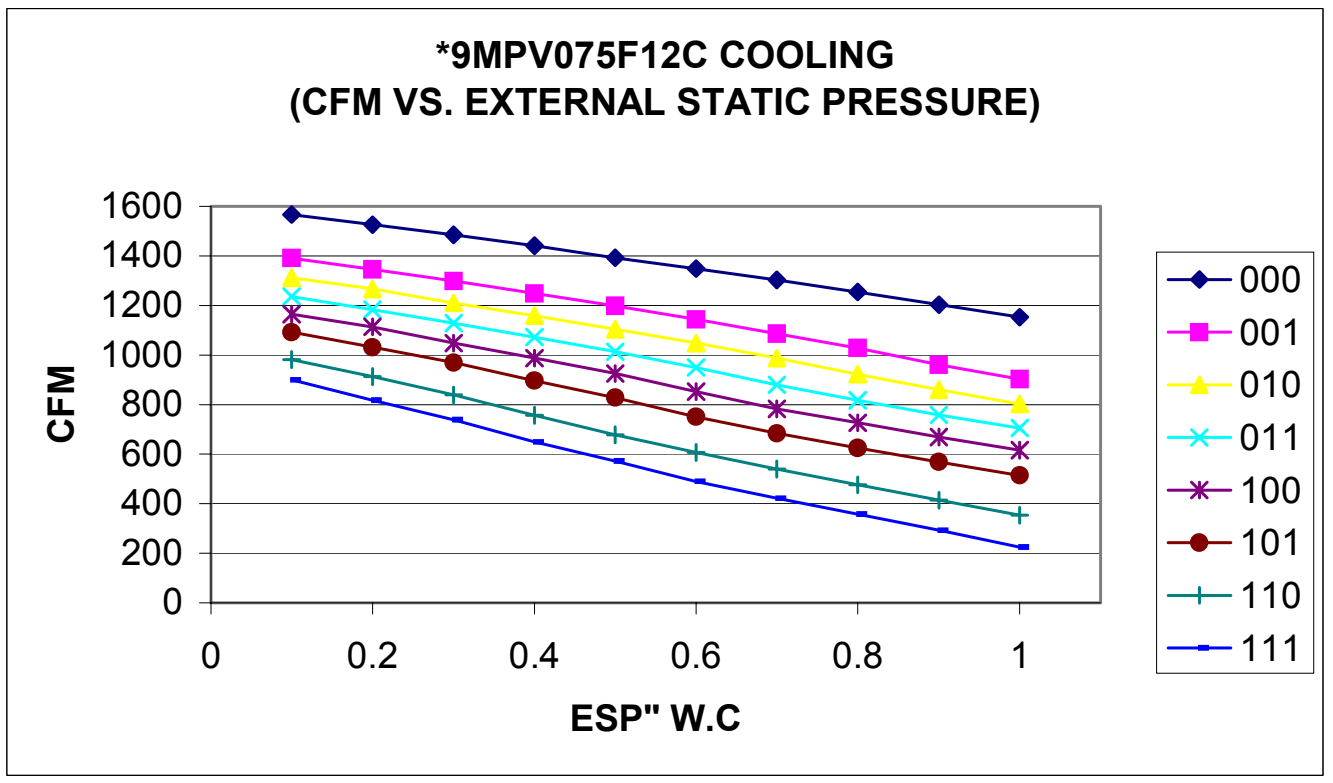

# Circulation Air Blower Data - \*9MPV

## Cooling Airflow Settings

Figure 3


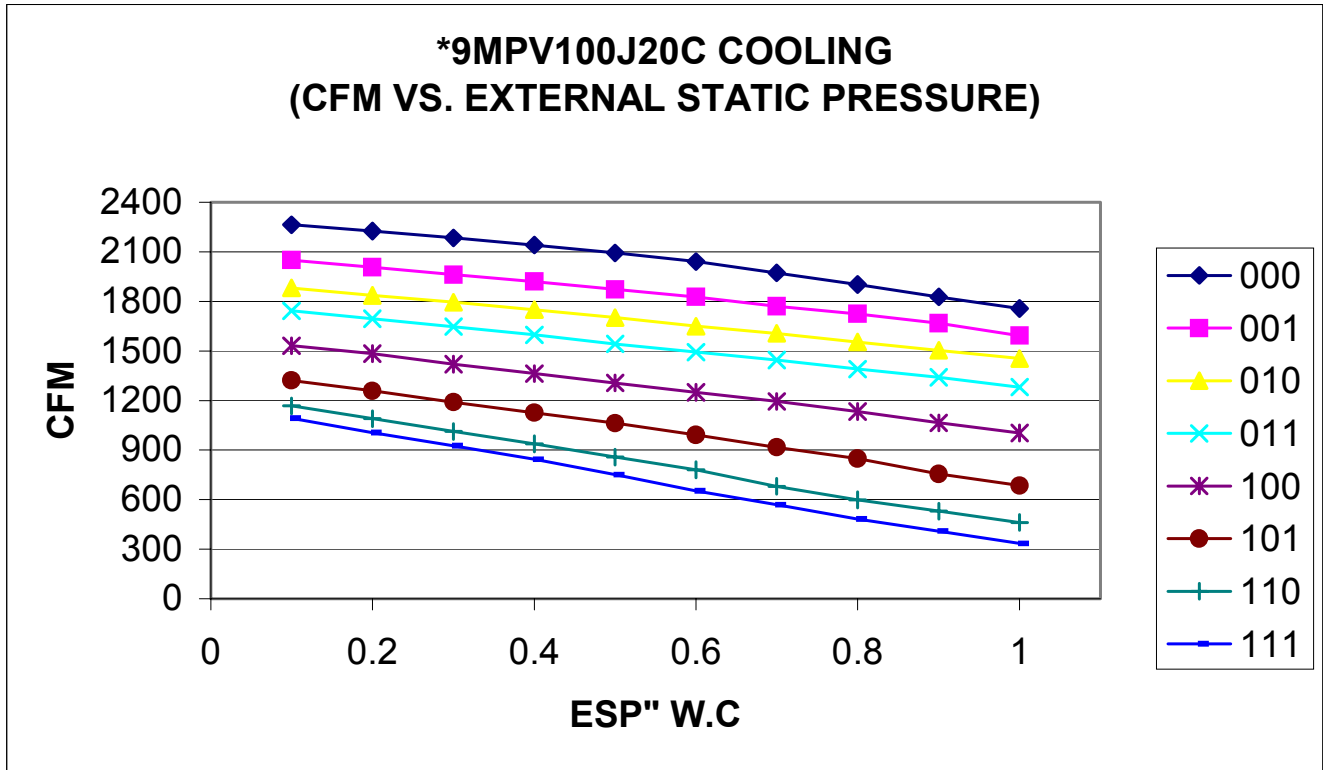



Figure 4



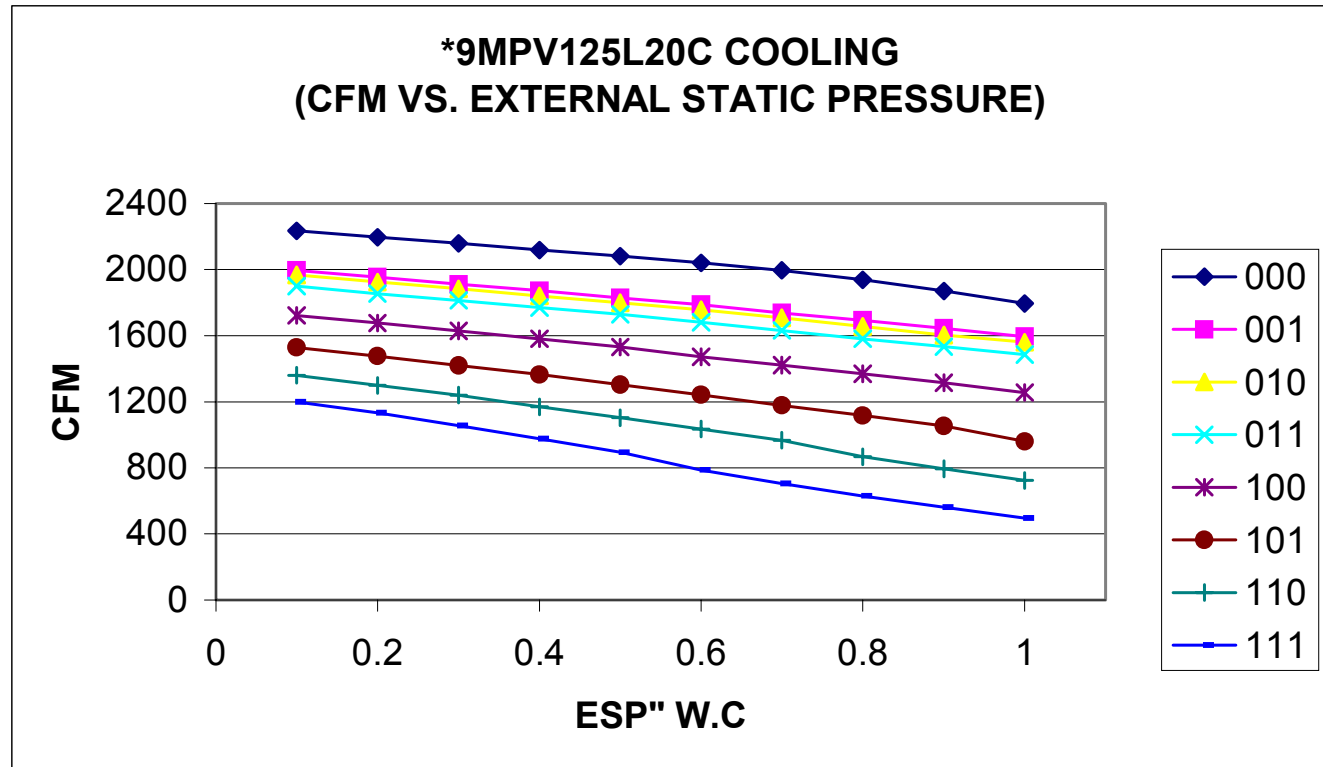

# 16. (\*9MPV)

Representative drawing only, some models may vary in appearance.

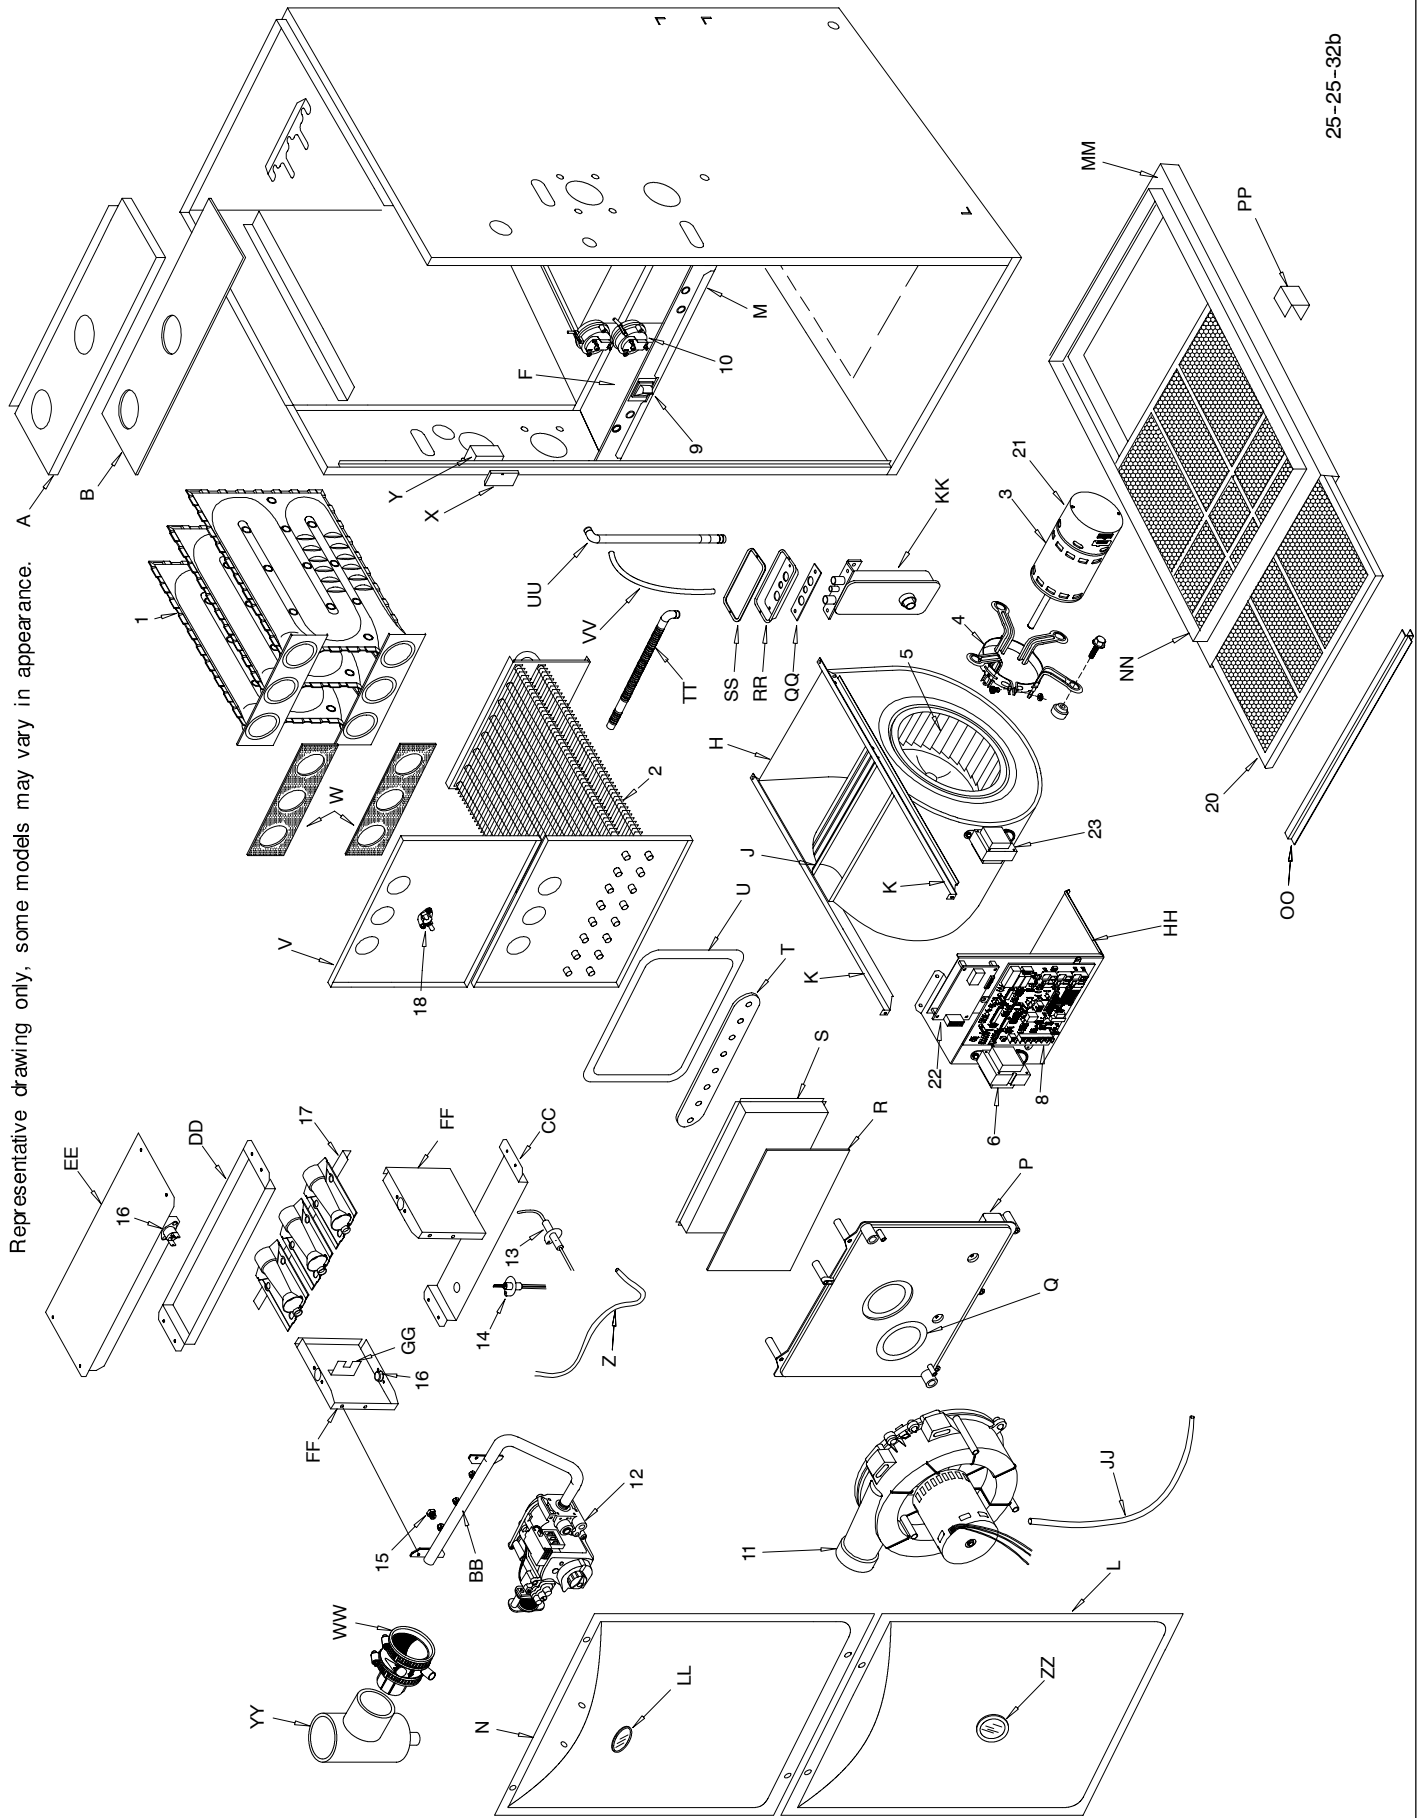

25-25-32b

# Replacement Parts - \*9MPV

**Models - \*9MPV050F12C1, \*9MPV075F12C1, \*9MPV100J20C1 & \*9MPV125L20C1 (Natural Gas)**


**Replacement part supplied will be current active part. For parts not listed, consult place of purchase.**

Key No.	Description Functional	Part Number	*9MPV			
			050 F12	075 F12	100 J20	125 L20
1	Heat Exchanger, Primary	1012850	1	-	-	-
		1012854	-	1	-	-
		1012858	-	-	1	-
		1012862	-	-	-	1
2	Ht Exchanger, Secondary	1013762	1	-	-	-
		1013763	-	1	-	-
		1013765	-	-	1	-
		1013767	-	-	-	1
3	Motor, Blower	1172828	1	-	-	-
		1172829	-	1	1	1
4	Mount, Motor kit*	1014822	1	1	1	1
5	Wheel, Blower	1013011	1	-	-	-
		1172129	-	1	1	1
6	Transformer	1172810	1	1	1	1
8	Control	1172809	1	1	1	1
9	Switch, Interlock	1171981	1	1	1	1
10	Switch, Pressure	1013166	-	-	-	1
		1013515	1	1	1	-
11	Blower, Exhaust	1172825	1	1	1	-
		1172826	-	-	-	1
12	Valve, Gas Nat. 2 Stg	1172822	1	1	1	1
13	Flame Sensor	1172827	1	1	1	1
14	Igniter	1172533	1	1	1	1
15	Orifice, Burner #42 Nat.	1011351	2	3	4	5
16	Switch, Limit (Rollout)	1013102	2	2	2	2
17	Burner Assembly	1172884	1	-	-	-
		1172965	-	1	-	-
		1172966	-	-	1	-
		1172967	-	-	-	1
18	Switch, Limit (Main)	1320366	1	-	-	-
		34335001	-	1	-	-
		1320367	-	-	1	-
		1008445	-	-	-	1
20	Filter, HH 16X25X1/2"	1010365	1	1	2	2
21	Control, Motor Variable Spd	1172831	1	-	-	-
		1172833	-	1	-	-
		1172835	-	-	1	-
		1172837	-	-	-	1
22	Board, Tap Select Interface	1172839	1	1	1	1
		1172838	-	-	1	1

Key No.	Description	Part Number	*9MPV			
			050 F12	075 F12	100 J20	125 L20
A	Panel, Top	1012866	1	1	-	-
		1012867	-	-	1	-
		1012868	-	-	-	1
B	Gasket, Top Panel	1012603	1	1	-	-
		1012604	-	-	1	-
		1012605	-	-	-	1
F	Partition, Blower	1172008	1	-	-	-
		1172005	-	1	-	-
		1172006	-	-	1	-
		1172007	-	-	-	1
H	Housing, Blower	1172885	1	-	-	-
		1172969	-	1	1	1
J	Panel, Blower Cutoff	721020013	1	-	-	-
		721020008	-	1	1	1
K	Hanger, Blower	1012328	2	2	2	2
L	Door, Blwer (Cmaker only) (Cmaker only) (Cmaker only) (Heil only) (Heil only) (Heil only) (Tstar only) (Tstar only) (Tstar only)	1173055	1	1	-	-
		1173058	-	-	1	-
		1173074	-	-	-	1
		1173056	1	1	-	-
		1173059	-	-	1	-
		1173077	-	-	-	1
		1173057	1	1	-	-
		1173060	-	-	1	-
1173081	-	-	-	1		
M	Bracket Asy., Door Filler	1172232	1	1	-	-
		1172233	-	-	1	-
		1172234	-	-	-	1
N	Door, Front (Cmaker only) (Cmaker only) (Cmaker only) (Heil only) (Heil only) (Heil only) (Tstar only) (Tstar only) (Tstar only)	1013148	1	1	-	-
		1013149	-	-	1	-
		1013150	-	-	-	1
		1013145	1	1	-	-
		1013146	-	-	1	-
		1013147	-	-	-	1
		1173086	1	1	-	-
		1173087	-	-	1	-
1173088	-	-	-	1		
P	Transition Assembly	1012228	1	1	-	-
		1012229	-	-	1	-
		1012230	-	-	-	1
Q	Gasket, Exhaust Blower	1014425	1	1	1	1
R	Board, Insulating	1012418	1	1	-	-
		1012419	-	-	1	-
		1012420	-	-	-	1
S	Box, Collector	1012244	1	1	-	-
		1012245	-	-	1	-
		1012246	-	-	-	1
T	Gasket, Transition	1013263	1	-	-	-
		1013080	-	1	-	-
		1013083	-	-	1	-
		1013084	-	-	-	1
U	Gasket, Collector Box	1012594	1	1	-	-
		1012595	-	-	1	-
		1012596	-	-	-	1

\*See Table below for bellyband location on motor

Bellyband Location on Motor	
Model *9MPV	A(in.)
050F12	1 <sup>3</sup> / <sub>8</sub> "
075F12	2 <sup>7</sup> / <sub>8</sub> "
100J20	2 <sup>7</sup> / <sub>8</sub> "
125L20	2 <sup>7</sup> / <sub>8</sub> "

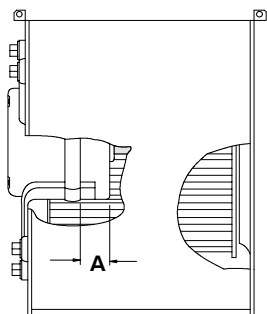

# Replacement Parts - \*9MPV

**Models - \*9MPV050F12C1, \*9MPV075F12C1, \*9MPV100J20C1 & \*9MPV125L20C1 (Natural Gas)**

**Replacement part supplied will be current active part. For parts not listed, consult place of purchase.**

Key No.	Description	Part Number	*9MPV				Key No.	Description	Part Number	*9MPV			
			050 F12	075 F12	100 J20	125 L20				050 F12	075 F12	100 J20	125 L20
V	Partition, Front Ht Exchger	1012650	1	-	-	-	(	<b>PART NOT ILLUSTRATED</b>					
		1012648	-	1	-	-	(	Door Screws	1014488	4	4	4	4
		1012651	-	-	1	-	(	Door Screw Grommets	1171990	4	4	4	4
		1012653	-	-	-	1	(	Coupling, Air Intake	1002284	1	1	1	1
W	Gasket, Attachment Plate	1012542	2	-	-	-	(	Gasket, Air Intake	1012583	1	1	1	1
		1012543	-	2	-	-	(	Clamp, Hose 5/8"	1012975	4	4	4	4
		1012544	-	-	2	-	(	Clamp, Hose 3/4"	1012976	2	2	2	2
		1012545	-	-	-	2	(	Coupling, Discharge	1002522	1	1	1	1
X	Cover, Junction Box	1012350	1	1	1	1	(	Clamp Hose	1013830	2	2	2	2
Y	Box, Junction	1172860	1	1	1	1	(	Grommet, Vent	1012697	1	1	1	1
BB	Manifold	1012970	1	-	-	-	(	Bushing, Strain Relief	1945287	1	1	1	1
		1012971	-	1	-	-	(	Grommet, Vinyl (Gas Inlet)	1009535	1	1	1	1
		1012278	-	-	1	-	(	Harness, Wire	1172818	1	1	1	1
		1012279	-	-	-	1	(	Trap, Drain Tee	1171916	1	1	1	1
CC	Bottom, Burner Box	1172847	1	-	-	-	(	Tube, Drain 1/2" ID Drain	1171991	1	1	1	1
		1172848	-	1	-	-	(	Tube, 1/2" Elbow	1171992	2	2	2	2
		1172849	-	-	1	-	(	Coupling, 1/2" Barbed	1171993	1	1	1	1
		1172850	-	-	-	1	(	Tubing, 5/8" ID Drain	1171994	1	1	1	1
DD	Baffle, Burner Box	1012338	1	1	-	-	(	Connector, 3/4" X 1/2"	1171995	1	1	1	1
		1012339	-	-	1	-	(	Elbow, 1/2" CPVC street	1171996	1	1	1	1
		1012340	-	-	-	1	(	Grommet, Casing	1171997	1	1	1	1
EE	Top, Burner Box	1013702	1	1	-	-	(	Tube, Relief Ext.	1172239	1	1	1	1
		1013703	-	-	1	-	(	Connector, Relief Tube	1171998	1	1	1	1
		1013704	-	-	-	1	(	Plate, Cover	1171999	1	1	1	1
FF	Bracket, Manifold Support	1012377	2	2	2	2	(	Gasket, Cover Plate	1172000	1	1	1	1
GG	Bracket, Burner Box Side	1012532	2	2	2	2	(	Cap, Drain Tee	1172255	1	1	1	1
HH	Bracket, Control Mounting	1172845	1	1	1	1	(	Clamp, Tee Cap	1172256	1	1	1	1
JJ	Tube, Sensor	1172238	1	1	1	1	(	Manual, Users	44102201100	1	1	1	1
		1172241	1	1	1	1	(	Manual, Installation	44001202103	1	1	1	1
KK	Trap, Drain Assembly	1171917	1	1	1	1	<b>Gas Conversion Kits - All models</b> Nat to LP NAHA002LP (1172959*) LP to Nat NAHA002NG (1172961*) * Must be ordered from Service Parts						
LL	Sightglass (Tstar only)	1013235	1	1	1	1							
MM	Wrapper, Filter Rack	741010039	1	1	2	2							
NN	Front, Filter Rack	741020001	1	1	2	2							
OO	Cover, Filter	2791043	1	1	2	2							
PP	Clip, Filter	1008482	3	3	3	3							
QQ	Gasket, Trap	1013701	1	1	1	1							
RR	Bracket, Trap	1171986	1	1	1	1							
SS	Gasket, Trap Bracket	1171987	1	1	1	1							
TT	Tube, Drain Coll. Box 5/8" ID	1172445	1	1	1	1							
UU	Tube, Drain Tee 1/2" ID	1171989	1	1	1	1							
VV	Tube, Relief	1172012	1	1	1	1							
WW	Drain Vent	1014003	1	1	1	1							
YY	Tee, Drain	1171915	1	1	1	1							
ZZ	Sightglass	1172768	1	1	1	1							